

Belaria® pro (20,25)
Modulating air/water heat pump

Hoval

Operating Instructions

Subject to modifications

4 223 018 / 00 - 12/25

EN



1.	Important information	4
1.1	Important addresses and telephone numbers.....	6
1.2	System data	6
2.	Safety	7
2.1	General safety instructions.....	7
2.2	Intended use	7
2.3	Explanation of the symbols	8
2.3.1	Warnings	8
2.3.2	Warning symbols.....	8
2.3.3	Information.....	8
2.3.4	Prohibitions.....	8
3.	Functional principle of the heating system	9
3.1	Construction of the plant	9
4.	Control panel on heat generator	11
4.1	Overview of control panel	11
5.	Heating system control	12
5.1	Function of the TopTronic® E control	12
5.2	Operating and display elements	12
5.3	What to do if...	14
5.4	Efficient control of the system.....	15
5.5	Individual day and week programs	16
5.6	Start screen	17
5.6.1	Elements of the start screen heat generator and living area	18
5.6.2	Optional start screen.....	20
5.7	Main settings	22
5.7.1	Changing the room temperature.....	22
5.7.2	Adapt hot water temperature	23
5.7.3	Select heating circuit (if there are several)	24
5.7.4	Change the basic program (heating circuit)	24
5.7.5	Change active day program (heating circuit)	25
5.7.6	Change basic and day program (hot water).....	26
5.7.7	Call up system information.....	28
5.7.8	Joint operation for heating and domestic hot water circuits.....	28
5.8	Basic programs	29
5.8.1	Functions of the various basic programs	29
5.8.2	“Holiday” – enter return date	30
5.9	Week programs.....	32
5.9.1	Week program default settings.....	32
5.9.2	Notes on personal week programs	33
5.9.3	Week program operating elements.....	34
5.9.4	Adapt week program	35
5.9.5	Rename week program	37
5.9.6	Reset week program	39
5.10	Day programs / switching cycles.....	41
5.10.1	Default settings for day programs / switching cycles.....	41
5.10.2	Notes on personal day programs.....	42
5.10.3	Party and absent	43
5.10.4	Day program / switching cycles operating elements	45
5.10.5	Change room temperatures and switching cycles in the day program	46
5.10.6	Rename day program.....	48
5.10.7	Reset day program	50


5.11	Hot water	52
5.11.1	Hot water operating elements.....	52
5.11.2	Week programs – hot water	53
5.11.3	Week program default settings – hot water.....	53
5.11.4	Day programs / switching cycles for hot water.....	54
5.11.5	Default settings for day programs / switching cycles – hot water	54
5.11.6	Legionella function.....	55
5.11.7	Recharging hot water.....	56
5.11.8	Set hot water program to absent.....	57
5.12	Other operating elements	59
5.12.1	Main menu view 1	59
5.12.2	Main menu view 2	60
5.12.3	Main menu view 3	61
5.12.4	Power station.....	62
5.12.5	Power station.....	63
5.12.6	Programs.....	64
5.12.7	Heating circuit.....	65
5.12.8	Info	66
5.12.9	Analysis.....	67
5.12.10	Emission – only for heating specialist.....	68
5.12.11	Manual operation	69
5.12.12	Presentation 1.....	70
5.12.13	Presentation 2.....	71
5.12.14	Presentation 3.....	72
5.13	Further settings	73
5.13.1	Set/change WiFi password.....	73
5.13.2	Setting the language.....	73
5.13.3	Adapt start screen individually.....	73
5.13.4	Rename heating circuit	73
6.	Cooling system control (optional)	74
6.1	Setting day program/switching cycles	74
7.	Alarm messages	75
7.1	Display alarm message	75
7.2	Instructions in the event of faults.....	76
7.3	Resetting the faults	76
8.	Maintenance and inspection (heating system)	77
8.1	Check the operating pressure.....	77
8.2	Replenishing replacement water	77
9.	Saving energy	78
9.1	Specific steps for saving energy	78
10.	Disposal	79
10.1	Notes on environmental protection	79

Dear Customer,

With the purchase of this system you have made a decision for a modern and economical heating system. Continuous quality control and enhancements, as well as function tests in the factory, guarantee a technically flawless device.

Please carefully read these documents. They contain important information for the safe and thrifty operation of the system.

1. Important information

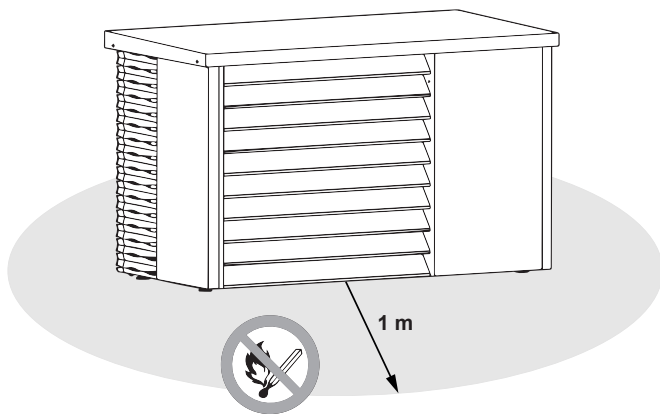

WARNING

The outdoor unit is filled with the non-toxic, odourless and colourless but inflammable refrigerant R290 (propane), which is heavier than air. If this occurs, there is a danger of fire/explosion. Therefore, all potential sources of ignition must be kept at least 1 m away in all directions. Smoking and the use of naked flames is prohibited in this area.

Drying out buildings or heating screed

The heat generator is not designed for the increased heat requirement necessary for drying out buildings or heating screed. At heating return temperatures of less than +18 °C the compressor is switched off for safety reasons. Drying of the building must be done with other devices to be provided on-site.

Installation room

- The indoor unit must be set up in a room which is protected against frost.
- The room temperature must be between 5 °C and 25 °C
- Installation in wet and damp rooms, dusty rooms or rooms with a potentially explosive atmosphere is not permitted

Installation location of the outdoor unit



NOTICE

Use in potentially explosive areas or in potentially explosive atmospheres is prohibited.

Rime outdoor unit

Depending on weather conditions and outside air humidity, ice may form on the protective grilles of the outdoor unit. This is a frequently occurring effect in nature and is referred to as rime. This rime must be removed by the operator during these cold spells.



NOTICE

Under no circumstances is the outdoor unit allowed to be drilled into, flame-cut or exposed to other mechanically damaging external influences.

Checking the water pressure

Check the water pressure in the system at regular intervals, as described in chapter 8.1 page 77.

Sound emissions

The heat generator runs exceptionally smoothly, thanks to its engineering design. Nevertheless, it is important that the boiler room is located as far away as possible from noise-sensitive living quarters and closed off with a tightly sealing door.

Service and maintenance

Regularly scheduled maintenance and the examination and care of all important system parts ensures safe and thrifty system operation in the long run. We therefore recommend concluding a maintenance contract with Hoval Customer Service for this purpose.

§ An annual check and maintenance of the installation by customer service is recommended, particularly in respect of preserving any claims under guarantee.
 A regular leak test for the heat generator according to Regulation (EU) 2024/573:2024 on fluorinated greenhouse gases is not a mandatory requirement, but is recommended.

§ In Switzerland and the Principality of Liechtenstein, according to the ChemRRV ordinance, a leak check must be carried out regularly for plants with > 3 kg of refrigerant.

Cleaning

If necessary, the heat generator can be cleaned with a damp cloth. The use of cleansing agents is not recommended. Unobstructed air supply/removal must be ensured. Regular inspection and, if necessary, cleaning (leaves, snow, etc.) is required.

1.1 Important addresses and telephone numbers

Heating specialist

.....
.....

Plumber:

.....
.....

Electrician:

.....
.....

1.2 System data

To be completed by the heating engineer!

Order no. / Serial number:

Heat pump type:

Hot water buffer storage tank size (if present):

Calorifier:

According to EU regulation No. 2024/573, the system operator must have carried out an annual leak check by a specialist: Yes No

Cooling possible Yes No

Legionella function activated: Yes No

Room control module present: Yes No

Integrated room sensor activated: Yes No

Calculation basis


Heat energy demand (kW):

Lowest design outdoor temperature (°C):

Max. flow temperature (°C):

2. Safety

2.1 General safety instructions

 Installation and maintenance work can – due to the high system pressures, high temperatures and live electrical parts – be associated with hazards and may only be performed by specialists. Heat generators may only be installed by capable specialists and only put into operation by customer service personnel that have been specially trained by Hoval for this purpose. The power supply to the system should be switched off when work is being performed on the heat generator and safeguarded to prevent it being switched back on inadvertently. Moreover, all safety instructions in the respective documents, as well as on stickers on the heat generator itself and in other applicable safety regulations, must be observed.



WARNING

Behaviour in case of danger

Disconnect the electrical power supply.

Disconnecting the electrical power supply

The heat generator can only be completely deenergised by disconnection from the mains (e.g. all-pole switch). The power supply to the heating system should be switched off when work is being performed and safeguarded to prevent it being switched back on inadvertently.



WARNING

Installation of additional components

The installation of additional components which have not been tested as a part of the system can cause functional impairment. Hoval will assume no warranty or liability coverage for any resultant damages.



WARNING

The outdoor unit is filled with the non-toxic, odourless and colourless but inflammable refrigerant R290 (propane), which is heavier than air. If this occurs, there is a danger of fire/explosion. Therefore, all potential sources of ignition must be kept at least 1 m away in all directions. Smoking and the use of naked flames is prohibited in this area.

2.2 Intended use

The heat generator is exclusively intended for heating and cooling water.

The heat or cold produced must be carried away by the water.

Only use the heat generator if in perfect technical condition, as well as according to the intended use, safely and with regard to potential dangers!

The inspection and cleaning intervals stated in the documents must be complied with. Malfunctions that could impair safety must be rectified immediately!

The manufacturer/supplier will not accept any liability for any other use, or use beyond the scope of these definitions, and any resulting damage.

2.3 Explanation of the symbols

2.3.1 Warnings



DANGER

... indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

... indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

... indicates a possible hazardous situation which, if not avoided, could result in a minor or moderate injury.



NOTICE

... indicates a possible risk situation which, if not avoided, could result in property damage.

2.3.2 Warning symbols

The following warning signs are combined for the warning notes with signal words CAUTION, WARNING and DANGER.



General warning of a danger zone.



"Warning: dangerous electrical voltage" as a warning for accident prevention. Ensures that people do not come into contact with electrical voltage. The danger sign with the black lightning symbol warns against the danger of electrical voltage.



Warning symbol "Warning of flammable substances" Incorrect handling of flammable substances can lead to serious damage, potentially fatal injuries and incalculable costs.

2.3.3 Information



Information: Provides important information.



Provides important information. Refers to standards and directives.



Recycling involves the reuse of waste products and/or their precursors as secondary raw materials.

ENERGY



Energy-saving tip: Provides information about saving energy.

2.3.4 Prohibitions




Exclude ignition sources (e.g. naked flames, cigarettes, tools that can strike sparks, surfaces with high temperatures).







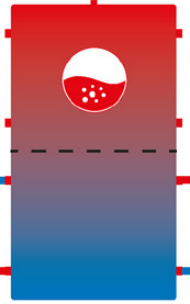

3. Functional principle of the heating system

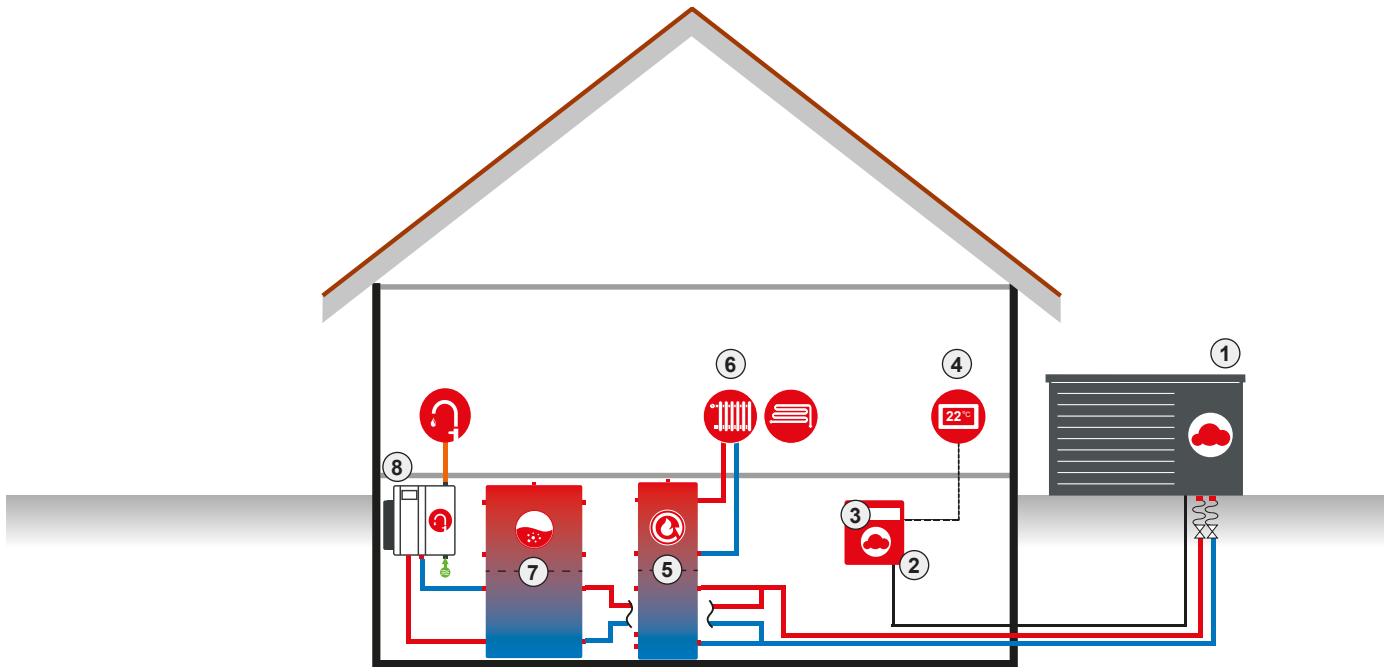3.1 Construction of the plant

Depending on the type of heating system selected, some of the components might be different from the presentation below. The heating specialist will explain the system to you.




The heating water heated by the heat generator is supplied to the radiators or is used to heat up the hot water (calorifier).

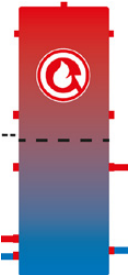Figure	Components	Function / description
	<p>Air/water heat pump Outdoor unit</p>	<p>Heat is extracted from the ambient air and used for heating.</p>
	<p>Electrical box</p>	<p>Controls and monitors the operation of the heat generator.</p>
	<p>Control panel / Control module</p>	<p>Controls and monitors the operation of the heat generator. Maintains the desired room temperature optimally and energy-efficiently, independent of the outdoor temperature.</p>
	<p>TopTronic® E room control module</p>	<p>The TopTronic® E room control module enables control and monitoring of the heating operation.</p>
	<p>Energy buffer storage tank</p>	<p>The buffer storage tank serves as an intermediate storage tank for the surplus energy until the heat is required in the building.</p>
	<p>Radiator, underfloor heating</p>	<p>Releases the heat of the heating water into the room.</p>
	<p>Energy buffer storage tank</p>	<p>The buffer storage tank serves as an intermediate storage tank for the surplus energy until the heat is required for domestic water heating.</p>
	<p>Fresh water module</p>	<p>Domestic hot water heating in the continuous flow principle.</p>


4. Control panel on heat generator

4.1 Overview of control panel

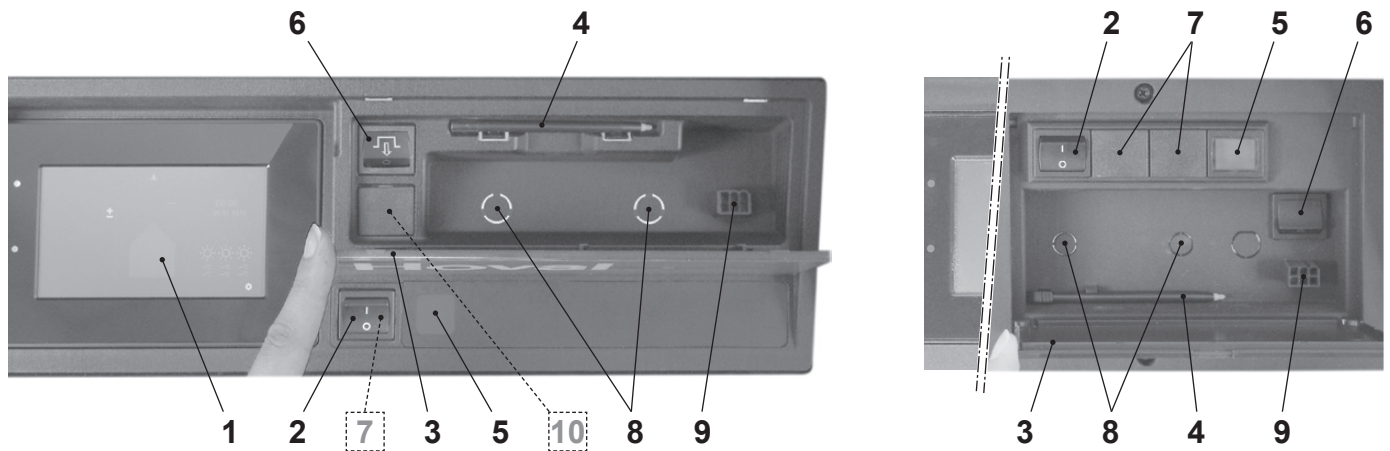


No.	Designation	Function
1	TopTronic® E control module	Used as operator terminal for the plant that can be operated by touching with the finger or stylus (no. 4). For a detailed description of the elements, see chapter 5.6.1 page 18.
2	Blocking switch	1 = ON Heat generator in operation 0 = OFF Heat generator not in operation (plant live; no frost protection)
3	Flap	To protect the folding compartment with stylus (no. 4), reset button (no. 6) and service plug (no. 9). Safety temperature limiter optional (no. 8)
4	Stylus	Stylus for operating the control module
5	Fault lamp	Lights up if there is a heat generator fault.
6	Reset button	Used for resetting if the failure indication lamp lights up. <div style="border: 1px solid gray; padding: 5px; display: inline-block;"> The reset button is allowed to be pressed once at most. If the failure indication lamp continues to be lit, please contact Hoval Customer Service. </div>

Optional:

7	Bivalent switch (optional)		Used for switching priority in plants with several heat generators or for other plant-specific switching functions.ww
8	Additional safety temperature limiter (optional)		Optional installation of an additional safety temperature limiter. Used for interrupting the heat generator if a set temperature is exceeded.
9	Service plug		Used exclusively by the service technician.

Only available for specific heat pumps:

10	Mains isolator switch		Below the reset button, there is a mains isolator switch with which the heat pump can be completely disconnected from the electrical power supply.
----	------------------------------	---	--

5. Heating system control

5.1 Function of the TopTronic® E control

The TopTronic® E control module is used for controlling your heating system. Using the touch-sensitive screen (referred to below as touchscreen), you can make various settings on your system at the touch of a fingertip or using the stylus.



NOTICE

The surface of the TopTronic® E control module is not allowed to be touched with sharp or pointed objects for operation – risk of scratching.

The control module has the following functions:

- Maintaining the desired room temperature independent of the outside temperature
- Heating the living space only when required
- Producing hot water only when required
- Displaying information about the system

Further functions:

- Making it possible to set the desired temperatures and select a basic program (chapter 5.8 page 29)
- Turning the heat generator ON/OFF
- Monitoring temperatures

All the basic settings will have already been carried out by Hoval, or the heating engineer, during commissioning of the heating system. You can make further settings if you go on a journey or if your home is too cold or too warm. You can find an overview of the most frequently asked questions in chapter 5.3 page 14.



How to save energy!

For your benefit and for the environment

Using energy more efficiently by avoiding unnecessary losses! With little effort, you can optimise the operation of your heating system and save energy at the same time.

It is worth setting your personal day and week programs

You can save valuable energy and money by specifically adjusting the heating times with a personal day or week program to take account of the times when you will be present and absent. The TopTronic® E control makes it very simple to set different switching cycles for individual daily sequences (chapter 5.9 page 32).

5.2 Operating and display elements

The graphical displays on the control module can be operating or display elements.




If the TopTronic® E control module is in sleep mode, it can be “woken up” by touching the touchscreen. Sleep mode and the duration until the mode starts can be adjusted (chapter 5.12.13 page 71, nos. 3 and 4).

Operating elements




Operating elements are understood to be the buttons on the control module that can be selected by touching in order to adjust various settings. The operating elements are shown in white on a black background or in black on a white background. Values that can be changed with plus (+) or minus (–) can be touched directly. As a result, a keypad appears on the control module which helps you to make the entry.

Display elements

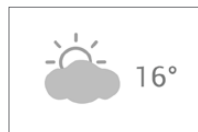

Display elements only provide information and cannot be selected. They are shown in colour.

Room temperature – coloured marking

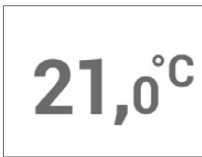

The room temperature on the start screen is shown in three different colours. The colours have the following meaning:


Colour	Meaning
Orange	Heating Heating operation active. The room is heated to the desired room temperature.
Blue	Cooling (optional: for heat pumps only) Cooling operation active. The room is cooled to the desired room temperature.
Grey	Inactive Heating/cooling operation inactive.

LED operating status

An LED indicator is additionally attached on the left of the control module. This displays the operating status and can light up in the following three colours:

Colour	Meaning
Green	Correct operation General information or warnings may be displayed on the control module. You as the customer do not need to do anything, however! Heating operation is continued.
Orange	Blocking The heat generator has been temporarily blocked because of an error. Contact Hoval customer service if the blocking leads to inadvertent cooling down of the heating system.
Red	Locking The heat generator sent a critical error and has been locked for safety reasons. The heat generator cannot continue to operate. Contact Hoval customer service!

LED indicator

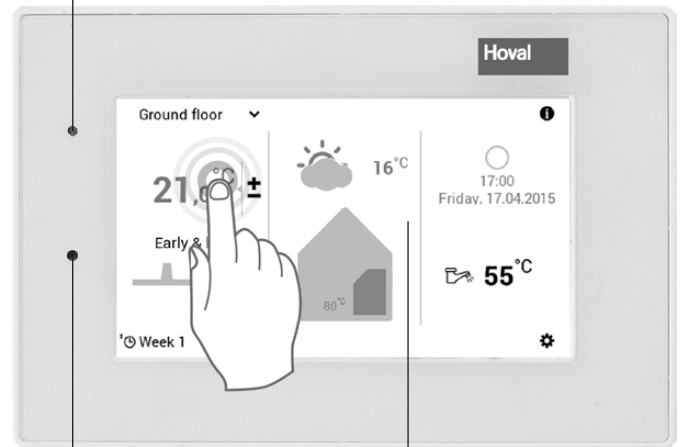


Brightness sensor

Touchscreen

5.3 What to do if...

The following information can be used as a first level support in frequently occurring situations.


Observation	Remedy	Chapter / page
It is too cold.	Select Room temperature on the start screen and press the plus (+) button to increase the room temperature.	5.7.1 page 22
It is too warm.	Select Room temperature on the start screen and press the minus (-) button to reduce the room temperature.	5.7.1 page 22
From now on, equal day and night temperatures should be maintained continuously.	Select Basic programs on the start screen and choose the Constant basic program. Set the desired room temperature.	5.7.4 page 24
This evening, the heating should remain on for longer.	Select Day programs on the start screen. Under "Select day program", set Party and enter the duration and room temperature.	5.10.3 page 43
A larger amount of hot water is required.	Select DHW temperature (tap icon) on the start screen and press the plus (+) button to increase the water temperature. If necessary, recharge domestic hot water ("Recharging").	5.7.2 page 23 / 5.11.7 page 56
	 You can also access the function for setting the water temperature using Main menu (⚙) > Hot water .	
From now on, hot water but no heating is required.	Set Heating circ. to Standby basic program and Hot water to the required basic program . Heating operation OFF, hot water ON.	5.7.4 page 24
Suddenly, there is no heating or hot water; it is cold.	Check the control module for alarm messages and consult a heating engineer, if necessary. Check if there is still sufficient fuel/Electricity available, if necessary.	Alarm messages chapter
I will be absent for several hours during the day today.	Select Day programs (e.g. all day) on the start screen. Under "Select day program", set another day program or Absent (enter the duration and room temperature).	5.7.5 page 25 / 5.10.3 page 43
I am travelling for a certain period of time (e.g. two weeks).	Select Basic programs on the start screen and choose the Holiday basic program. Set return date minus at least 1 day.	5.8.2 page 30
I am going away for an indefinite period of time.	Select Basic programs on the start screen and choose the Standby basic program. Change the basic program when you return.	5.7.4 page 24
In summer, it is too cold or too warm.	The basic program enables you to tell which operating mode is active. Adapt the required basic program as you need to.	5.7.4 page 24

5.4 Efficient control of the system



You can save a lot of energy by efficient adjustment of the heating operation. The TopTronic® E control module provides basic programs (5.8 page 29) that help you to control your system easily and specifically when you are present and absent over a fairly long period of time.

For short-term changes to the heating times, you can use various day programs in the Week 1 and Week 2 basic programs (5.10 page 41). Furthermore, the living area temperature can be increased or reduced effortlessly by selecting the current room temperature.

Basic programs


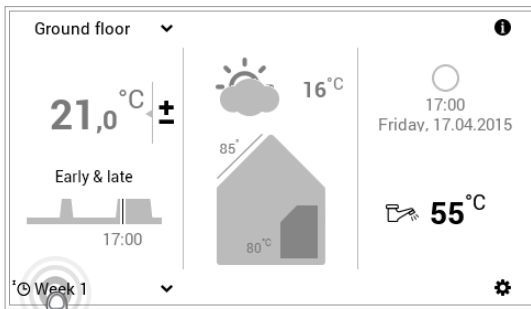


See "Week programs" chapter

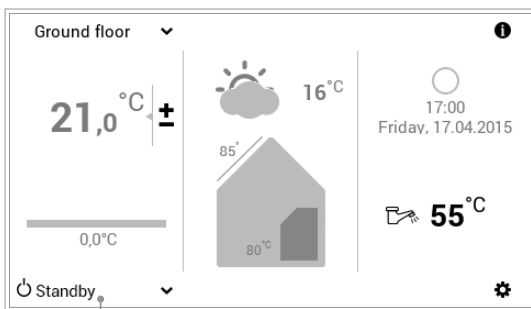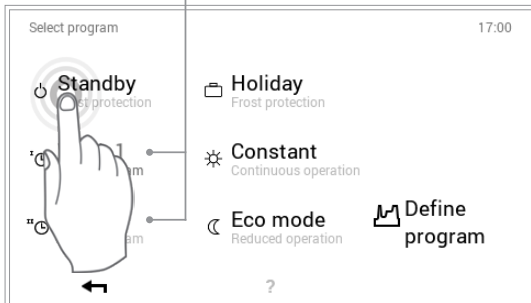


New active basic program

Room temperature / day programs

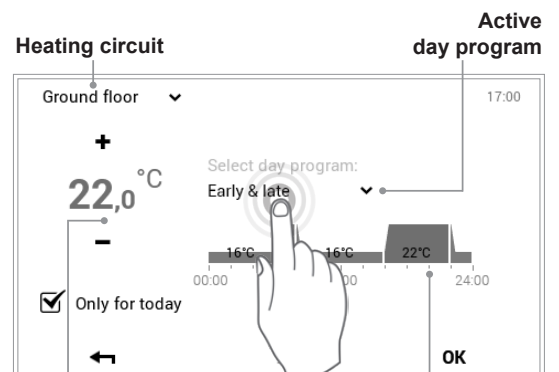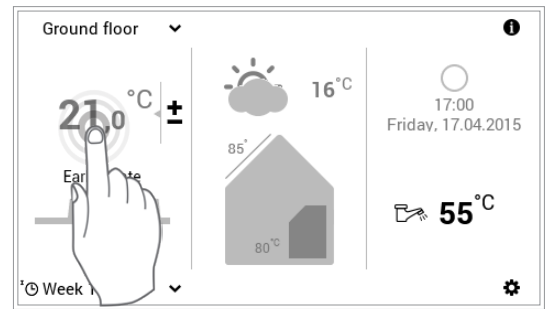

Desired room temperature

Switching cycle

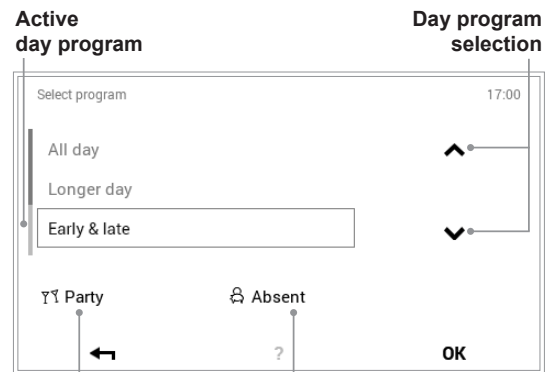


Day program "Party"

Day program "Absent"

5.5 Individual day and week programs

To save you the trouble of selecting the required basic program every day, the control module of the TopTronic® E offers you the opportunity of using week programs. In the two basic programs that can be selected, you can plan your individual week sequences and assign day programs (5.10 page 41) to adapt the heating times to your presence and absence using switching cycles. In

the basic settings, the control module already contains the two standard week programs, Week 1 and Week 2 (5.8 page 29). You can edit the two week programs individually (5.9.4 page 35) and give them any name (5.9.5 page 37).

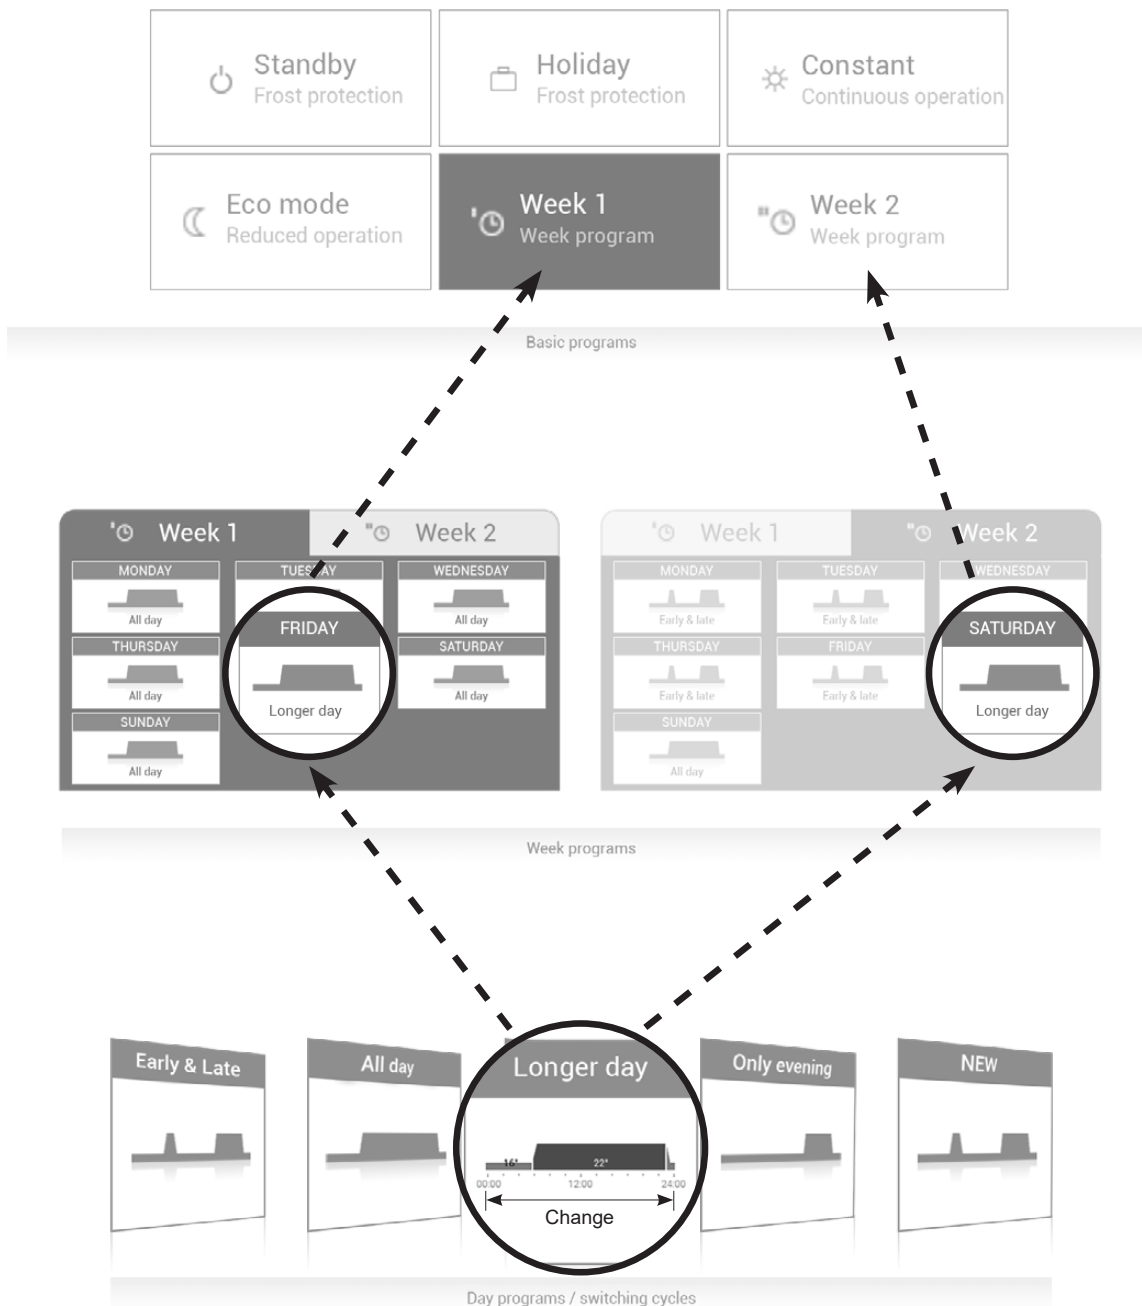


5.6 Start screen

The start screen of the control module is divided into three vertical display elements. For a detailed list of the various start screen functions, refer to 5.6.1 page 18.



NOTICE

The surface of the TopTronic® E control module is not allowed to be touched with sharp or pointed objects for operation – risk of scratching.

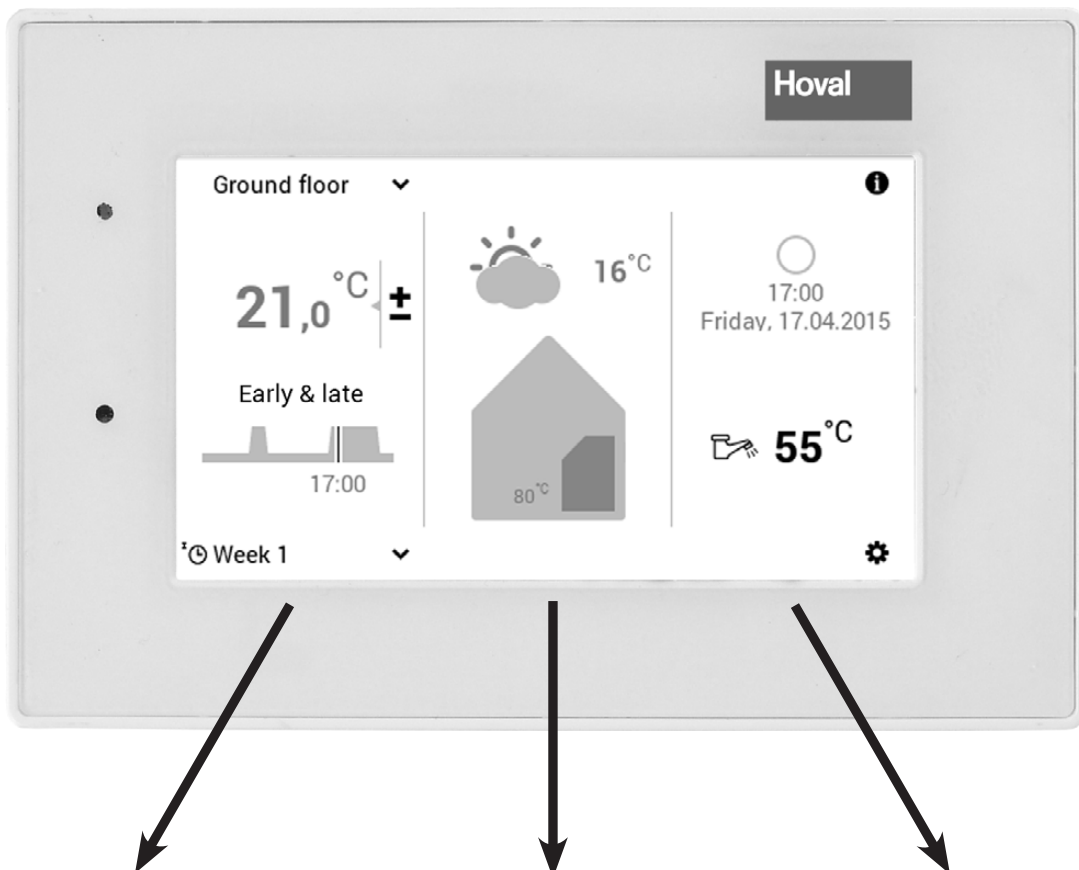

Information living area

The left third of the start screen contains information about the living area. Here, you can make settings for the heating circuit, current room temperature, day program and switching cycles as well as basic program (chapter 5.4 page 15).

Information heat generator

The middle third of the start screen contains information about the heat generator. This information area displays the error status, the outside temperature as well as information about the heating circuit. In addition, the user level (referred to below as authorisation level) can be displayed.


Information general

The right third of the start screen contains general information. Information about energy consumption, time/date as well as domestic hot water temperature. In connection with the HovalConnect, the weather forecast is displayed on the control module as an option.








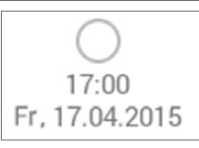


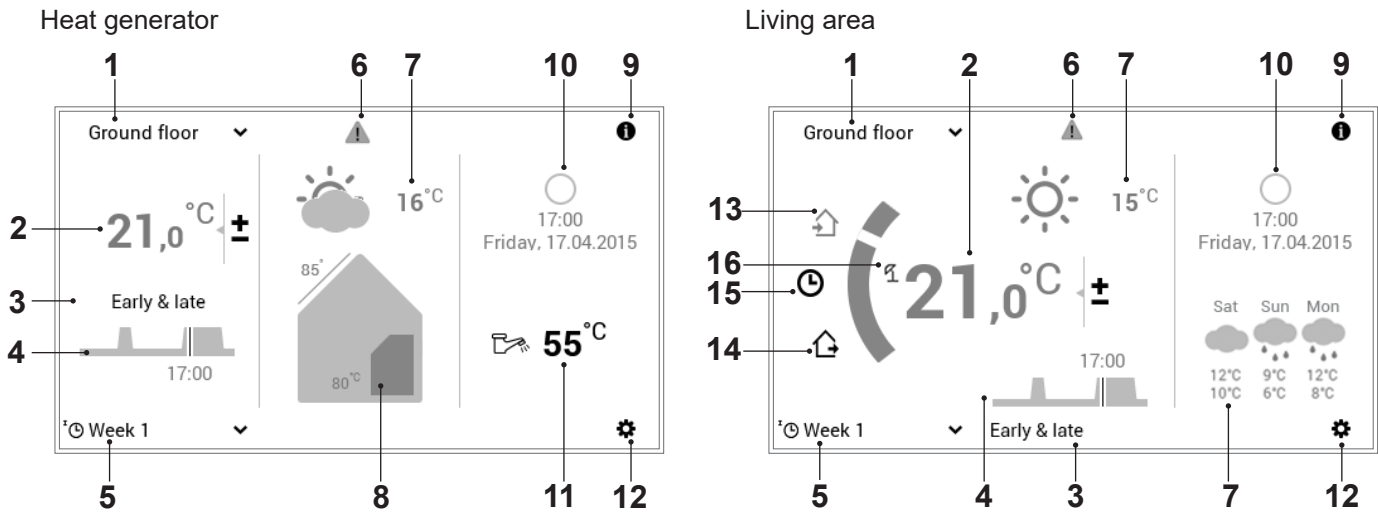








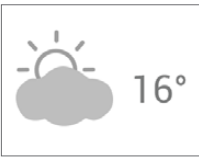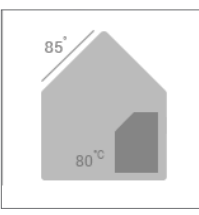

The display of the start screen is a standard view. The operating elements can be adapted by the user. Please check the start screen settings in 5.13.3 page 73 if the display is different.

 5.6.1 Elements of the start screen heat generator and living area



Position / symbol	Designation	Function	Chapter / page
1	Heating circuit	If a house is divided into individual heating areas, the heating circuit refers to each individually adjustable portion. Each heating circuit can have individual settings assigned to it, such as basic program, day and week program as well as room temperature. If no name is shown, then there is only one heating circuit.	5.7.3 page 24
	Operation heating circuits	Display of the joint or individual operation of all heating and domestic hot water circuits.	
		Individual operation of every individual heating circuit	
		Joint operation of all heating circuits (temperature and programs identical)	
2	Room temperature	Displaying the current room temperature – in room control modules and systems with room air sensor – in the selected heating circuit. Adaptation of the temperature by increasing or reducing the preset temperature (5.7.1 page 22). Display of the required room temperature in systems without room air sensor.	5.7.1 page 22
3	Active day program	Currently active day program. Only displayed if the basic programs Week 1 and Week 2 (5.8 page 29) are selected.	5.7.5 page 25
4	Switching cycle	The diagram shows the course of the day (room temperature vertical, time horizontal) of the active basic program or the assigned day program. The vertical line represents the current status.	5.10.5 page 46
5	Basic program	Assignment of the basic program for the particular situation (e.g. week programs, Constant, Holiday). The basic program is used as the operating mode of the heating circuit.	5.7.4 page 24


6	 Information	Operating status	Currently active operating status	7.1 page 75
			 No display – correct operation	
		Alarm message display	 Warning Selection and display of alarm messages	
			 Information for the technician: Display authorisation level. If no level is displayed, the control is in level 0 – your operating level.	
7		Outside temperature	Display of the current outside temperature (only displayed if there is a outdoor temperature sensor). In addition, the phase of the moon is displayed at night. In connection with the HovalConnect, the current weather is displayed.	
8		Information active heat generator	Displays the current temperature in the active heat generator. If a solar plant is installed, the collector temperature is also displayed. If the heat generator/solar plant is currently active, this is indicated by an orange colour.	
9		Information	Detailed information about the system	5.7.7 page 28
10		Phase of the moon, time and date	Display of the current time and date. In connection with the HovalConnect, the current phase of the moon is displayed.	
11		Hot water	Shows the current domestic hot water temperature if necessary.	5.11 page 52
12		Main menu	This operating element accesses the main menu.	5.12.1 page 59
13		Present	Heating takes place immediately, the «Party» program is activated.	5.10 page 41
14		Absent	Used for quickly switching over if you will be absent for a few hours.	5.10.3 page 43
15		Week program	Back to the week program	5.7.4 page 24
16	  	Special symbols	 = summer mode  = frost protection when pump on  = screed drying	




The display of the start screen is a standard view. The operating elements can be adapted by the user. Please check the start screen settings in 5.13.3 page 73 if the display is different.

5.6.2 Optional start screen

The TopTronic® E control module includes five different displays of the start screen. Depending on the individual requirement, the required start screen can be defined during commissioning and set by the heating specialist.


 A subsequent changeover to one of the variants described below can only be made by the heating specialist.

Start screen Heat generator

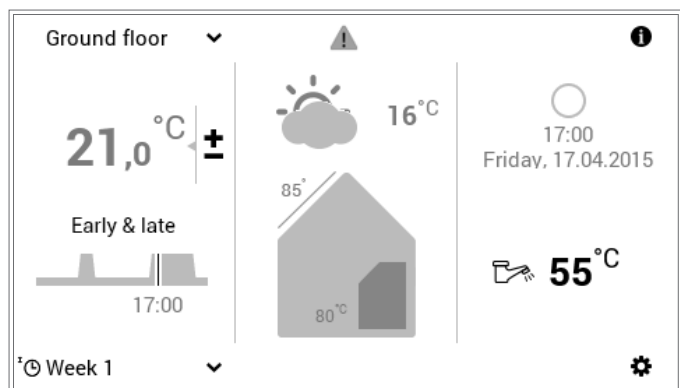


The heat generator screen shows detailed information about the heat generator. In connection with the Hoval-Connect, the weather forecast and the current phase of the moon are displayed.

Start screen Living comfort (option)

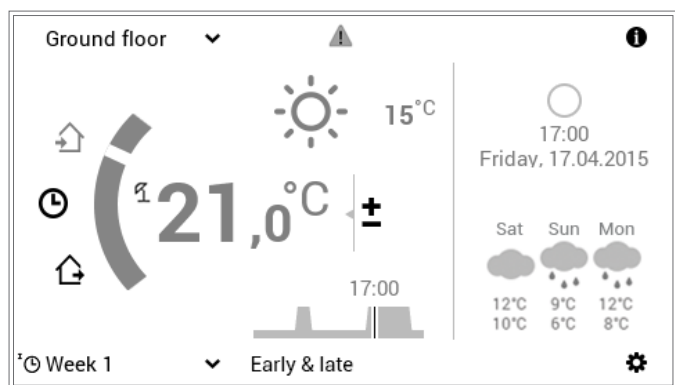


In contrast to the heat generator start screen, the “Living comfort” start screen focuses on quickly switching over between day programs (chapter 5.10 page 41) as well as absence (chapter 5.10.3 page 43). The information about heat generators is shown with a smaller size. In connection with the HovalConnect, the weather forecast and the current phase of the moon can also be displayed.

Start screen Living easy (option)

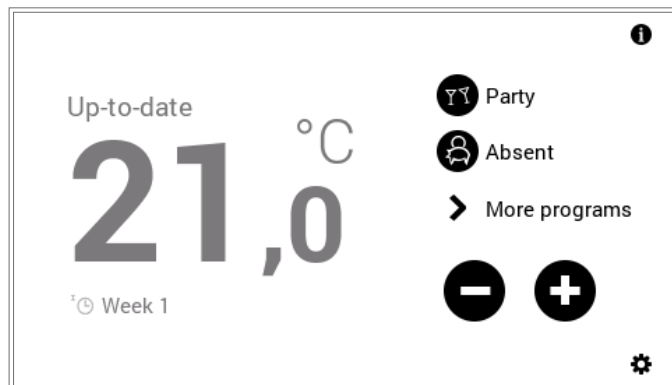


Please refer to the separate operating instructions for the room control module easy.

Start screen Industrial (option)

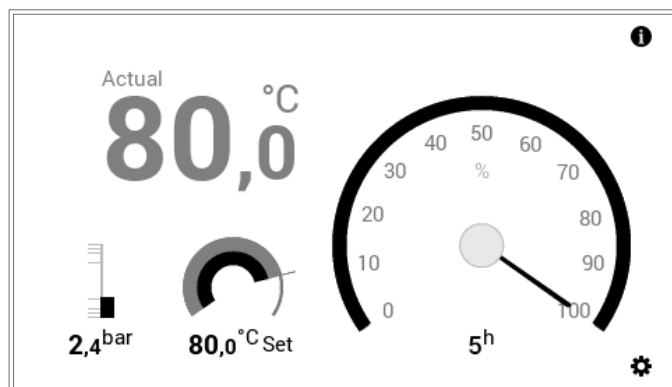



The start screen “Industrial” is usually used in large plants. As a result, only the current heat generator temperature, the water pressure (optional), the desired heat generator temperature, the operating hours and the output are displayed.

Start screen District heating (option)

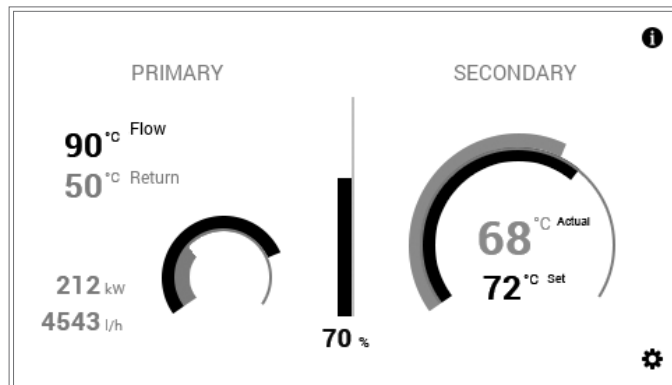


The current position of the primary valve in %, the temperature deviation between desired and current temperature in the graph and, optionally, the current absolute power are displayed.

Overview of control elements

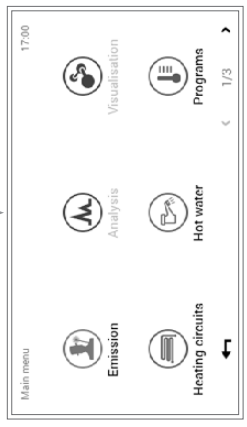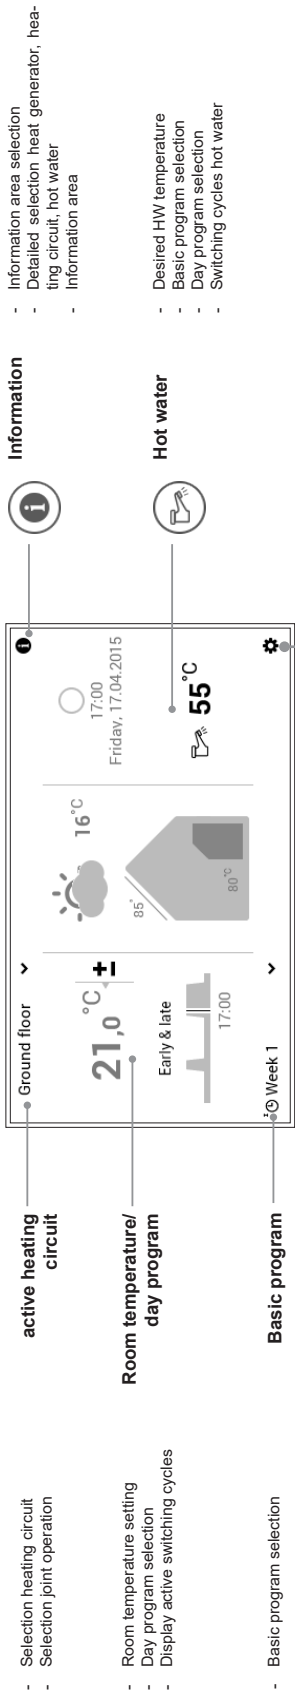


Page 1/3

	Emission	<ul style="list-style-type: none"> - Selection heat generator - Remaining run time - Output limitation - Information area
	Analysis	<ul style="list-style-type: none"> - Selection heat generator, heating circuit, hot water - Selection duration - Diagram display
	Visualisation	<ul style="list-style-type: none"> - For solar collector systems
	Heating circuits	<ul style="list-style-type: none"> - Desired room temperature - Basic program selection - Day program selection - Switching cycles room temperature
	Hot water	<ul style="list-style-type: none"> - Desired HW temperature - Basic program selection - Day program selection - Switching cycles hot water
	Programs	<ul style="list-style-type: none"> - Selection heating circuit/hot water - Detailed selection heating circuit/hot water - Adapting week programs - Adapting day programs

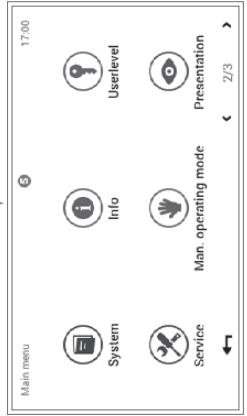

Page 2/3

	System	<ul style="list-style-type: none"> - Display of the next due maintenance/cleaning/service
	Info	<ul style="list-style-type: none"> - Information area selection - Detailed selection heat generator, heating circuit, hot water, solar, etc. - Information area
	User level	<ul style="list-style-type: none"> - User level PIN entry
	Service	<ul style="list-style-type: none"> - Menu item only for heating specialist
	Manual mode	<ul style="list-style-type: none"> - Selection heat generator/heating circuit - Detailed selection - Cooling operation/OFF/heating operation - Information
	Presentation	<ul style="list-style-type: none"> - Language - Colour scheme - Start screen - Backlighting - Duration until standby - Display until standby - Authorisation - Configuration analysis

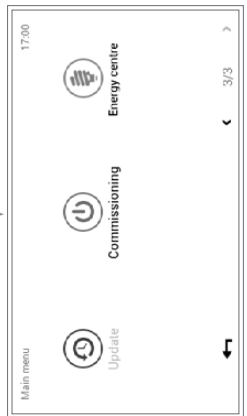


Page 3/3

	Commissioning	<ul style="list-style-type: none"> - Menu item only for heating specialist
	Update	<ul style="list-style-type: none"> - Menu item only for heating specialist
	Power station	<ul style="list-style-type: none"> - Influence of weather forecast on the heating. The function is only active with remote connection.

Functions might not be available for selection, depending on the version of your operating element.

5.7 Main settings


5.7.1 Changing the room temperature

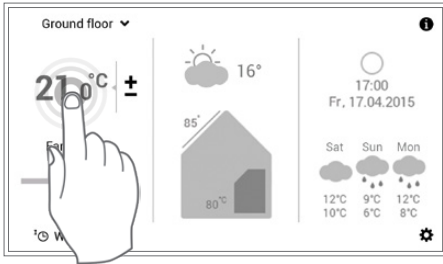


1 Touch the displayed room temperature to select it.




If there are several heating circuits, make sure that the correct heating circuit is displayed (example: ground floor). See “Selecting heating circuit” in chapter 5.7.3 page 24.

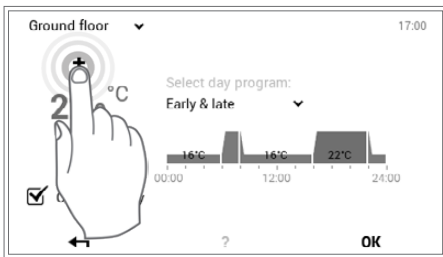

2 Touch the **plus (+)** or **minus (-)** button several times to set the required room temperature.

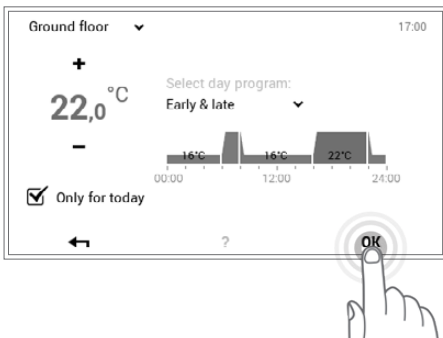


3 Accept the settings with **OK**.

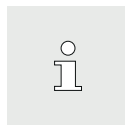

The room temperature is only accepted in the active day program up to the end of the current cycle. Deactivate the checkbox for “**Only for today**” to store the change in the active day program.




4 A change message is displayed. Confirm this with **OK**. Touch the **Back** (←) button if you want to edit the settings again.

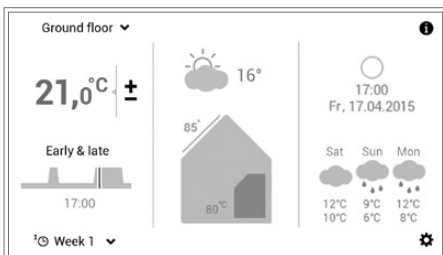


5 The current room temperature is displayed on the start screen and goes up or down until the desired room temperature is reached.


5.7.2 Adapt hot water temperature

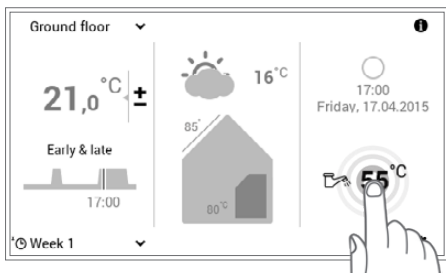


1 Touch the displayed **water temperature** to select it.

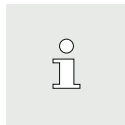


You can also access the function for setting the required water temperature using **Main menu** (⚙) > **Hot water** (5.12.1 page 59, no. 5).

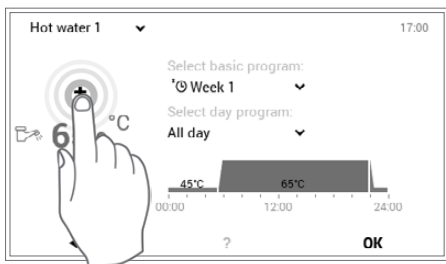


2 Touch the **plus (+)** or **minus (-)** button several times to set the required water temperature.

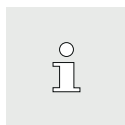


When a day program is active, the hot water temperature is only accepted in the active switching cycle.

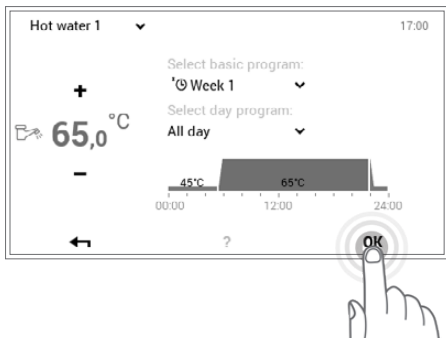

3 Accept the settings with **OK**.

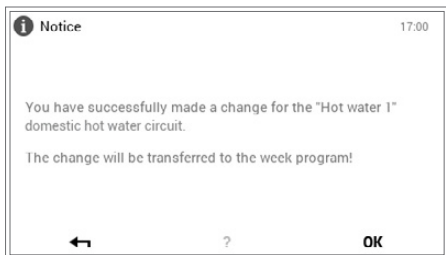


4 A change message is displayed. Confirm this with **OK**. Touch the Back (←) button if you want to edit the settings again.

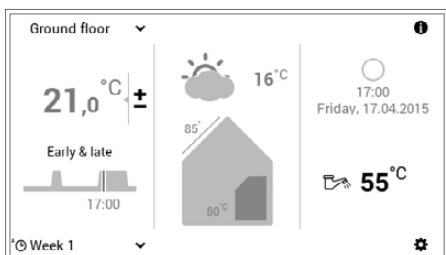


5 The current hot water temperature is displayed on the start screen and goes up or down until the desired water temperature is reached.


5.7.3 Select heating circuit (if there are several)

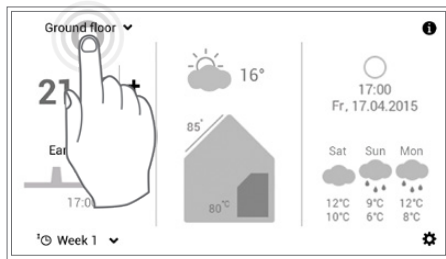


1 Touch the displayed **heating circuit** to select it (example: ground floor).

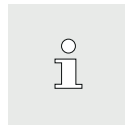


If your system only has one heating circuit, no heating circuit selection is displayed.

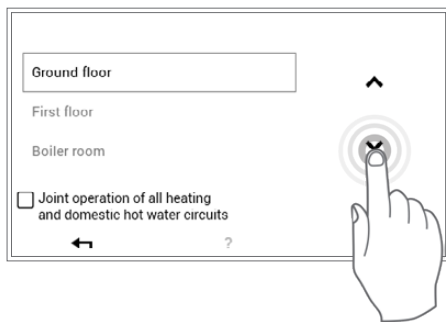

2 Use the **vertical arrows** (^▼) to select the required heating circuit and confirm with **OK**.

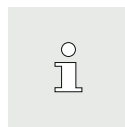


If there are several heating circuits (e.g. apartments), activating the **“Joint operation”** checkbox (5.7.8 page 28) allows all heating circuits to be controlled jointly. The room temperature, the day program and the basic program are thus changed at the same time in all circuits.

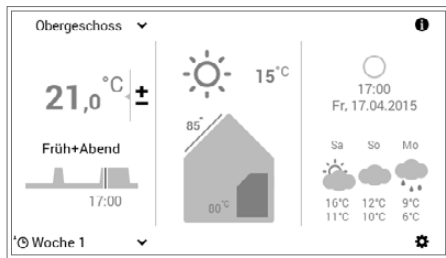


3 The selected heating circuit is displayed on the start screen. All settings in the left area of the control module are now accepted for this heating circuit.

5.7.4 Change the basic program (heating circuit)

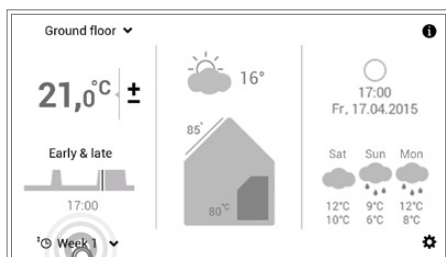

1 Touch the displayed **basic program** to select it (example: Week 1).

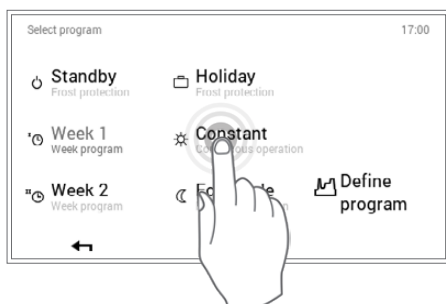


2 Select the desired **basic program**.



Individual basic programs additionally require the room temperature or the return date to be entered (5.8.2 page 30).




3 A change message is displayed. Confirm this with **OK**.

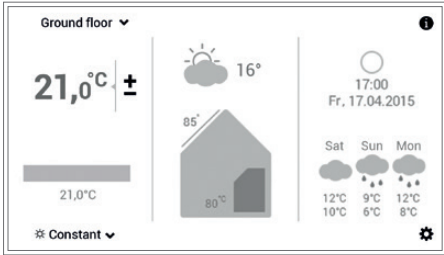


4 The new active basic program is displayed on the start screen.


5.7.5 Change active day program (heating circuit)

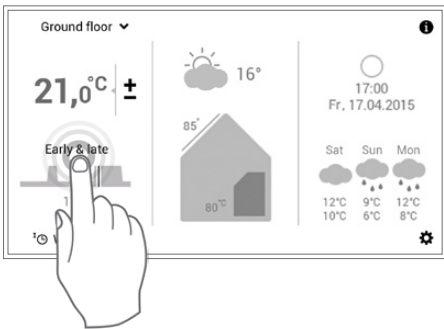

1 Touch the displayed **day program** to select it (example: early & late).

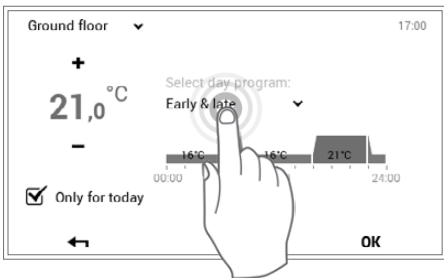

 
2 Touch the active **day program** to select it.



The adaptation to the day program is only accepted in the active week program for the current day. Deactivate the checkbox for **“Only for today”** to store the change in the week program.



3 Use the **vertical arrows** (^v) to select the required day program and confirm with **OK**.

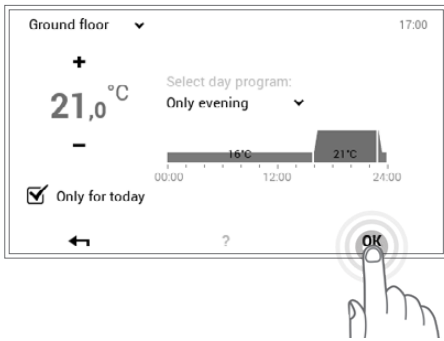


4 The selected day program is now displayed with the associated switching cycles as well as the room temperature.



The room temperature can be adapted again after the new desired day program has been selected.




5 A change message is displayed. Confirm this with **OK**. Touch the **Back** (←) button if you want to edit the settings again.

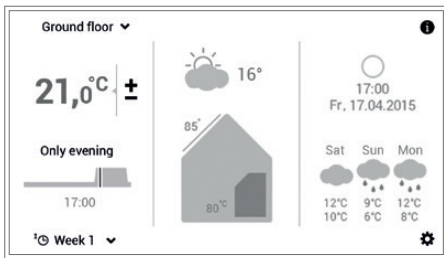


6 The new selected day program is displayed on the start screen.


5.7.6 Change basic and day program (hot water)

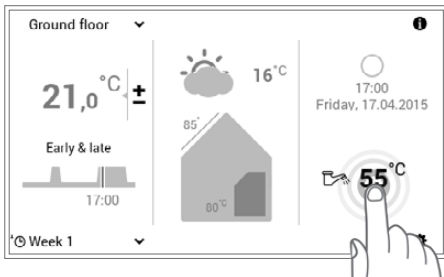

1 Touch the displayed **hot water temperature** to select it.

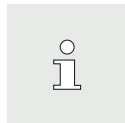


In connection with the HovalConnect, the weather forecast is displayed on your start screen as an option. You can also access the function for adapting the required water temperature using **Main menu > Hot water** (5.12.1 page 59).

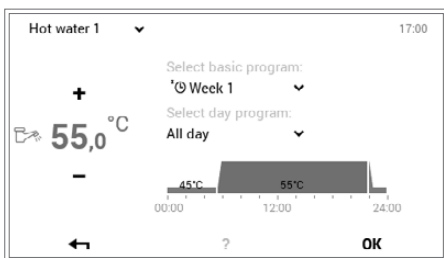

2 Touch the **hot water basic program** or **hot water day program** to select it.



Hot water basic and day programs are independent from the heating circuit basic and day programs. The hot water basic program can be set to **Week 1**, for example, while the heating operation is heating with the **Constant** setting.

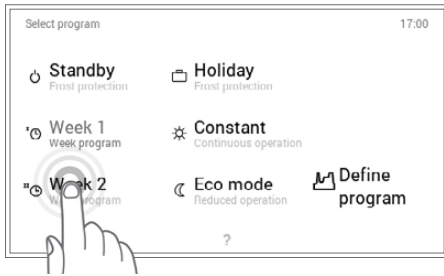


3 Select basic program:

Select the desired hot water basic program.



Select day program:


Use the vertical arrows (^v) to select the required hot water day program and confirm with OK.

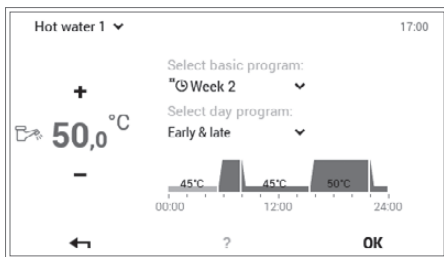

4 The selected basic or day program for water heating is displayed on the menu. Press OK to return to the start screen.



5 A change message is displayed. Confirm this with OK.

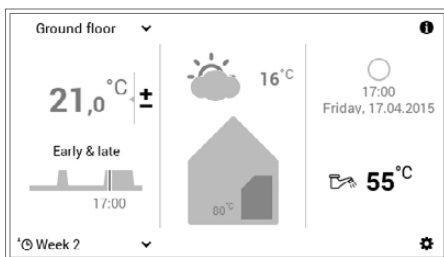


6 The current hot water temperature is displayed on the start screen and goes up or down until the water temperature of the selected basic or day program is reached.

With heat pumps:


Under certain circumstances, at very low outside temperatures, it will not be possible to reach the required domestic hot water temperature or room temperature.




5.7.7 Call up system information

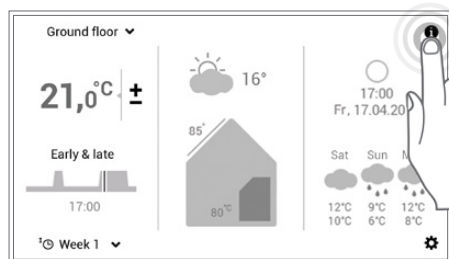

1 Touch the **Info** (i) button to select it.

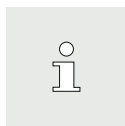


Also use the Main menu (⚙) > Info (page 2) to access the overview of the system information (5.12.2 page 60, no. 2).

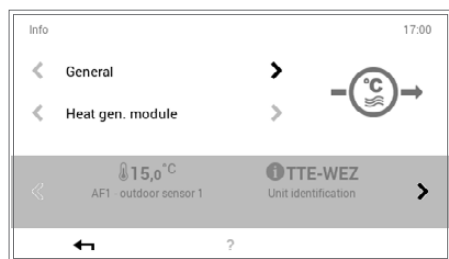


2 The Info menu item is displayed. Information for each system area can be called up here. To do this, use the horizontal arrows (◀ ▶) to select the corresponding areas. Use the Back (←) button to exit the menu item. The start screen appears again.

5.7.8 Joint operation for heating and domestic hot water circuits

If your system has several heating circuits (e.g. apartments), the TopTronic® E control module offers the “Joint operation of all heating and domestic hot water circuits” function. For the same operating mode to be set for all heating and hot water circuits (max. 28 circuits), it is necessary for the “Joint operation of all heating and domestic hot water circuits” checkbox to be activated (5.7.3 page 24, no. 2). The room temperature, the day program and the basic program are thus changed at the same time in all circuits.

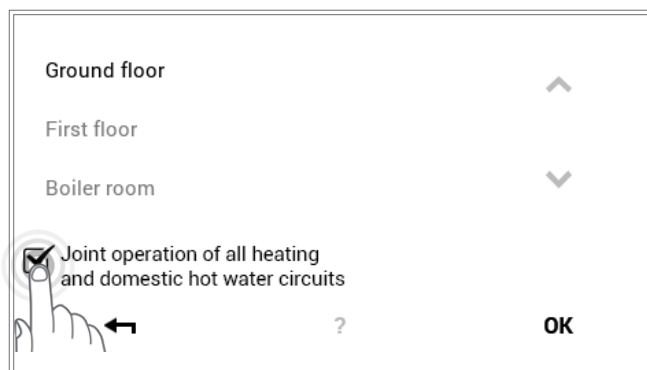


Programs are controlled as follows in joint operation:
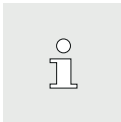
<p>Temperature</p>	<p>Synchronisation exclusively in the heating circuits</p>  <p>There is <u>no</u> synchronisation of the hot water and the heating circuit temperatures during the joint operating.</p>
<p>Basic programs</p>	<p>Synchronisation in the heating and hot water circuits</p>
<p>Day programs</p>	<p>Synchronisation exclusively in the heating circuits</p>
<p>“Special day programs” (Party and Absent)</p>	<p>Synchronisation in the heating and hot water circuits</p>

5.8 Basic programs

Basic programs are referred to as the operating modes of the TopTronic® E control and, in contrast to the day programs (5.10 page 41), they are usually selected for a lengthy period of time. You can thus achieve targeted energy savings by deliberately selecting the right basic program.

The basic programs **Week 1** and **Week 2** are available for recurrent weekly rhythms. Here, you can plan your individual week(s) by allocating day programs (5.10 page 41) and regulate the heating operation specifically. In addition, for example, you can activate the **Standby** basic program if you will be absent for a relatively long period of time. The heating system consequently switches OFF and frost protection is activated. An overview of the functions of the basic programs is presented below.

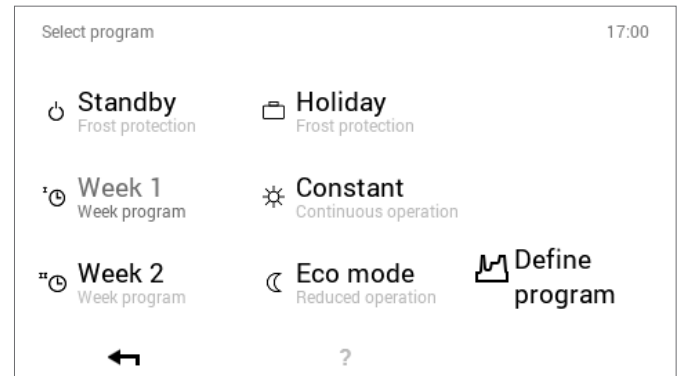




The TopTronic® E automatically switches to summer disconnection as the outside temperatures rise, thus saving energy. This function requires an outdoor sensor, however.



Refer to 5.7.4 page 24 for a detailed description of selecting basic programs.

5.8.1 Functions of the various basic programs

Basic program	Possible occasion and functions
 Week 1 Day programs	<p>You are at home all day, every day of the week.</p> <ul style="list-style-type: none"> • Heating operation defined by individual day programs • Hot water operation active in a separate basic program • In the standard program during the day continuous heating operation at 22 °C, at night reduced heating operation (16 °C). On Saturdays and Sundays, heating operation during the day at 22 °C and at night reduced heating operation (16 °C). • Mo – Su = heating “all day” • For more information about “Week 2”, see chapter 5.9 page 32
 Week 2 Day programs	<p>You go to work during the day from Monday to Friday, and are at home on Saturday and Sunday.</p> <ul style="list-style-type: none"> • Heating operation defined by individual day programs • Hot water operation active in a separate basic program • In the standard program mornings and evenings heating operation at 22 °C, during the day and at night reduced heating operation (16 °C). On Saturdays and Sundays, heating operation during the day at 22 °C and at night reduced heating operation (16 °C). • Mo – Fr = early & late / Sa and Su = all day • For more information about “Week 1”, see chapter 5.9 page 32
 Eco mode Reduced operation	<p>You feel comfortable with a slightly lower temperature and you would like to save energy.</p> <ul style="list-style-type: none"> • Continuously reduced 24 h operation • Constant room temperature – optional • Hot water operation active in a separate basic program



 **Constant**
Continuous operation


You would like to heat the rooms during the night, too.

- Room temperature is not reduced during the night
- Constant room temperature – optional
- Hot water operation active in a separate basic program

 **Holiday**
Frost protection

You are going on holiday for e.g. 1 week and you know the date of your return.

- Heating system OFF
- No hot water operation
- Frost protection activated

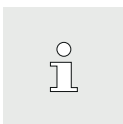


Start date holiday = heating OFF at 24:00
End date holiday = heating ON at 24:00
(to ensure your house is warm when you come home set the return date one day earlier)

 **Standby**
Frost protection

You are travelling for an indefinite period of time in spring or in autumn. It does not matter if the rooms are cold on your return. You do not need warm water on your return.

- Heating system OFF
- Frost protection active
- No hot water operation

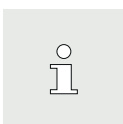


If joint operating mode is not active, the “Standby” basic program only acts on the selected heating circuit!


5.8.2 “Holiday” – enter return date

Switching to the Holiday basic program additionally requires the return date to be entered for automatic resumption of heating operation. On the entered return date


(24:00 hours), the system switches back to the previously active basic program.

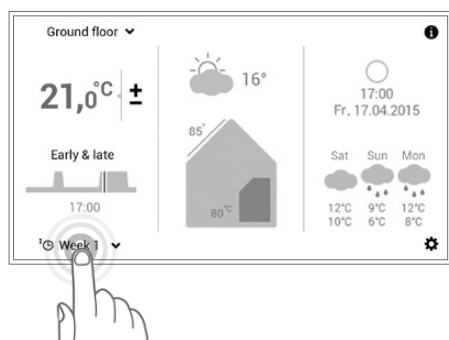


1 Touch the displayed **basic program** to select it (example: Week 1).

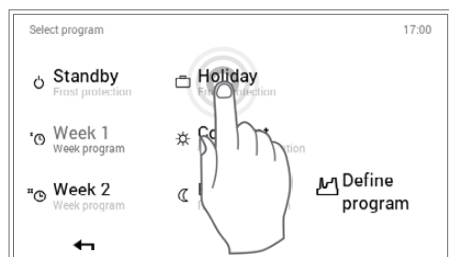


2 Select the **Holiday** basic program.

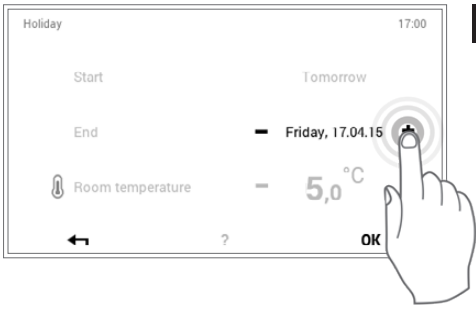


3 Touch the **plus (+)** button several times or select the **current date** to select the required return date (minus at least 1 day). Accept the settings with **OK**.

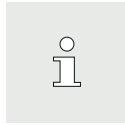

Start: the system is switched OFF at 0:00 hours (frost protection activated).

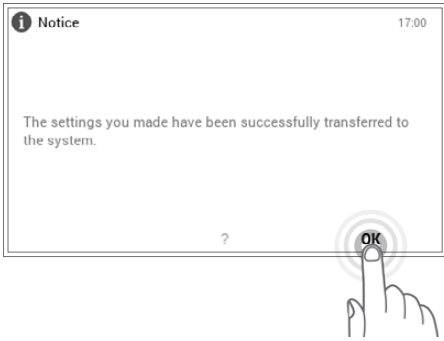


4 A change message is displayed. Confirm this with **OK**.

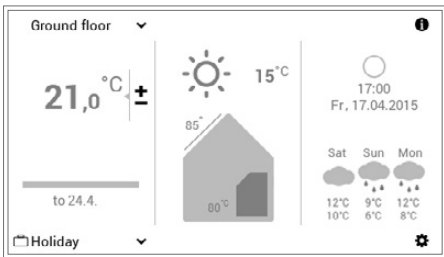


5 The newly selected basic program is displayed on the start screen.

5.9 Week programs


The **Week 1** and **Week 2** operating modes integrated in the basic programs are referred to as week programs. These enable you to plan your individual weekly rhythm (example: working week, early shift, late shift, etc.). To make the selection easier for you, it is possible to edit the names of the week program individually. In this case, each day of the week keeps its own day program with integrated switching cycles (5.10 page 41). You can also adapt these to your personal requirements and assign them to the week program.

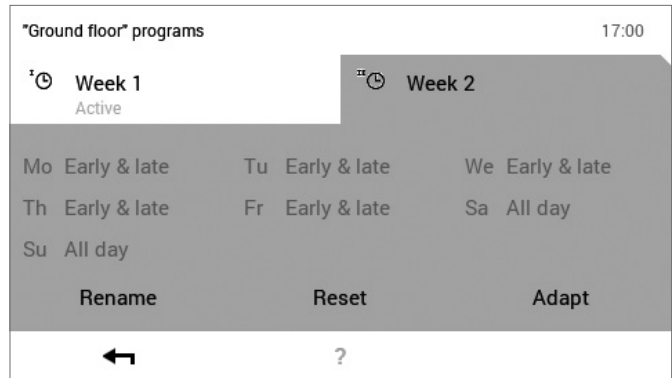


 Refer to 5.9.4 page 35 for a detailed description of editing the week programs.


5.9.1 Week program default settings

The predefined week programs (Week 1 and Week 2) are used as default settings and can be activated using the **Week 1** and **Week 2** basic programs as operating mode. They can be edited individually (5.9.4 page 35) and renamed (5.9.5 page 37). Changed week programs can be reset to the default settings (see below) (5.9.6 page 39).

 Resetting the week programs does not reset the day programs they include!


Week program default settings:

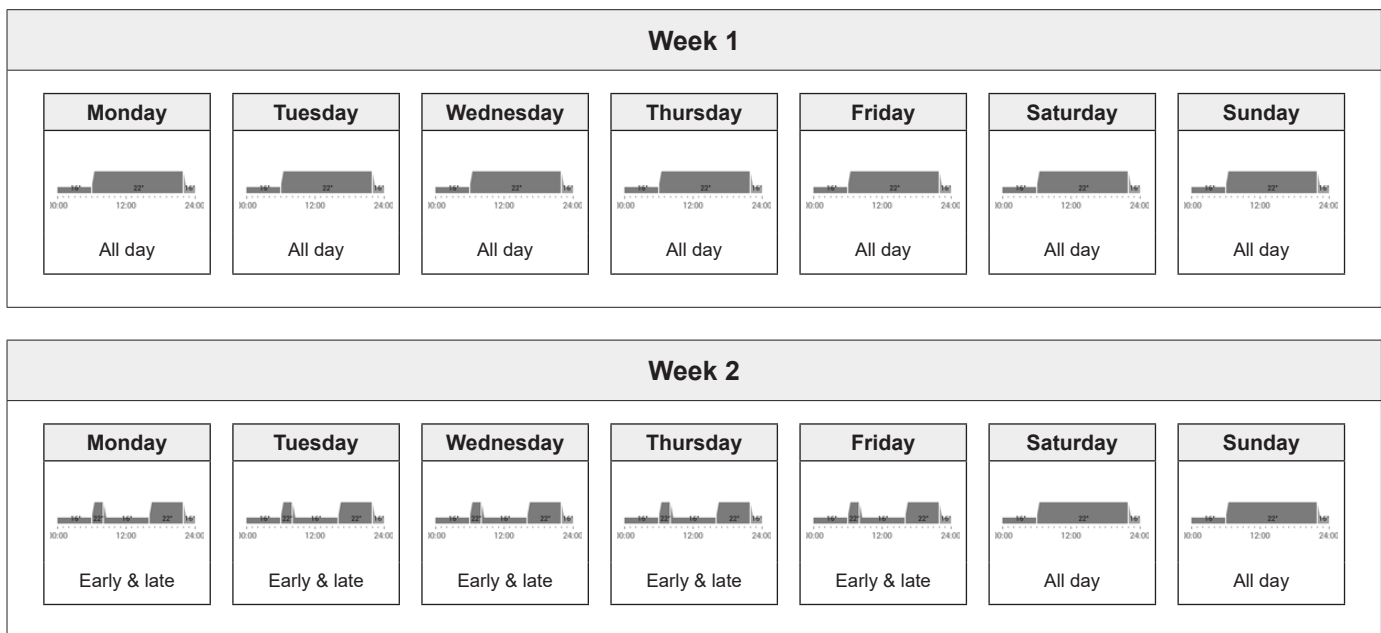

 Attention: Each heating circuit has two week programs. These can be composed of five different day programs (5.10 page 41). These day programs only apply in the particular heating circuit and are independent from the programs in other circuits!

5.9.2 Notes on personal week programs

For a clear display of the week programs that you have created, you will find two empty tables below in which you can record the day programs that you have stored.

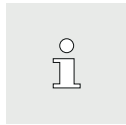


For heating systems with several heating circuits, please make a copy of the empty tables.


Week program 1: _____						
Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
Day program:	Day program:	Day program:	Day program:	Day program:	Day program:	Day program:

Week program 2: _____						
Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
Day program:	Day program:	Day program:	Day program:	Day program:	Day program:	Day program:


5.9.3 Week program operating elements

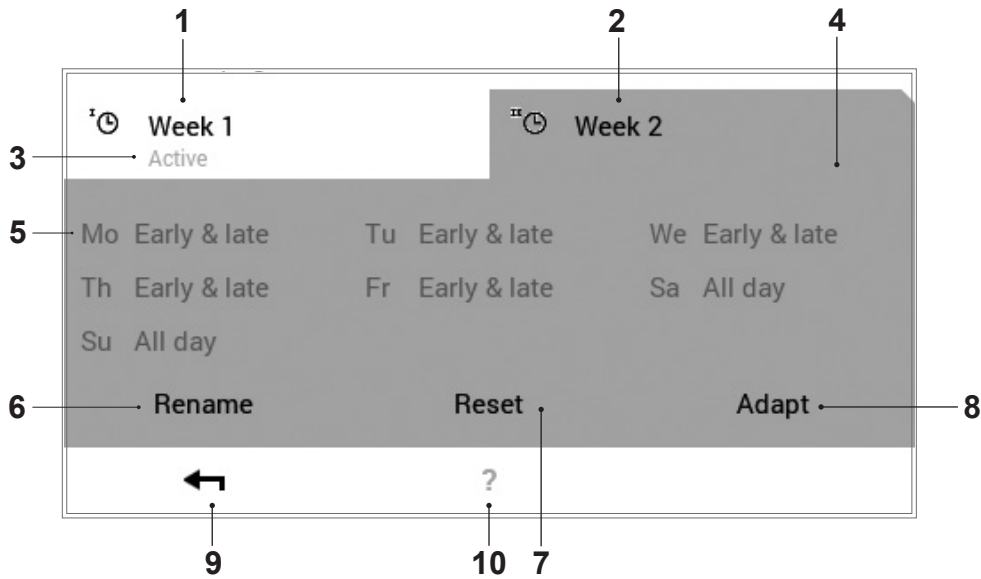

No.	Designation	Function
1	Week program 1	Heating program with individual week cycle 1
2	Week program 2	Heating program with individual week cycle 2
3	Active week program in heating circuit	Displays the active week program in the heating circuit. The message is not displayed if neither of the two week programs is operating.
4	For editing active week program	Marks the week program selected for editing (rename / reset / adapt).
5	Defined week cycle	Day programs assigned to the week days. The seven assigned day programs thus make up the week cycle or the week program.
6	Rename	Individual renaming of the selected week program (5.9.5 page 37)
7	Reset	Reset the selected week program to the default settings (5.9.6 page 39)
8	Adapt	Assignment of the day programs to the individual days of the week (5.9.4 page 35)
9	Back	Return (←) to the previous screen.
10	Help	Summarised information about the screen area shown above

 The illustrated screen is the standard view. Various elements can be renamed and adapted by the user in the menu.


5.9.4 Adapt week program

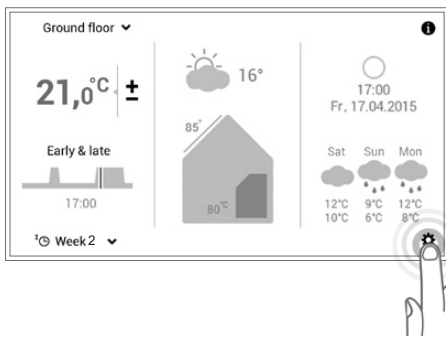


1 Touch the **Main menu** (⚙️) button to select it.




“Adapt week program” is also possible using Basic program > “Week2” > “Define program”.

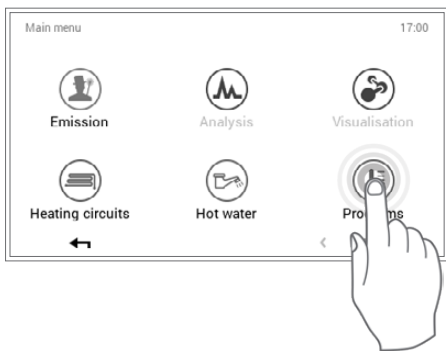

2 Touch the **Programs** button to select it.

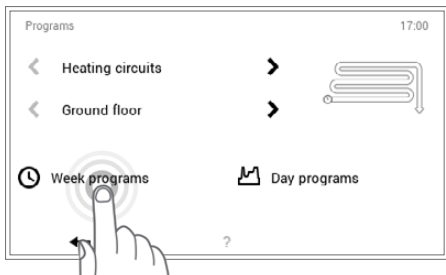


3 The overview for the heating circuit and the program selection appears. Select the required heating circuit and then **Week programs**.

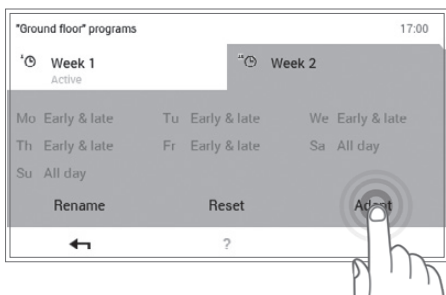

4 Select the required week program (example: Week 2). Touch the **Adapt** button to make settings in the selected week program.




The names of the week programs (Week 1 and Week 2) may be different if they have already been changed.

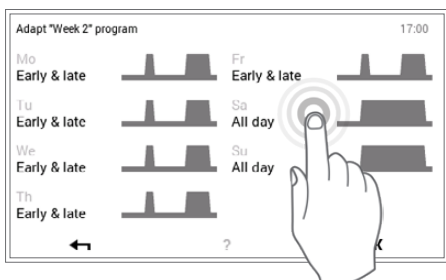

5 Select the required **week day** to assign a new day program to it.




6 Use the **vertical arrows** (^▼) to select the new day program and confirm with **OK**.

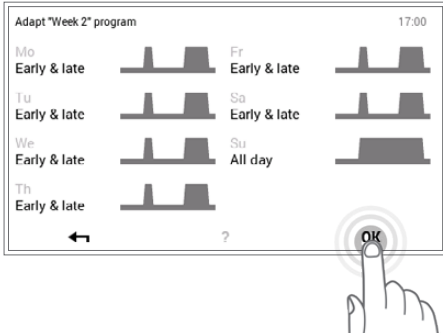


7 The overview of the selected week program opens again. Press **OK** to accept the adaptation.




8 A change message is displayed. Confirm this with **OK**.

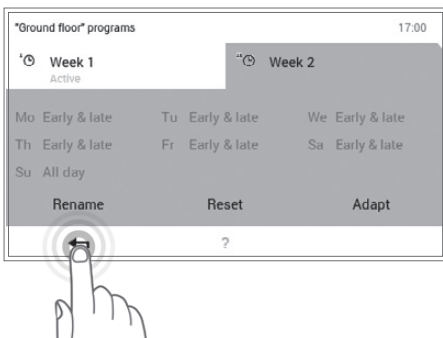


9 The adaptations are displayed in the selected week program. Press **Back** (←) to return to the menu item.

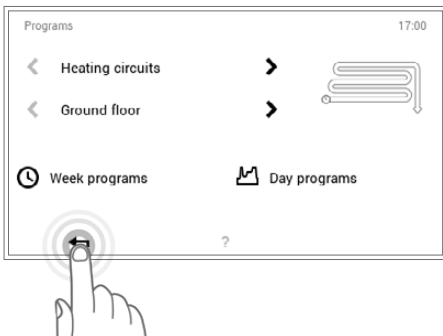

10 Touch **Back** (←) to close the **Programs** menu item.

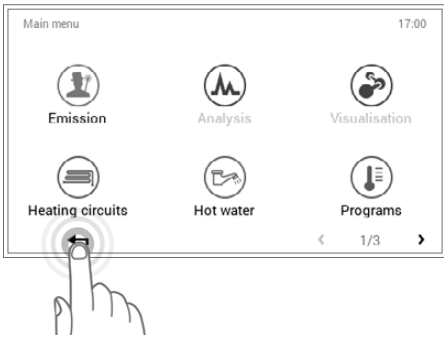


11 Select **Back** (←) again to close the main menu.

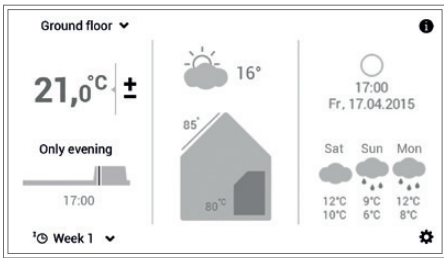


12 If the week program is active, the settings are displayed on the start screen.


5.9.5 Rename week program

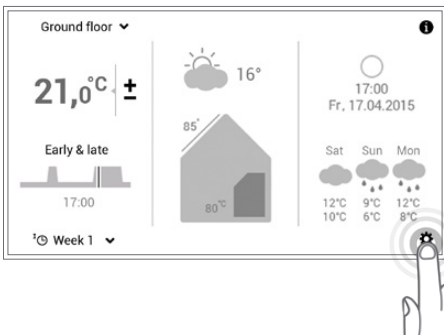


1 Touch the **Main menu** (⚙) button to select it.

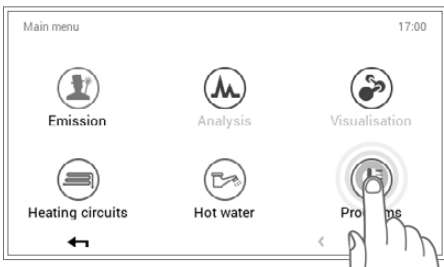


2 Touch the **Programs** button to select it.

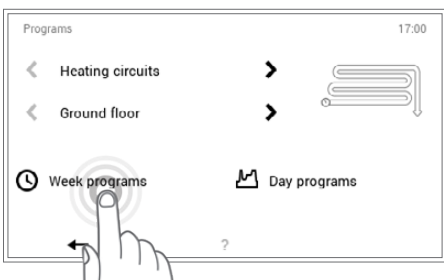

3 The overview for the heating circuit and the program selection appears. Select the required heating circuit and then **Week programs**.

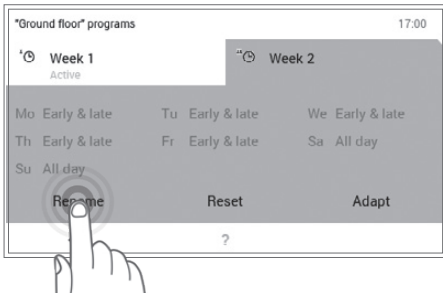


4 Select the required week program (example: Week 2). Touch the **Rename** button to select it.

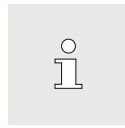


The names of the week programs (Week 1 and Week 2) may be different if they have already been changed.




5 A **keypad** appears on the screen that you can use for renaming the selected week program. Press **OK** to accept the entry.

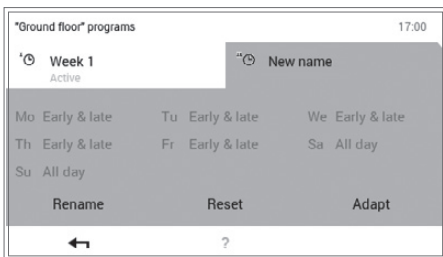


6 The new name is displayed in the selected week program. Press **OK** or **Back** (←) to return to the menu item.

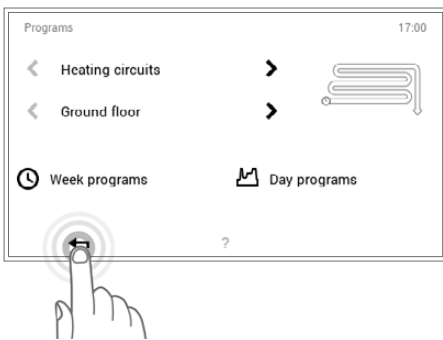

7 Touch **Back** (←) to close the **Programs** menu item.

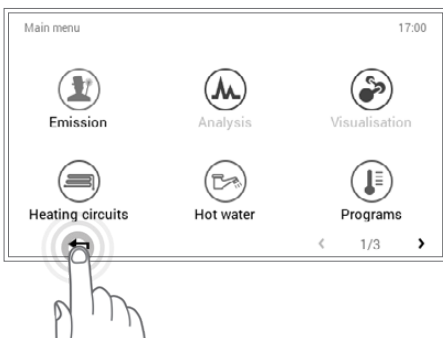


8 Select **Back** (←) again to close the main menu.

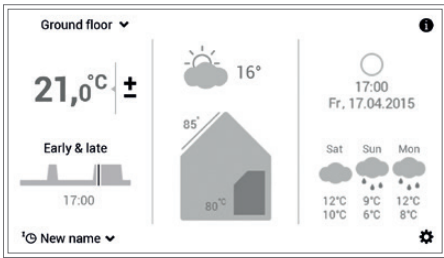


9 If the newly named week program is active as the basic program, the new name is displayed on the start screen.


5.9.6 Reset week program

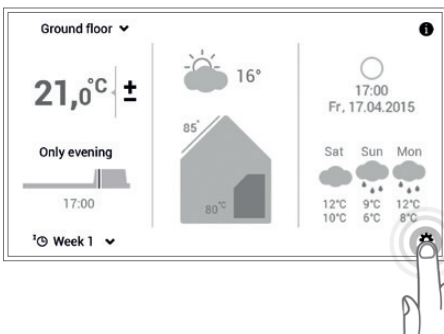


1 Touch the **Main menu** (⚙️) button to select it.

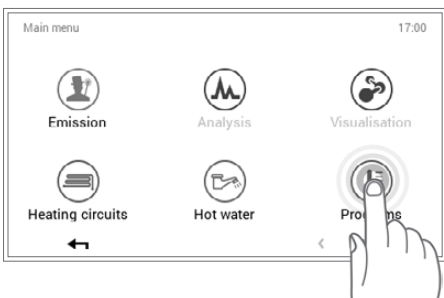


2 Touch the **Programs** button to select it.

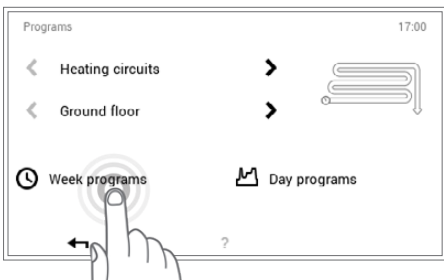


3 The overview for the heating circuit and the program selection appears. Select the required heating circuit and then **Week programs**.

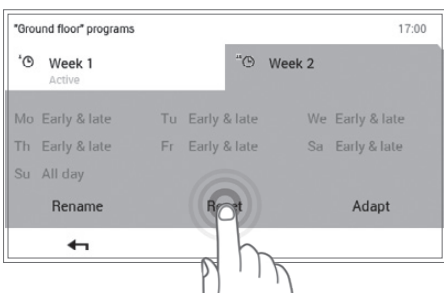


4 Select the required week program (example: Week 2). Touch the **Reset** button to reset the settings in the selected week program to their default values.

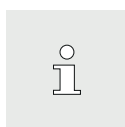


The names of the week programs (Week 1 and Week 2) may be different if they have already been changed.

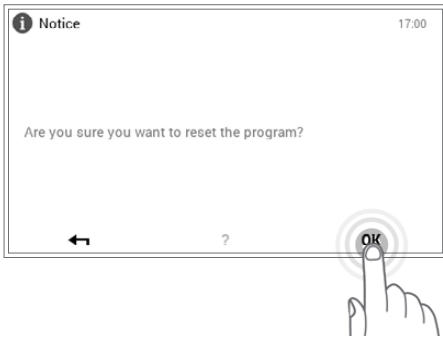


5 A confirmation message is displayed. Confirm this with **OK**. Press **Back** (←) to go back without resetting the program.

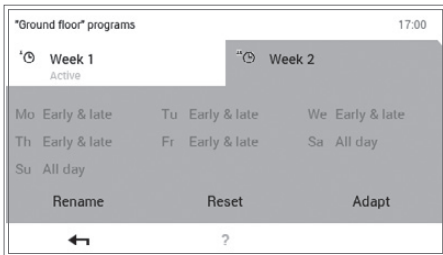


6 The pre-programmed standard program is displayed in the selected week program. Press **OK** or **Back** (←) to return to the menu item.

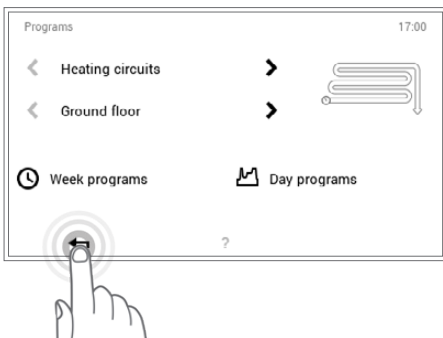

7 Touch **Back** (←) to close the **Programs** menu item.

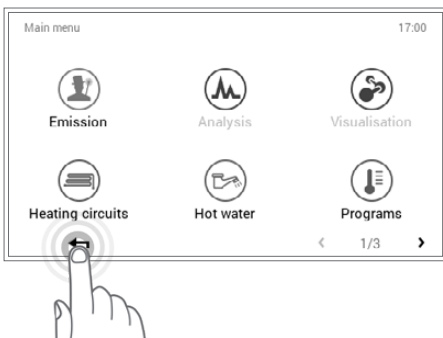

8 Select **Back** (←) again to close the main menu.

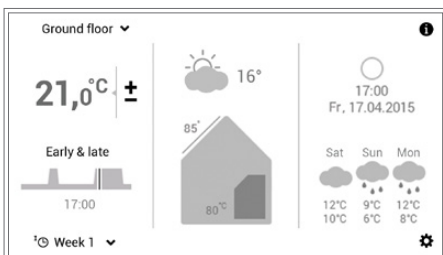

9 If the reset week program is active, the default settings are displayed on the start screen.

5.10 Day programs / switching cycles

Day programs are elements which are subordinate to the week program and contain what are referred to as switching cycles with corresponding room temperature specifications. You can adapt day programs and switching cycles to meet your particular requirements. Thus, for example, the heat output can be reduced for regular and recurrent periods of absence (e.g. working day) or the temperature can be specifically adapted for presences with different time periods.



- The heating circuit day programs/switching cycles are independent from the hot water day programs (5.11 page 52).
- The preset day programs with defined switching cycles can be adapted and renamed.
- The switching cycles of a day program are only active if the corresponding week program is selected as the basic program.
- A maximum of six switching cycles are possible for each day program.

5.10.1 Default settings for day programs / switching cycles

In the factory setting, the names and the switching cycles of the day programs are predefined. Two of these standard day programs (all day and early & late) are already assigned to both week programs **Week 1** and **Week 2**. If you adapt these two day programs to your individual requirements, you need to consider that both week programs are also changed (5.5 page 16). You can edit the default settings listed below as you require (5.10.5 page 46), rename them at any time (5.10.6 page 48) and reset to the default settings (5.10.7 page 50).

Default settings for day programs

Day programs	Switching cycle / temperature			Example
	from	to	°C	
All day 	00:00	06:00	16	I work at home and I am present all day.
	06:00	22:00	22	
	22:00	00:00	16	
Longer day 	00:00	06:00	16	I am at home all day and I go to bed later in the evening.
	06:00	23:00	22	
	23:00	00:00	16	
Early & late 	00:00	06:00	16	I go to work at 08:00 hours in the morning and I do not return home until 17:00 hours in the evening.
	06:00	08:00	22	
	08:00	16:00	16	
	16:00	22:00	22	
	22:00	00:00	16	
Only evening 	00:00	16:00	16	I do not need any heating in the morning before I set off to work. I get back home at 17:00 hours in the evening.
	16:00	23:00	22	
	23:00	00:00	16	

NEW



from	to	°C
00:00	06:00	16
06:00	08:00	22
08:00	16:00	16
16:00	22:00	22
22:00	00:00	16

I create my own day program and adapt the switching cycles individually to my requirements. I use the switching cycles of the "Early & late" day program as a template.

5.10.2 Notes on personal day programs

For a clear display of the day programs that you have created, you will find six tables below in which you can make a note of the stored switching cycles and temperature settings. Please remember that only six day pro-

grams can be recorded in the tables. For systems with several heating circuits, please make a copy of the empty tables.

Day program for living area (heating circuit):			
Name of day program	from	to	°C

Day program for living area (heating circuit):			
Name of day program	from	to	°C

Day program for living area (heating circuit):			
Name of day program	from	to	°C

Day program for living area (heating circuit):			
Name of day program	from	to	°C



Day program for living area (heating circuit):			
Name of day program	from	to	°C

Day program for living area (heating circuit):			
Name of day program	from	to	°C


5.10.3 Party and absent

On the TopTronic® E, the day program can be changed at any time when a week program is active (5.7.5 page 25). If you come home earlier, for example, you can immediately activate the heating with a suitable day pro-


gram. Furthermore, if you are going to have a party or if you will be absent for a short time, you can extend or reduce the heating time with the “Party” or “Absent” programs.

Day program	Possible occasion and function
 Party	<p>You have guests in the evening.</p> <ul style="list-style-type: none"> Continued heating operation at the entered room temperature until the end of the desired period of time (duration) The room temperature should not be lowered at the preset time (day program)
 Absent	<p>You leave home in the afternoon and will only come back late in the evening.</p> <ul style="list-style-type: none"> (Reduced) heating operation at the desired room temperature until the end of the entered period of time (duration) Calorifier frost protected (5 °C)

The two “Party” and “Absent” programs can be selected as follows:

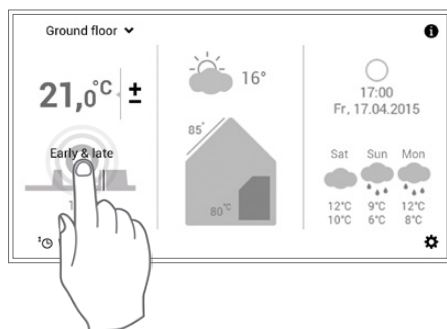


1 Touch the displayed **day program** to select it (example: early & late).

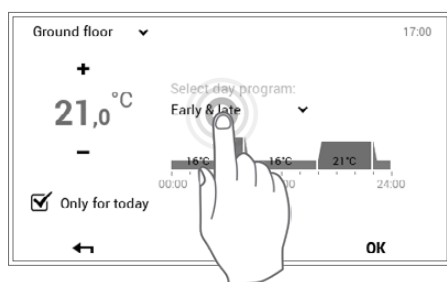


2 Touch the active **day program** to select it.




The adaptation to the day program is only accepted in the active week program for the current day. Deactivate the checkbox for “**Only for today**” to store the change in the week program.

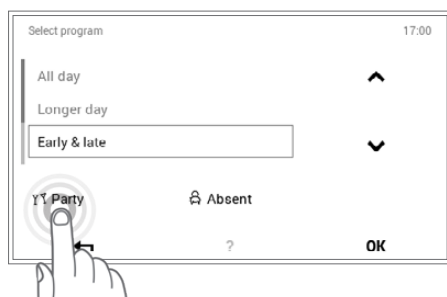


3 Select the desired program, **Party** or **Absent**.

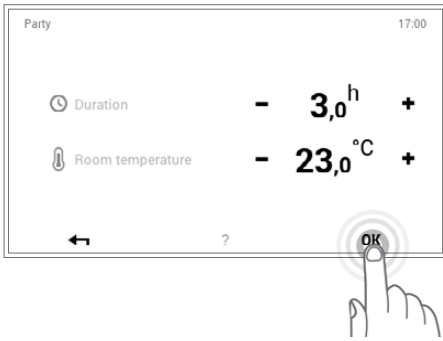


4 Press **plus (+)** and **minus (-)** to set the required duration and room temperature and confirm with **OK**.

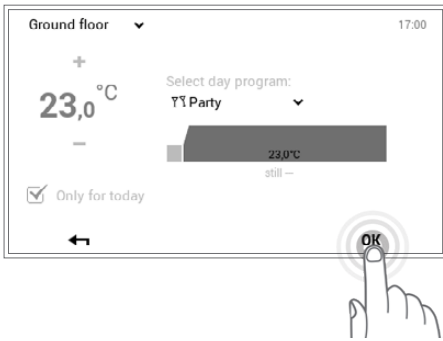


5 The active day program and the set room temperature can be seen on the screen. Accept the setting with **OK**.

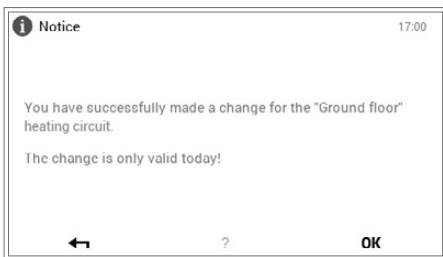

6 A change message is displayed. Confirm this with **OK**. Touch the **Back** (←) button if you want to edit the settings again.

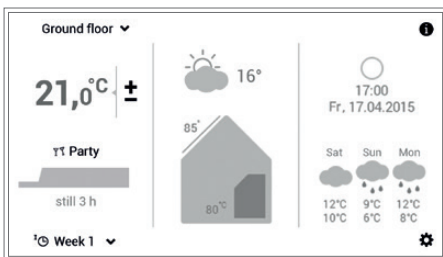


7 The new selected day program (Party) is displayed on the start screen.

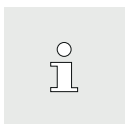


“Party” and “Absent” are special day programs and cannot be included in week programs.

5.10.4 Day program / switching cycles operating elements

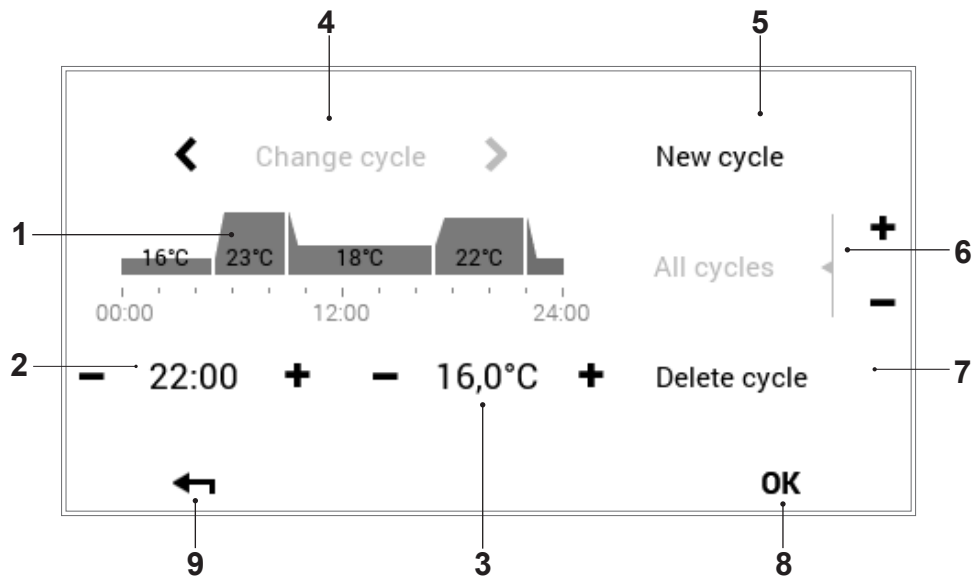


No.	Designation	Function
1	Day program / switching cycles	For adapting the selected day program with time cycles and corresponding temperature specifications. The time period marked in yellow shows the cycle that is active during the editing. The horizontal arrows (< >) are used for selecting the required period of time. Alternatively, the switching cycle to be edited can also be touched directly.
2	Start time – active cycle	Displays the start time of the selected cycle. Changes can be made to the start time using plus (+) and minus (-).
3	Temperature – active cycle	Represents the room temperature defined in the cycle. The temperature can be changed in the active cycle with plus (+) and minus (-).
4	Change cycle	Switch the cycle to be edited to the left or right. Alternatively, the switching cycle to be edited can also be touched directly.
5	New cycle	Create a new time cycle. The new cycle is added at the end of the day program.
6	All cycles	Increase or reduce the temperature of all cycles with plus (+) and minus (-) in the complete day program.
7	Delete cycle	Remove the selected cycle.
8	OK	Save (OK) the changes in the selected day program and return to the previous screen.
9	Back	Return (←) to the previous screen.


5.10.5 Change room temperatures and switching cycles in the day program

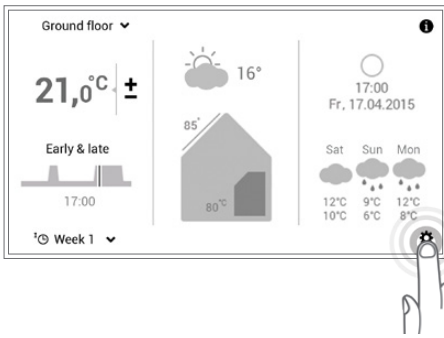


1 Touch the **Main menu** (⚙️) button to select it.

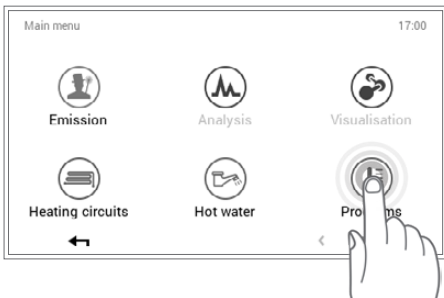

2 Touch the **Programs** button to select it.

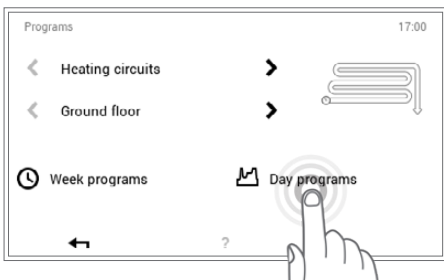


3 The overview for the heating circuit and the program selection appears. Select the required heating circuit and then **Day programs**.

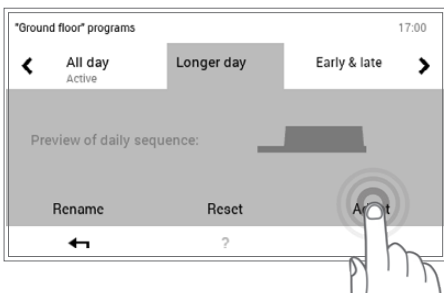


4 Select the desired day program (example: longer day) with the **horizontal arrows** (◀ ▶). Touch the **Adapt** button to make settings in the selected day program.



The names of the day programs may be different if they have already been changed.

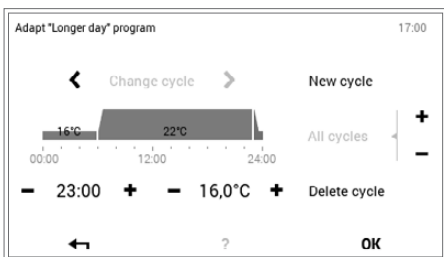


5 The overview of the selected day program is opened. Various adaptations can be made to the selected day program/switching cycle using **plus** (+) and **minus** (-). Press **OK** to accept the entry.

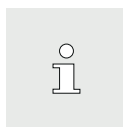


Refer to 5.10.4 page 45 for a detailed description of the day program overview.




6 A change message is displayed. Confirm this with **OK**.

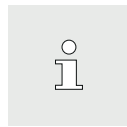


The change now acts both in week program 1 and in week program 2 (on all days of the week to which the changed day program is assigned).

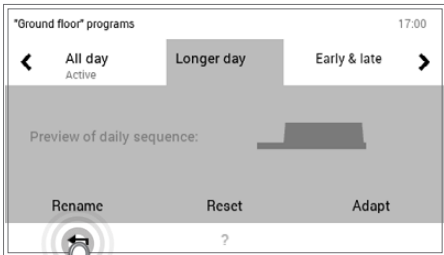


7 The adaptations are displayed in the selected day program. Press **Back** (←) to return to the menu item.

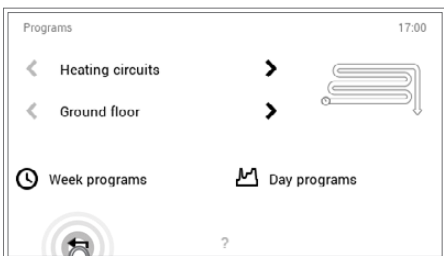

8 Touch **Back** (←) to close the **Programs** menu item.

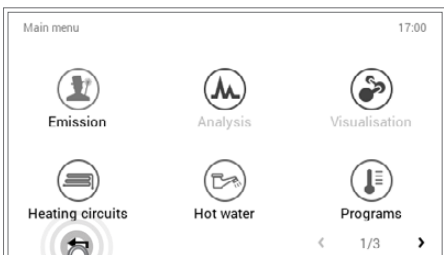


9 Select **Back** (←) again to close the main menu.

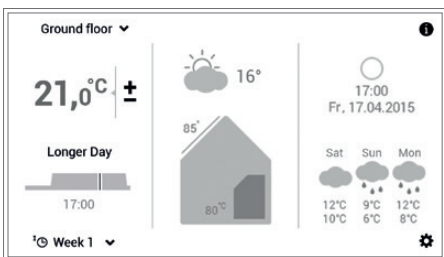

10 If the edited day program is active, the settings are displayed on the start screen.


5.10.6 Rename day program

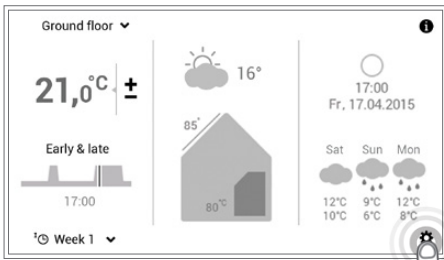


1 Touch the **Main menu** (⚙️) button to select it.




2 Touch the **Programs** button to select it.

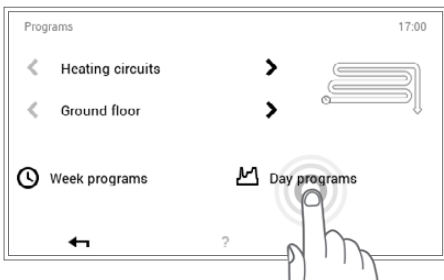

3 The overview for the heating circuit and the program selection appears. Select the required heating circuit and then **Day programs**.

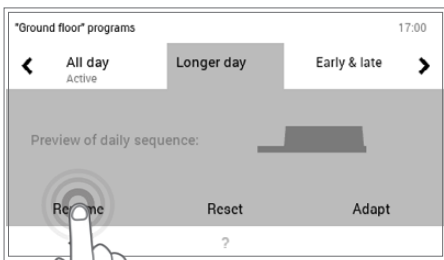


4 Select the desired day program (example: longer day) with the horizontal arrows (◀ ▶). Touch the **Rename** button to select it.

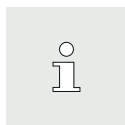


The names of the day programs may be different if they have already been changed.




5 A keypad appears on the screen that you can use for renaming the selected day program. Press **OK** to accept the entry.

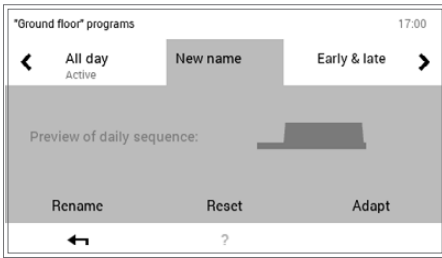


6 The new name is displayed in the selected day program. Press **Back** (←) to return to the menu item.

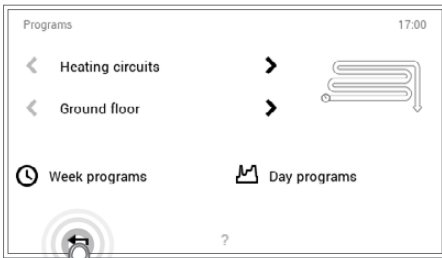

7 Touch **Back** (←) to close the **Programs** menu item.

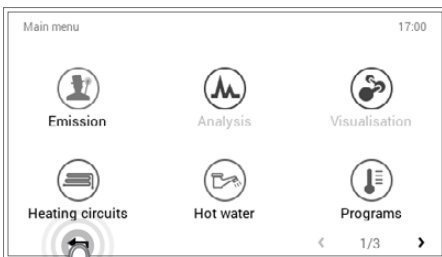


8 Select **Back** (←) again to close the main menu.

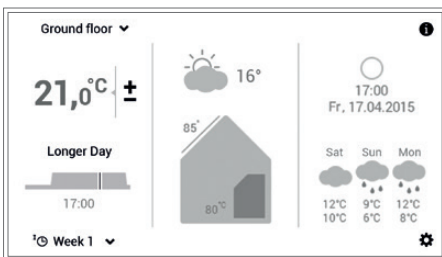


9 If the newly named day program is active as the basic program, the new name is displayed on the start screen.


5.10.7 Reset day program

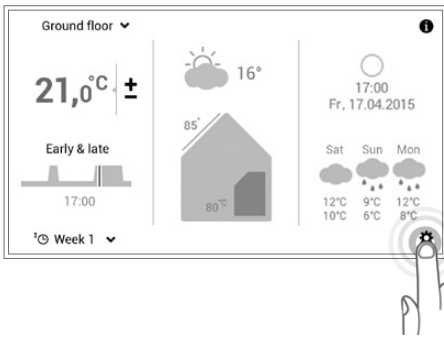


1 Touch the **Main menu** (⚙️) button to select it.

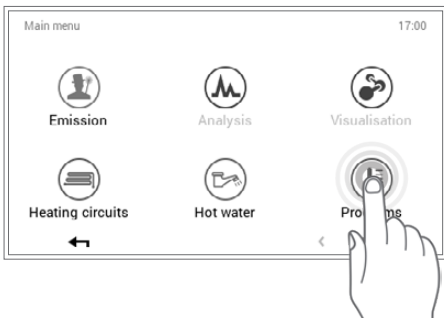


2 Touch the **Programs** button to select it.

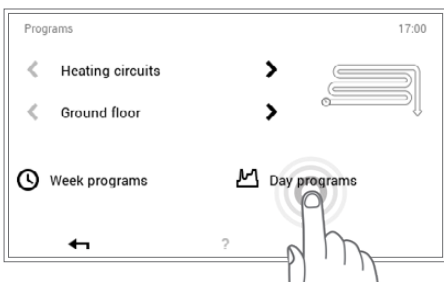


3 The overview for the heating circuit and the program selection appears. Select the required heating circuit and then **Day programs**.

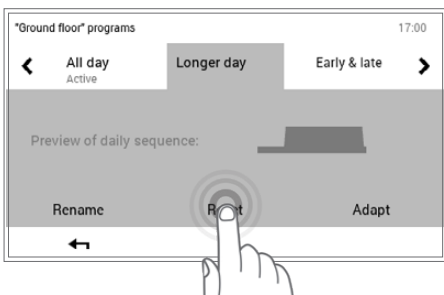


4 Select the desired day program (example: longer day) with the **horizontal arrows** (◀ ▶). Touch the **Reset** button to reset the settings in the selected day program to their default values.

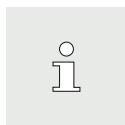


The names of the day programs may be different if they have already been changed.

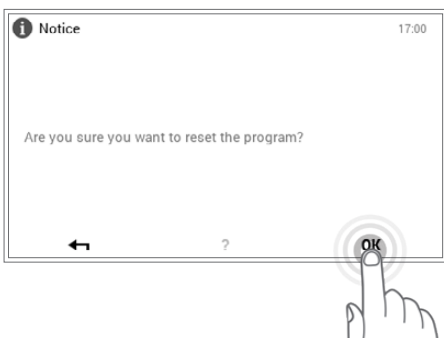


5 A confirmation message is displayed. Confirm this with **OK**. Press **Back** (◀) to go back without resetting the program.

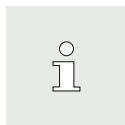


The name, the switching cycles as well as the required room temperatures of the day program are reset to the factory setting. If the reset day program is used in the week program, the factory setting is also active for this.

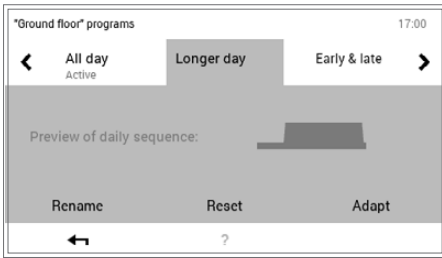


6 The pre-programmed standard program is displayed in the selected day program. Press **Back** (←) to return to the menu item.

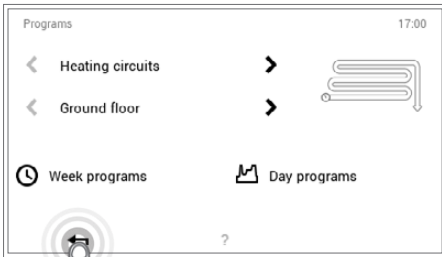

7 Touch **Back** (←) to close the **Programs** menu item.

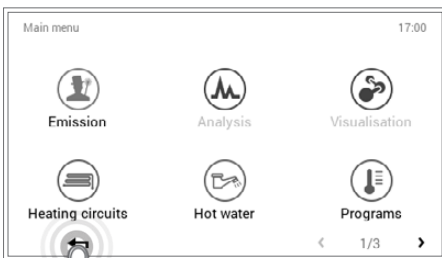


8 Select **Back** (←) again to close the main menu.

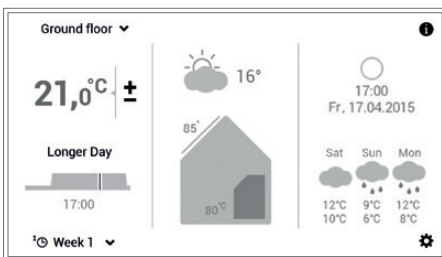

9 If the reset day program is active, the default settings are displayed on the start screen.


5.11 Hot water

Like in the area of the heating circuits, it is also possible to work with basic, week and day programs for hot water. The hot water programs that can be selected are independent from the heating circuit. Bear in mind that you have to activate each of the basic, week and day programs of the hot water separately (5.7.6 page 26) and edit them (5.12.6 page 64, no. 1).

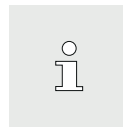

There is no synchronisation of the hot water temperature during the joint operating mode (5.7.8 page 28).


5.11.1 Hot water operating elements

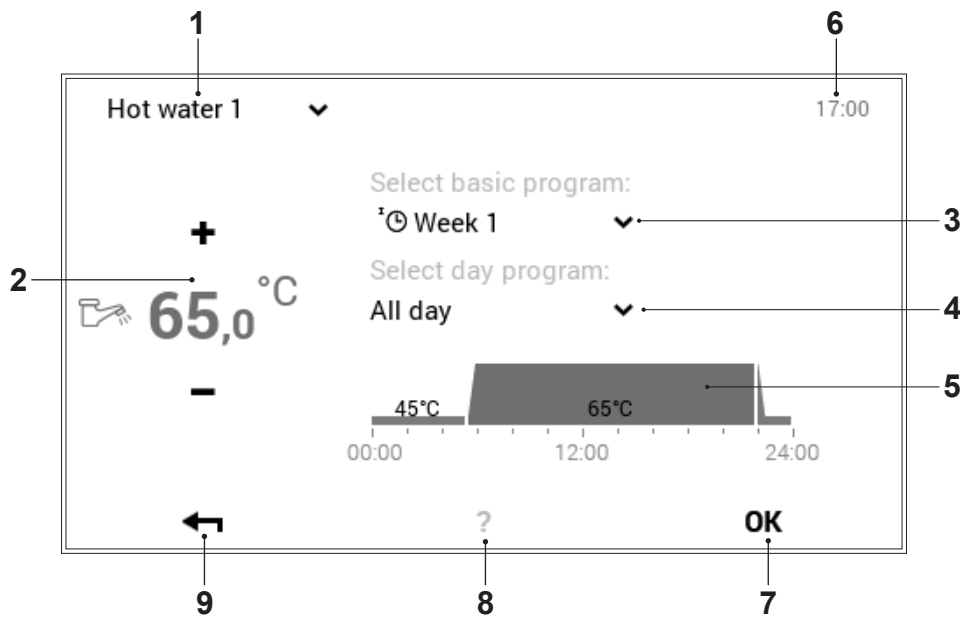


No.	Designation	Function
1	Hot water circuit	Display of the hot water circuit to be edited. Changes to the menu item are only stored in the selected hot water circuit. Use the down arrow (▼) to switch to another hot water circuit in the heating system.
2	Hot water temperature	Represents the hot water temperature desired in the particular switching cycle. The hot water temperature can be changed in the active switching cycle using plus (+) and minus (-). (→ page 27)
3	Basic program	Selection of the basic program. Use the down arrow (▼) to select a new program for editing.
4	Day program	Active day program in the week program. Use the down arrow (▼) to change the day program.
5	Switching cycles	Graphical display of the currently selected day program with all time cycles and corresponding temperature specifications. The time period marked in yellow shows the active cycle in which the water temperature can be changed with plus (+) and minus (-).
6	Time of day	Displays the current time.
7	OK	Save (OK) the changes in the selected hot water circuit and return to the previous screen
8	Help	No function is available at present
9	Back	Used as a button (←) for returning to the main menu.

5.11.2 Week programs – hot water


As well as the week and day programs for the heating cycles, the TopTronic® E control module includes additional week and day programs for water heating. The structure of the programs and the functions are identical.

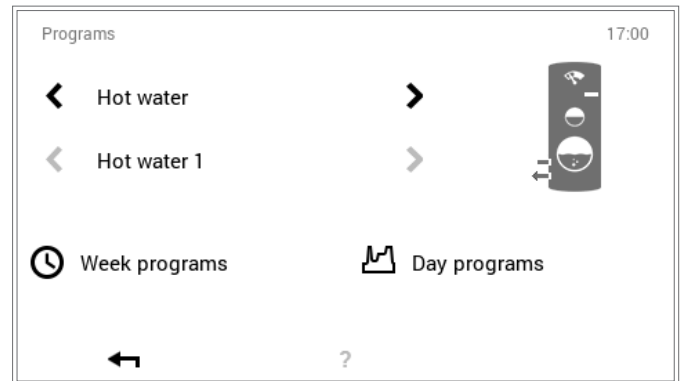


 The settings can be made using **Main menu (⚙) > Programs**. For a detailed description, refer to 5.12.6 page 64, no. 1.


5.11.3 Week program default settings – hot water

The following week programs are used as default settings and can be activated with **Main menu (⚙) > Hot water**. The two week programs can be individually edited (5.12.6 page 64), renamed (5.12.6 page 64) and reset (5.12.6 page 64).

 Resetting the week programs does not reset the day programs they include!

Week program default settings – hot water:

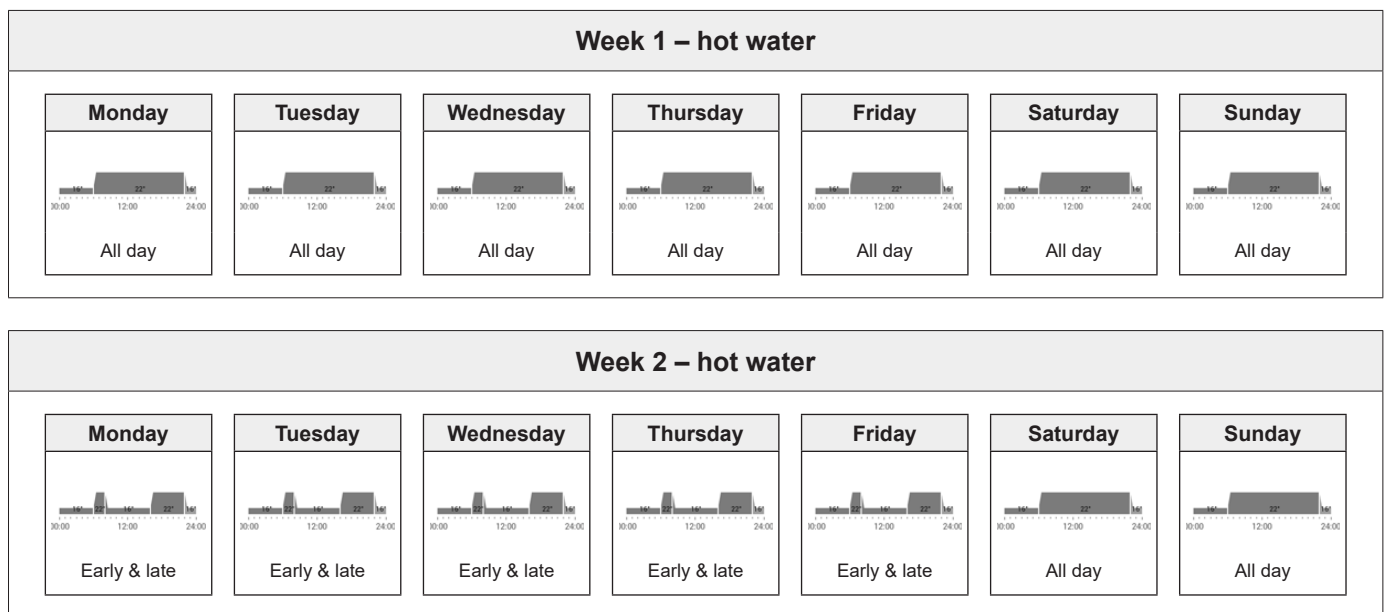

 Attention: Each hot water circuit has two week programs. These can be composed of five different day programs (5.11.4 page 54). These day programs only apply in the particular hot water circuit and are independent from the programs in other circuits!

5.11.4 Day programs / switching cycles for hot water

You can adapt the hot water day programs and switching cycles to your individual requirements and, in this way, control the water heating specifically for the required time period and hot water temperature if you use the hot water on a regular basis, for example.



- The hot water day programs/switching cycles are independent from the heating circuit day programs (5.10 page 41).
- The preset day programs with defined switching cycles can be adapted and renamed.
- The switching cycles of a day program are only active if the corresponding week program is selected as the basic program.
- A maximum of six switching cycles are possible for each day program.

5.11.5 Default settings for day programs / switching cycles – hot water

In the factory setting, the names and the switching cycles of the hot water day programs are predefined as with the heating circuits. Two of these standard day programs (all day and early & late) are assigned to both week programs **Week 1** and **Week 2**. If you adapt these two day programs to your individual requirements, you need to consider that both week programs are also changed (5.11.2 page 53). You can edit the default settings listed below as you require (5.12.6 page 64), rename them at any time (5.12.6 page 64) and reset to the default settings (5.12.6 page 64).

Default settings for day programs – hot water:

Day programs	Switching cycle / temperature			Example
	from	to	°C	
All day 	00:00	06:00	45	I work at home and I am present all day.
	05:30	22:00	50	
	22:00	00:00	45	
Early & late 	00:00	05:30	45	I go to work at 08:00 hours in the morning and I do not return home until 17:00 hours in the evening.
	05:30	08:00	50	
	08:00	15:30	45	
	15:30	22:00	50	
	22:00	00:00	45	
Only evening 	00:00	15:30	45	I do not need any hot water in the morning before I set off to work. I get back home at 17:00 hours in the evening.
	15:30	22:00	50	
	22:00	00:00	45	
All day legio 	00:00	05:30	45	I work at home and I am present all day. In addition, the legionella function is active (5.11.6 page 55).
	05:30	15:30	50	
	15:30	16:30	60	
	16:30	22:00	50	
	22:00	00:00	45	

NEW




from	to	°C
00:00	05:30	45
05:30	08:00	50
08:00	15:30	45
15:30	22:00	50
22:00	00:00	45

I create my own day program and adapt the switching cycles individually to my requirements. I use the switching cycles of the "Early & late" day program as a template.


5.11.6 Legionella function

Legionella are bacteria that can cause Legionnaire's disease. The optimum conditions for these bacteria to exist are hot water that is kept between 25 and 50 °C for long periods. Legionella are killed off when the full content of the water tank is heated through to 60 °C. The TopTronic® E control module includes a separate hot water day program (all day legio) that can be activated once a week in the week program.

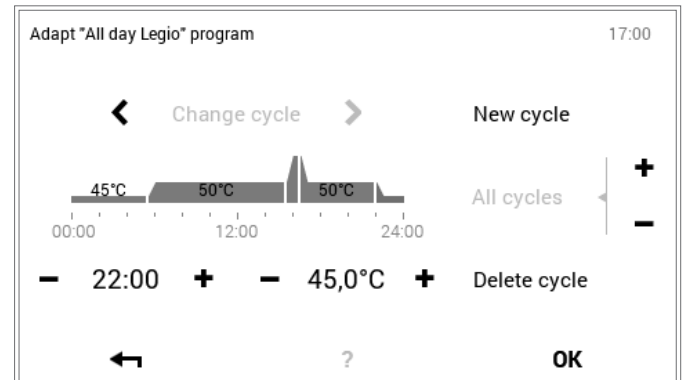


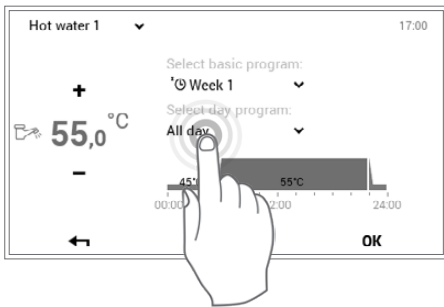
i The legionella function can be activated in the **Main menu (⚙️) > Programs** (5.12.6 page 64) by allocating the "all day legio" day program in the week program.

5.11.7 Recharging hot water

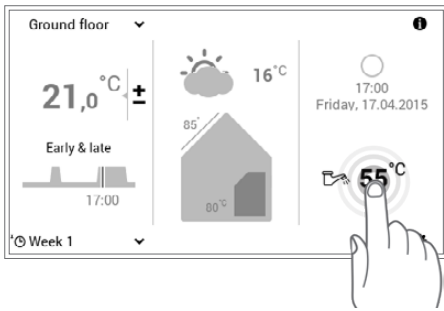


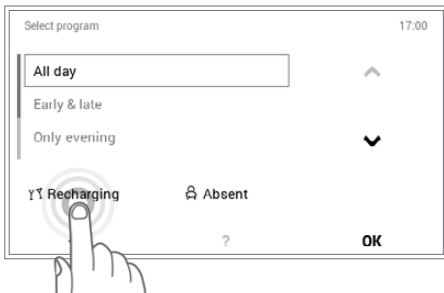
1 Touch the displayed water temperature to select it.

 In connection with the HovalConnect, the weather forecast is displayed on your start screen as an option. You can also access the function for adapting the required water temperature using **Main menu > Hot water** (5.12.1 page 59).




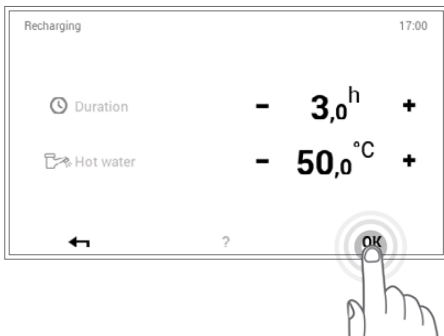
2 Touch the active **hot water day program** to select it.

 The hot water day program is independent from the heating circuit day program. For example, it can be set to “early & late” while the heating operation is running with “all day”.




3 In the program selection, select the **Recharging** button.

 With “Recharging”, it is possible to heat additional hot water. The duration and the hot water temperature can be set individually.




4 Press plus (+) and minus (–) to set the required duration and water temperature for recharging. Press **OK** to accept the settings.

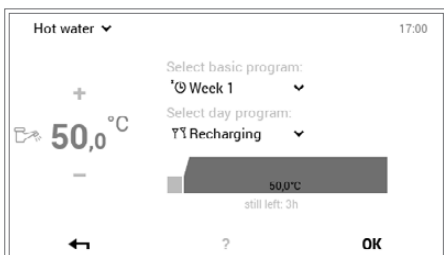

5 Hot water recharging is shown in the menu. Confirm the entries with **OK**.




6 A confirmation message is displayed. Confirm this with **OK**. Touch the **Back** (←) button if you want to edit the settings again.

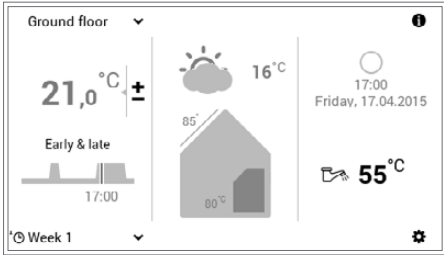

7 The current hot water temperature is displayed on the start screen and goes up or down until the desired water temperature of the recharging is reached.


5.11.8 Set hot water program to absent

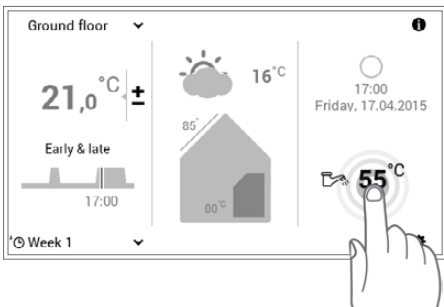


1 Touch the displayed **hot water temperature** to select it.




In connection with the HovalConnect, the weather forecast is displayed on your start screen as an option. You can also access the function for adapting the required water temperature using **Main menu > Hot water** (5.12.1 page 59).

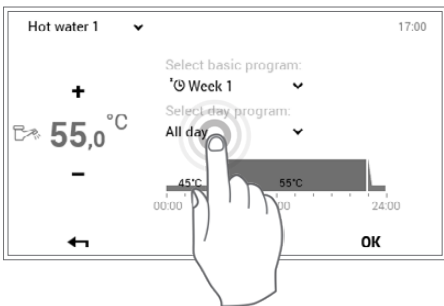


2 Touch the active **hot water day program** to select it.

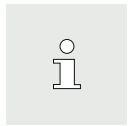


The hot water day program is independent from the heating circuit day program. For example, it can be set to “all day” while the heating operation is running with “early & late”.

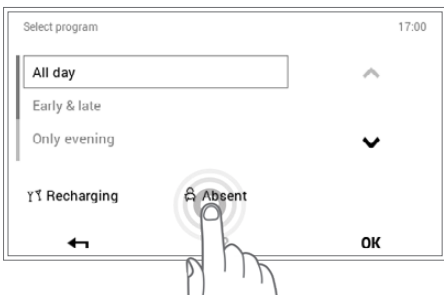


3 In the program selection, select the **Absent** button.

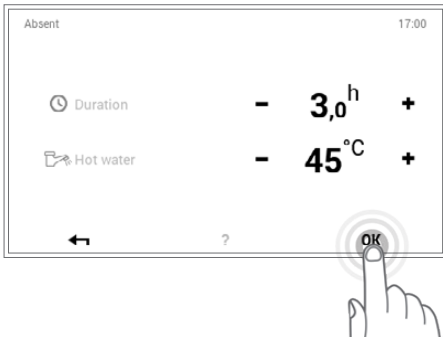


4 Press plus (+) and minus (-) to set the required duration of the absence as well as the desired water temperature. Press **OK** to accept the settings.

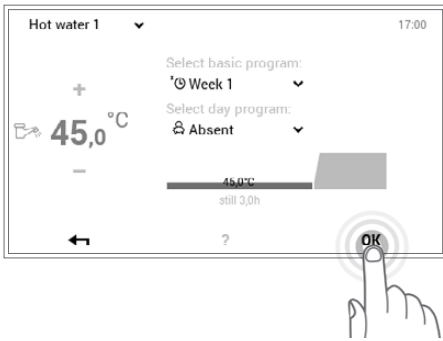

5 **Absent** is shown in the menu. Confirm the entries with **OK**.

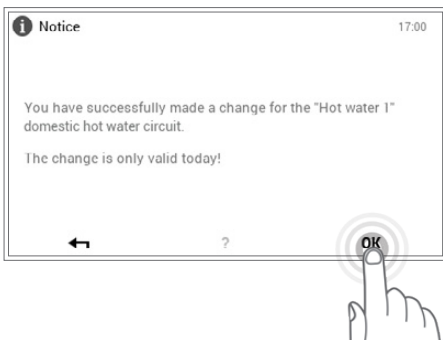


6 A confirmation message is displayed. Confirm this with **OK**. Touch the **Back** (←) button if you want to edit the settings again.

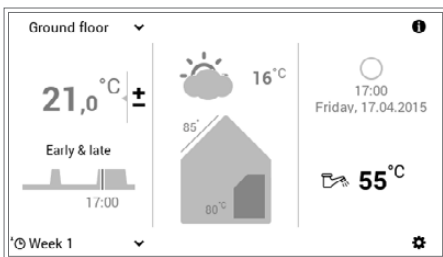

7 The current hot water temperature is displayed on the start screen and goes up or down until the desired water temperature for the absence is reached.

5.12 Other operating elements

5.12.1 Main menu view 1

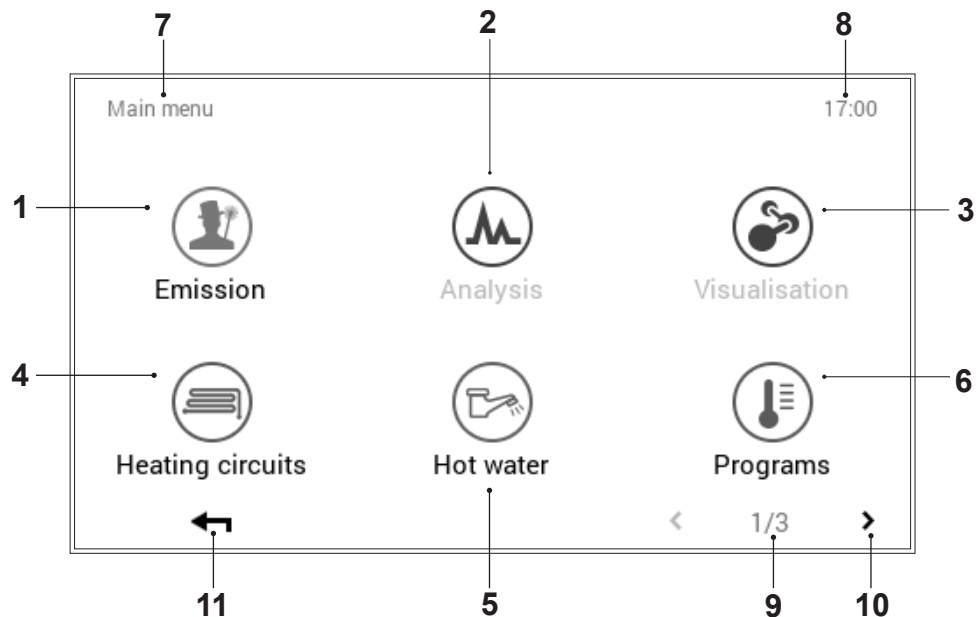


No.	Designation	Function
1	Emission metering	For heating specialist: setting the emission output limitation
2	Analysis	See 5.12.12 page 70
3	Visualisation	For heating specialist: not available with all heat generators
4	Heating circuits	Display and editing possibility of the selected heating circuit. Depending on the structure of the system, it is possible to select between one or more heating circuits. Information about the active operating and day program (5.12.7 page 65)
5	Hot water	Display and editing possibility of the selected hot water circuit. Depending on the structure of the system, it is also possible to select between one or more domestic hot water circuits in the hot water area. Specifications regarding an active operating and day program with adapted hot water temperature (5.11.1 page 52)
6	Programs	Menu item for adapting week and day programs in the selected heating or hot water circuit (5.12.6 page 64)
7	Position in the menu	Name of the currently selected menu item
8	Time of day	Displays the current time.
9	Page in the main menu	Display of the active main menu page (1)
10	Scroll	Arrow (➤) for navigating from main menu page 1 to main menu page 2
11	Back	Used as a button (↶) for returning to the start screen.




Individual menu items are active or inactive depending on the type of control module.


5.12.2 Main menu view 2

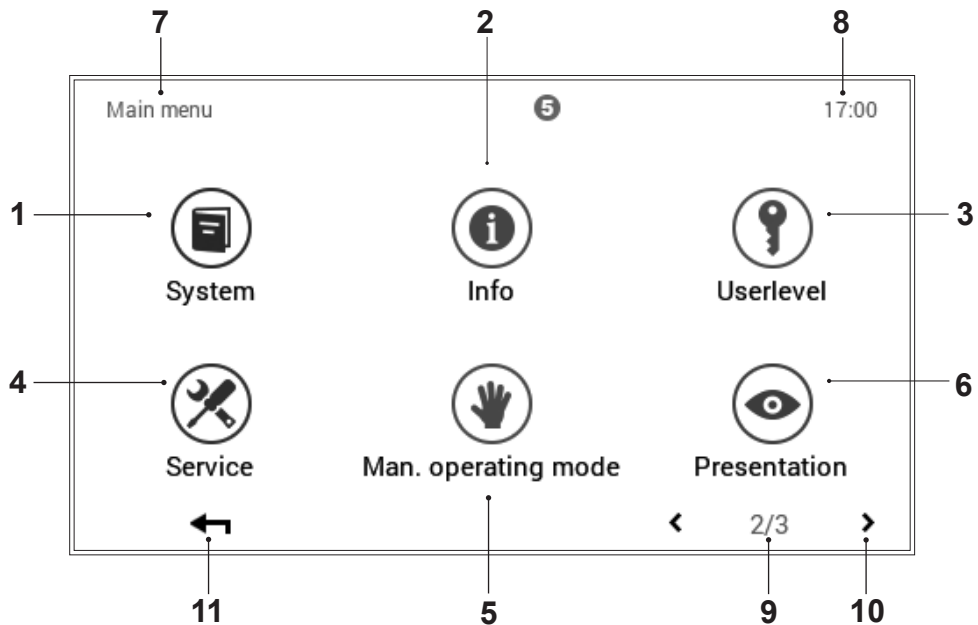

No.	Designation	Function
1	System	Provides information about maintenance, service and cleaning of the system.
2	Info	Display of various information about the system regarding the heat generator, heating circuit, hot water and solar. Bear in mind that a system may include several heat generators and heating or hot water circuits (5.12.8 page 66).
3	User level / authorisation level	For heating specialist: Releasing the authorisation level by entering the particular password
4	Service	For heating specialist: menu item for making adaptations to system settings
5	Manual mode	The heat generators, heating circuits and hot water circuits in the heating system can be operated manually at an adjustable temperature (5.12.11 page 69).
6	Presentation	Changing the current language, changing the colour scheme, adapting the start screen as well as various other settings (5.12.12 page 70, 5.12.13 page 71)
7	Position in the menu	Name of the currently selected menu item
8	Time of day	Displays the current time.
9	Page in the main menu	Display of the active main menu page (2)
10	Scroll	Arrow (< >) for navigating to main menu page 1 (left arrow) and main menu page 3 (right arrow)
11	Back	Used as a button (←) for returning to the start screen.

 Individual menu items are active or inactive depending on the type of control module.

5.12.3 Main menu view 3

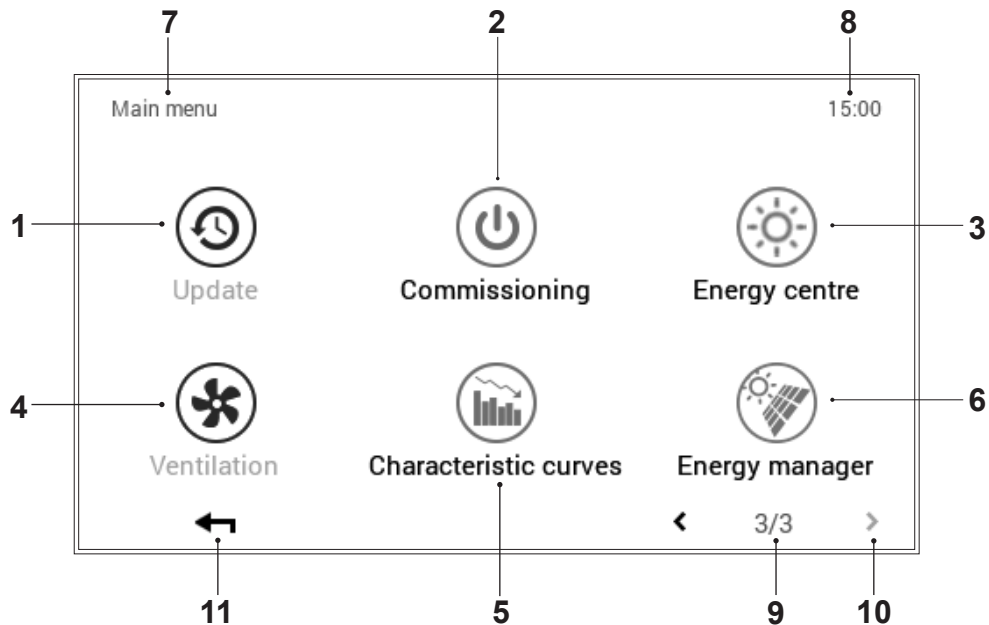


No.	Designation	Function
1	Update	Menu item only for heating specialist
2	Commissioning	Menu item only for heating specialist
3	Power station	Influence of weather forecast on heating. Selection of the heating or hot water circuit to be edited only functions if.
4	Ventilation	Only active in connection with a residential ventilation system. (comfort plus)
5	Heating and cooling characteristic (optional: for heat pumps only)	The characteristic curves are normally set by the specialist during commissioning of the heating system. They describe the ratio between the installation flow temperature and the current outdoor temperature. When using a room control module, the characteristic curves are automatically optimised by the TopTronic® E.
6	Energy Manager	The Energy Manager visualises the power generation and is only active in connection with a photovoltaic system.
7	Position in the menu	Name of the currently selected menu item
8	Time of day	Displays the current time.
9	Page in the main menu	Display of the active main menu page (1)
10	Scroll	Arrow (◀) for navigating from main menu page 3 to main menu page 2
11	Back	Used as a button (↶) for returning to the start screen.



Individual menu items are active or inactive depending on the type of control module.

5.12.4 Power station


(Main menu / Energy control)

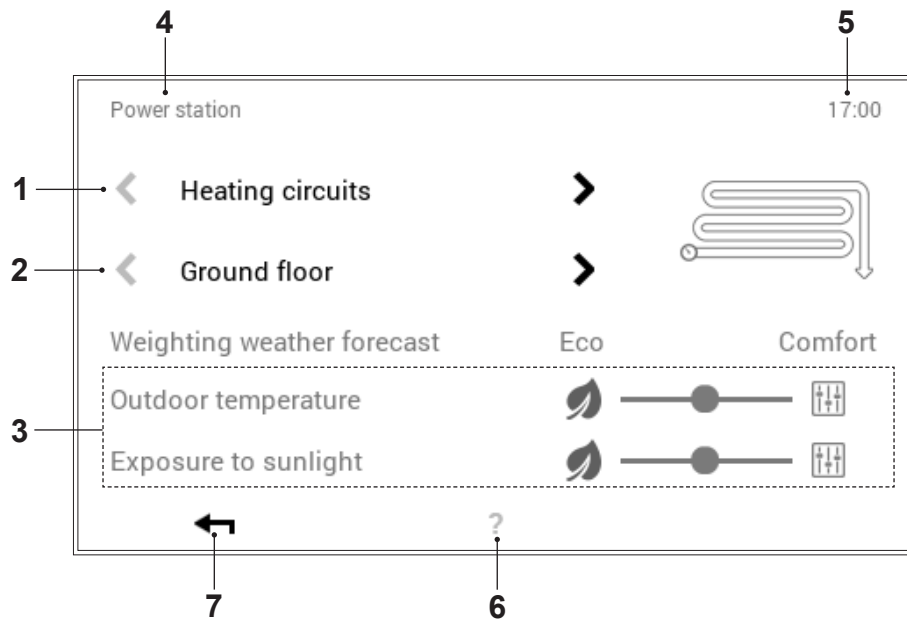


No.	Designation	Function
1	Heating circuits	Selection of the heating circuit to be edited.
2	Circuit selection	There can be several circuits in the selected heating circuit. If the system contains more than one circuit, this is indicated by the white, active horizontal arrows (◀ ▶). If there is only one heating or hot water circuit, the arrows are greyed out.
3	Eco Comfort slider Outdoor temperature Eco Comfort slider Exposure to sunlight	<p>If the slider is moved to “Eco”, the heating control (e.g. for underfloor heating) is influenced by the outdoor temperature forecast in the weather forecast to the greatest possible extent.</p> <p>If the slider is moved to “Eco”, the heating control (e.g. for large, south-facing windows) is influenced by the exposure to sunlight information in the weather forecast to the greatest possible extent.</p> <p>If the slider is moved to “Comfort”, the weather forecast is not considered.</p> <div style="display: flex; align-items: center;"> <p>If the forecast is not received, a deviating “heat output” can be expected!</p> </div>
4	Position in the menu	Name of the currently selected menu item
5	Time of day	Displays the current time.
6	Help	No function is available at present
7	Back	Used as a button (↶) for returning to the main menu.


5.12.5 Power station

(Main menu / Energy control)

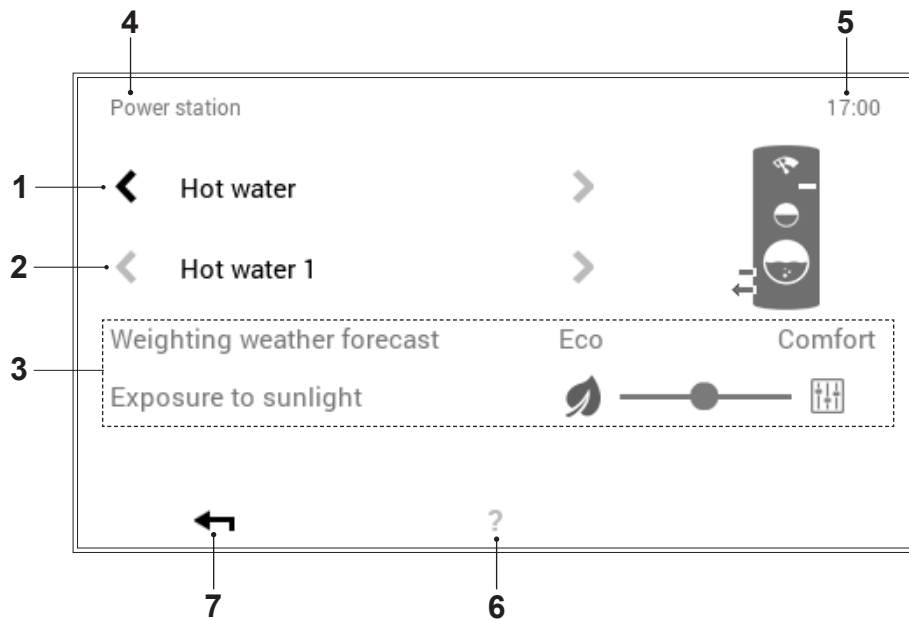

No.	Designation	Function
1	Hot water circuits	Selection of the hot water circuit to be edited
2	Circuit selection	There can be several circuits in the selected hot water circuit. If the system contains more than one circuit, this is indicated by the white, active horizontal arrows (◀ ▶). If there is only one heating or hot water circuit, the arrows are greyed out.
3	Eco Comfort slider	<p>If the slider is moved to “Eco”, the heat generator is influenced by the weather forecast to the greatest possible extent, i.e. it reduces the amount of hot water in good weather and increases it in bad weather.</p> <p>If the slider is moved to “Comfort”, the weather forecast is not considered.</p> <p> If the forecast is not received, a deviating “heat output” can be expected!</p>
4	Position in the menu	Name of the currently selected menu item
5	Time of day	Displays the current time.
6	Help	No function is available at present
7	Back	Used as a button (←) for returning to the main menu.


5.12.6 Programs
(Main menu / Programs)

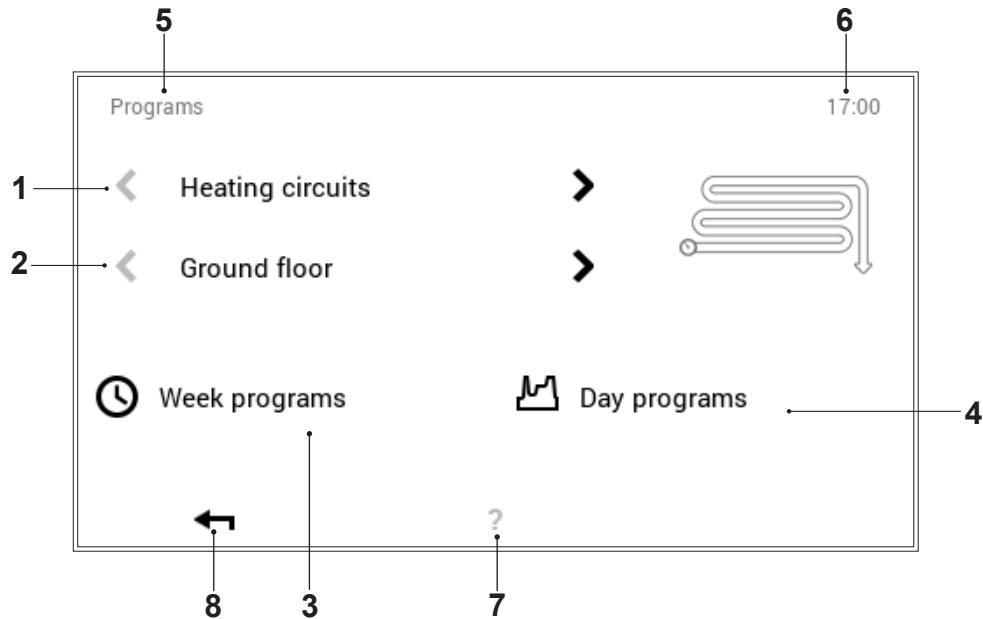

No.	Designation	Function
1	Heating or hot water circuits	Selection of the heating or hot water circuit to be edited. The room temperature is set in the "Heating circuit" menu, the water temperature is set in the hot water circuit. The horizontal arrows (◀ ▶) are used for selecting between the heating or hot water circuit.
2	Circuit selection	There can be several circuits in the selected heating or hot water circuit. If the system contains more than one circuit, this is indicated by the white, active horizontal arrows (◀ ▶). If there is only one heating or hot water circuit, the arrows are greyed out.
3	Week programs	Editing the week programs in the selected heating or hot water circuit. In the week program, a day program can be assigned to the different days of the week, and thus an individual week sequence can be defined (5.9 page 32).
4	Day programs	Day programs can be defined by max. six switching cycles per day. Editing the day programs in the selected heating or hot water circuit. The desired room temperature is set in the heating circuit, the desired hot water temperature is set in the hot water circuit (5.10 page 41).
5	Position in the menu	Name of the currently selected menu item
6	Time of day	Displays the current time.
7	Help	No function is available at present
8	Back	Used as a button (←) for returning to the main menu.

5.12.7 Heating circuit

(Main menu / Heating circ.)

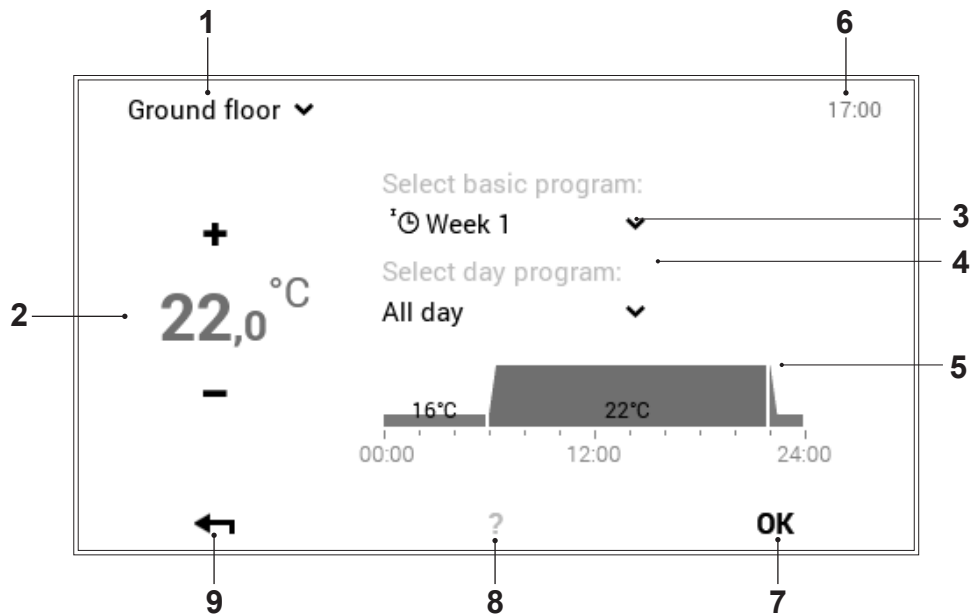


No.	Designation	Function
1	Active heating circuit	Display of the heating circuit to be edited. Changed settings are exclusively accepted in the selected heating circuit. Use the down arrow (▼) to change the heating circuit.
2	Desired temperature	Displays the temperature programmed in the switching cycle. The temperature can be changed in the active switching cycle using plus (+) and minus (-).
3	Basic program	Selection of the basic program. Use the down arrow (▼) to select a new program for editing.
4	Day program	Use the down arrow (▼) to change the day program.
5	Switching cycles	Graphical display of the currently selected day program with all time cycles and corresponding temperature specifications. The time period marked in yellow shows the currently active cycle in which the desired temperature can be changed with plus (+) and minus (-).
6	Time of day	Displays the current time.
7	OK	Save (OK) the changes in the selected heating circuit and return to the previous screen
8	Help	No function is available at present
9	Back	Used as a button (←) for returning to the main menu.



Temporary settings “Only for today” are not possible in the “Heating circ.” menu item.

5.12.8 Info


(Main menu / Info)

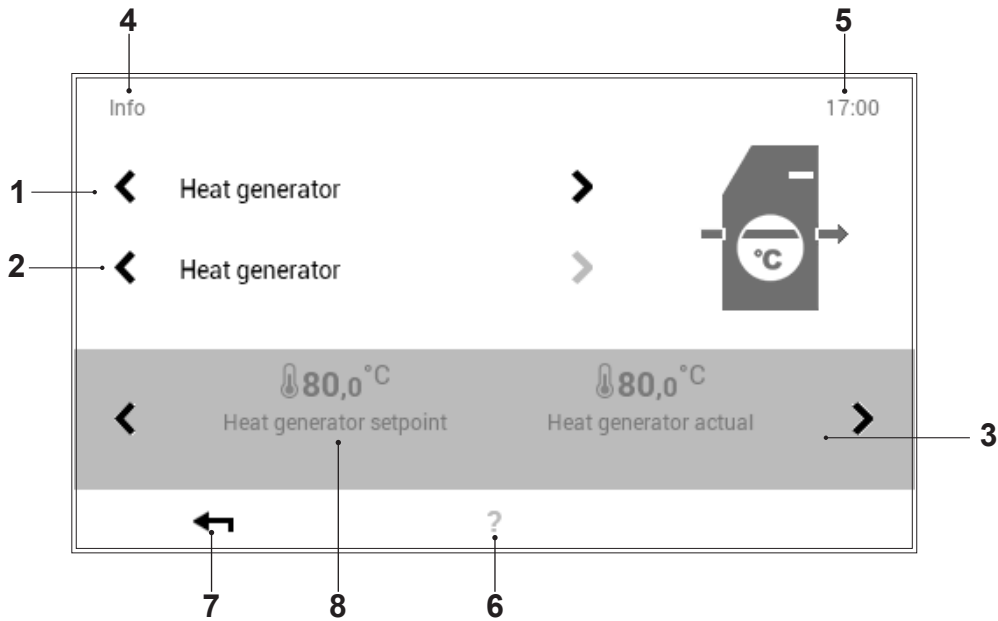

No.	Designation	Function
1	Heat generator / heating circuits / hot water	Selection of the system part. It is possible to switch between the heat generator, the heating circuit and the hot water area using the horizontal arrows (< >).
2	Detailed selection	Selection of the desired heat generator, heating circuit or hot water circuit. If the system contains several circuits, this is indicated by the white, active horizontal arrows (< >).
3	Information	Information about the selected system area. Additional output information can be displayed on the screen using the horizontal arrows (< >).
4	Position in the menu	Name of the currently selected menu item
5	Time of day	Displays the current time.
6	Help	No function is available at present
7	Back	Used as a button (←) for returning to the main menu.
8	Heat generator setpoint	With heat pumps: Under certain circumstances, at very low outside temperatures, it will not be possible to reach the required domestic hot water temperature or room temperature (the reference value is changed by the machine so that there will not be a fault cut-out).

5.12.9 Analysis


(Main menu / Analysis)

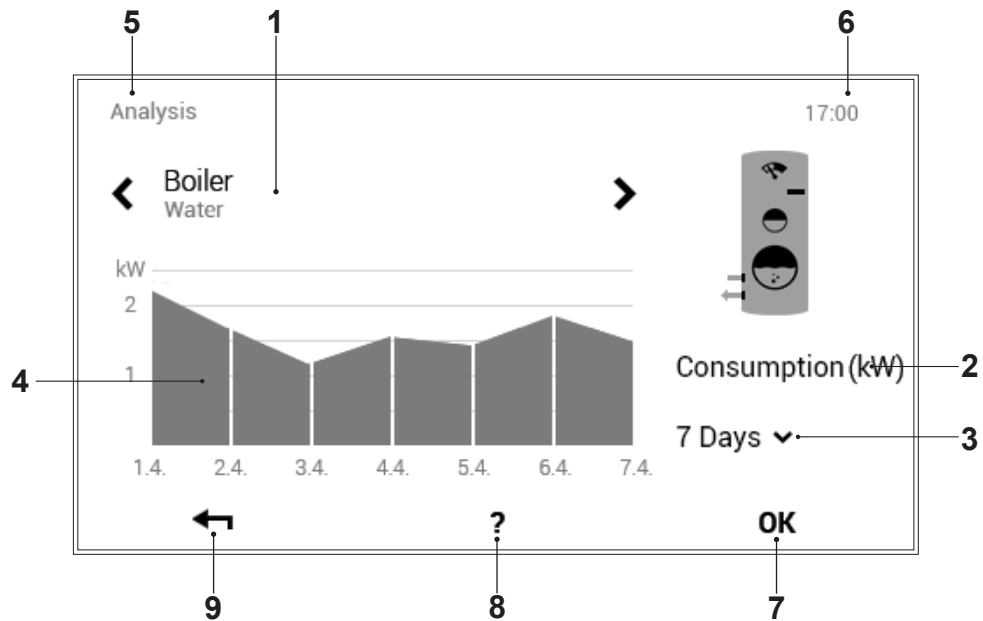

No.	Designation	Function
1	Heat generator / heating circuits / hot water	Selection of the area to be analysed. It is possible to select between the heat generator, the heating circuit and the hot water area using the horizontal arrows (< >).
2	Measuring parameter	Display of the recorded measuring parameter
3	Selection duration	Use the down arrow (▼) to select the required duration.
4	Analysis / graphic	Display of the measuring parameter of the selected heat generator, heating circuit or hot water in the desired duration
5	Position in the menu	Name of the currently selected menu item
6	Time of day	Displays the current time.
7	OK	Save (OK) the changes in the selected heating circuit and return to the previous screen
8	Help	No function is available at present
9	Back	Used as a button (←) for returning to the main menu.

5.12.10 Emission – only for heating specialist

(Main menu / Emission (not in with Heat pumps))

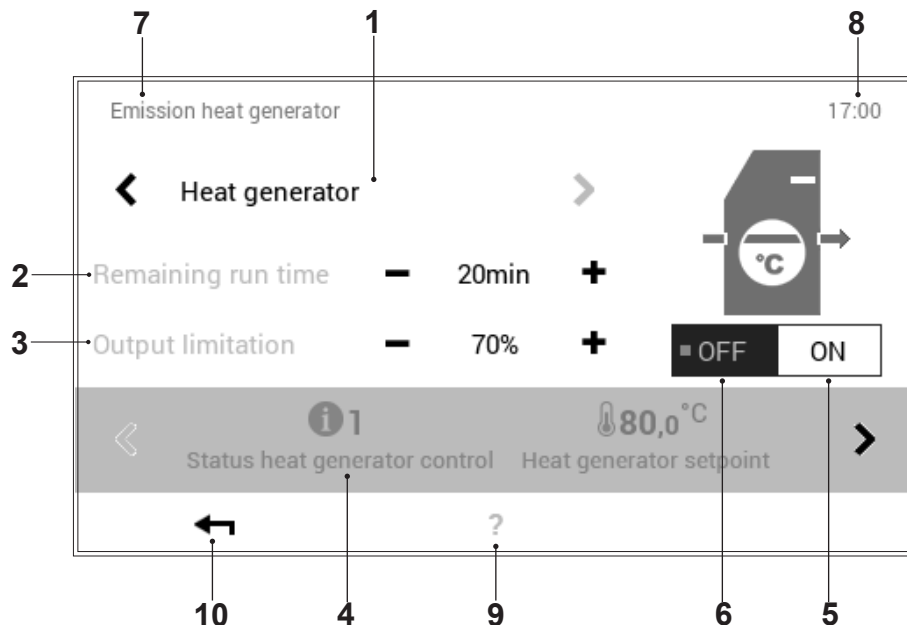


No.	Designation	Function
1	Selection heat generator	Display of the heat generators present in the heating system. The horizontal arrows (◀ ▶) are used for selecting the required heat generator.
2	Time	Duration of emission measurement. Setting the required time with plus (+) and minus (−), i.e. to be defined by the heating specialist before the start of the measurement. The heat generator is switched off after the time has elapsed.
3	Power limitation	Entry of the required power limitation. Regulation of the required power limitation by plus (+) and minus (−).
4	System information	Information about the system in the selected heat generator. Additional information can be displayed with the horizontal arrows (◀ ▶).
5	ON	Switching on the heat generator
6	OFF	Switching off the heat generator
7	Position in the menu	Name of the currently selected menu item
8	Time of day	Displays the current time.
9	Help	No function is available at present
10	Back	Used as a button (←) for returning to the main menu.



The emission measurement is automatically deactivated when the “Emission” menu item is exited!

5.12.11 Manual operation


(Main menu / Manual operating mode)

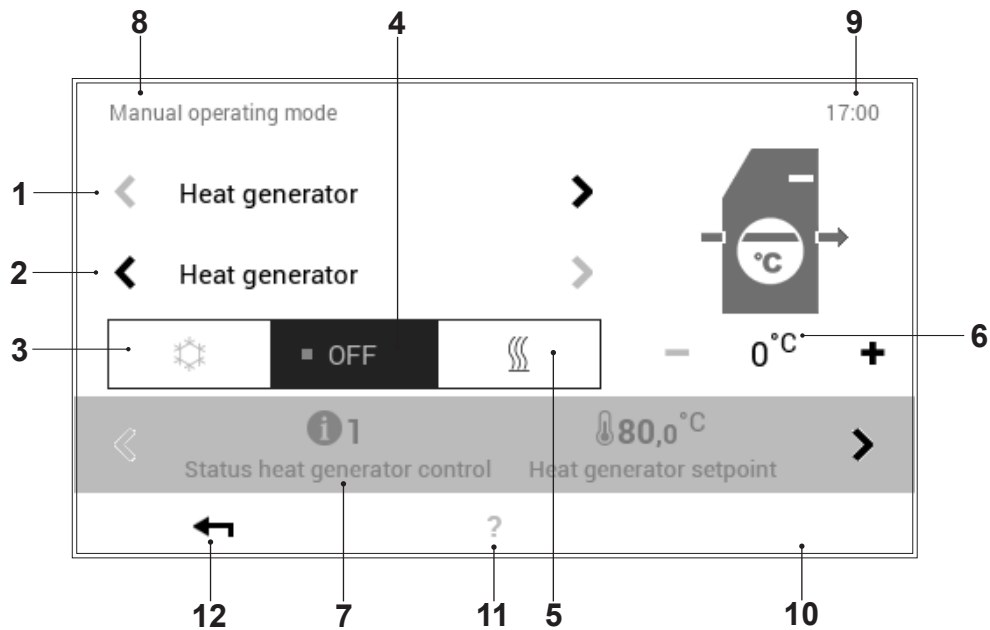

No.	Designation	Function
1	Heat generator / heating circuits	The control permits individual manual operation, i.e. manual operation can be activated on any heat generator and heating circuit that is present.
2	Detailed selection	Selection of the desired heat generator or heating circuit. The system can include several heat generators and heating circuits. If there is more than one heat generator/circuit, the horizontal arrows (◀ ▶) are shown in white. If there is only one heating or hot water circuit available for selection, the arrows are greyed out and cannot be selected.
3	Cooling	Activation of cooling operation (if possible in the system)
4	OFF	Switch off active manual operation. The system switches over to automatic operation.
5	Heating	Activate "Heating" manual operation
6	Temperature	Display of the desired temperature. The temperature can be changed using plus (+) and minus (-).
7	Information	Information about the selected manual operation. Additional information can be displayed on the screen with the horizontal arrows (◀ ▶).
8	Position in the menu	Name of the currently selected menu item
9	Time of day	Displays the current time.
10	OK	Save (OK) the changes in the selected heating circuit and return to the previous screen
11	Help	No function is available at present
12	Back	Used as a button (←) for returning to the main menu.

5.12.12 Presentation 1


(Main menu / Presentation)

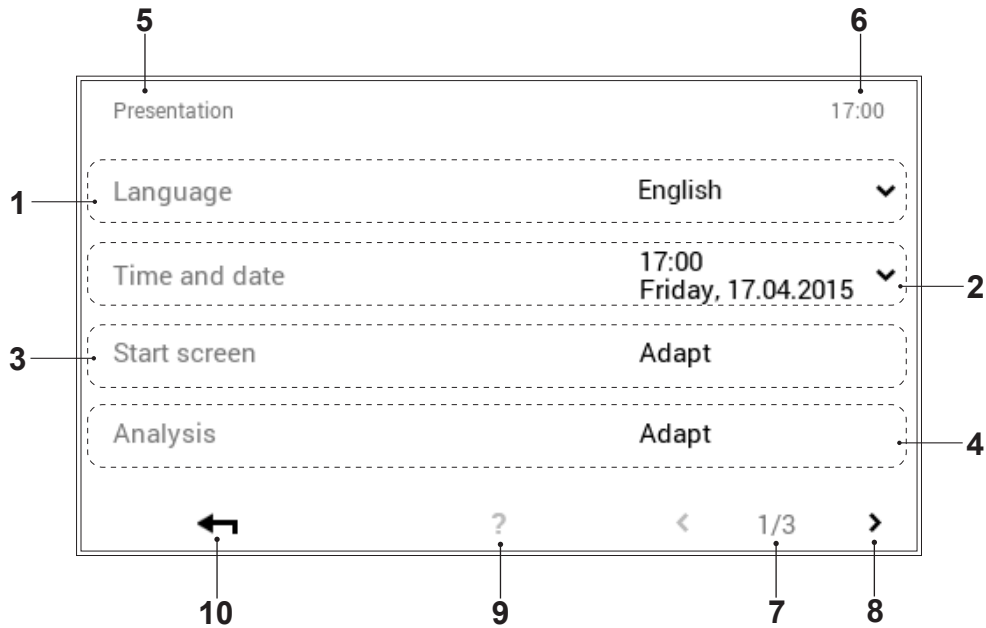

No.	Designation	Function
1	Language	Selection of the desired language. The active language can be selected with the down arrow (▼).
2	Time & date	Changing the current date and time
3	Start screen	Selection of the display elements you want on the start screen. Select the "Adapt" button to make adaptations to the start screen.
	Changing the start screen	To change the desired «Start screen», see 5.6.2 page 20.
4	Analysis	Setting of the values to be recorded (analysis).
5	Position in the menu	Name of the currently selected menu item
6	Time of day	Displays the current time.
7	Page in the menu	Display of the active menu page (1). Menu page 3 only for heating specialist.
8	Scroll	Arrow (▶) for navigating from menu page 1 to page 2
9	Help	No function is available at present
10	Back	Used as a button (←) for returning to the main menu.

5.12.13 Presentation 2


(Main menu / Presentation)

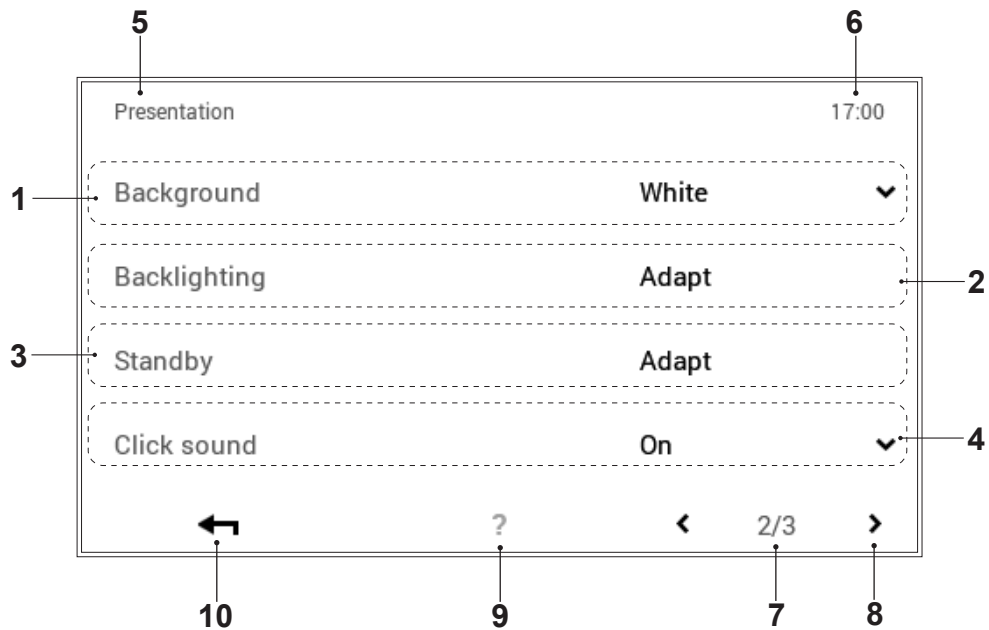

No.	Designation	Function
1	Background	Adaptation of the colour scheme of the control. The arrow key (▼) can be used for selecting between a black and a white background.
2	Backlighting	Adaptation of the current display mode, time until the screen is darkened as well as percentage specification for maximum and minimum screen brightness.
3	Standby	<p><u>Standby behaviour</u> Screen with active standby modus. Depending on the selection, when the screen enters standby mode, it switches to the start screen, to the “Visualisation” main menu item or to sleep mode (black screen). Selecting “No standby” means that standby mode is deactivated.</p> <p><u>Duration until standby</u> Entry of the required number of minutes until the control enters standby mode. The number of minutes can be changed with plus (+) and minus (-). To deactivate standby mode, it is necessary for “No standby” to be selected in the “Standby behaviour” menu item (no. 4).</p> <p><u>Sleep mode at night</u> When it is dark, the touchscreen automatically switches to sleep mode, i.e. the screen switches itself off and is reactivated when daylight returns.</p> <p><u>Operation lock of the screen:</u> For activation/deactivation of the operation lock, a sequence of numbers (freely selectable <input type="text"/>) keep in a safe place) must be entered. After entry, touch the “Confirm operation lock” message to activate it.</p>
4	Click sound	Can be switched on/off
5	Position in the menu	Name of the currently selected menu item.
6	Time of day	Displays the current time.
7	Page in the menu	Display of the active menu page (2).
8	Scroll	Arrow (◀) for navigating from menu page 2 to page 1.
9	Help	No function is available at present.
10	Back	Used as a button (←) for returning to the main menu.

5.12.14 Presentation 3

(Main menu / Presentation)

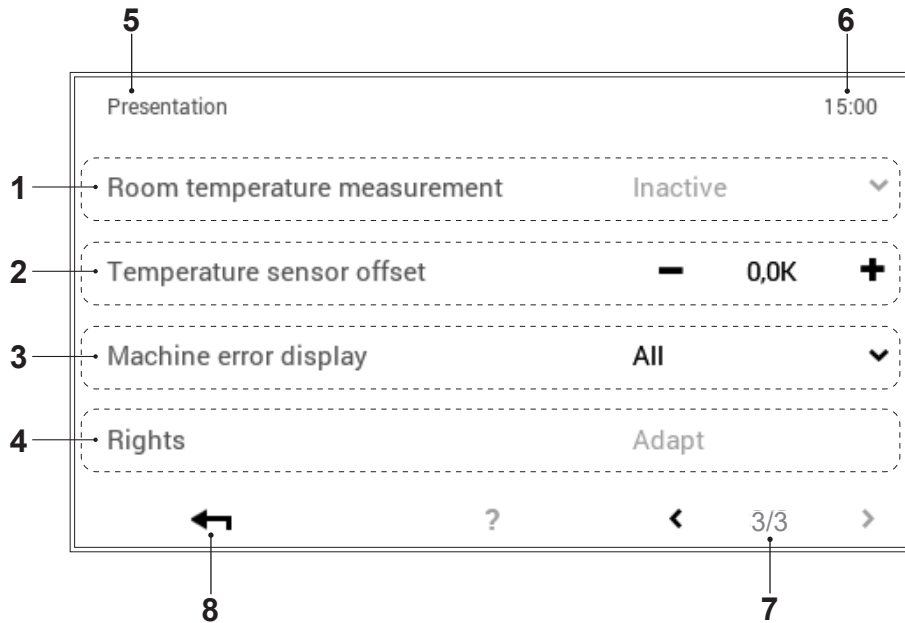

No.	Designation	Function
1	Room temperature measurement	Can only be adjusted by the specialist
2	Temperature sensor offset	For the heating technician only
3	Machine error display	For the heating technician only
4	Permissions	Can only be adjusted by the specialist
5	Position in the menu	Name of the currently selected menu item.
6	Time of day	Displays the current time.
7	Page in the menu	Display of the active menu page (3).
8	Back	Used as a button (←) for returning to the main menu.

5.13 Further settings

5.13.1 Set/change WiFi password




If there is a change of provider (Internet service provider), the WiFi password must be re-entered so that the system will connect to the Internet again. The WiFi logon can be carried out on any operating module.

You will find a video tutorial under the following online link, which explains how to enter a new password.

- Alternatively, you can also scan the QR code to access the video!


<https://youtu.be/sATBGdIpnSw>

5.13.2 Setting the language

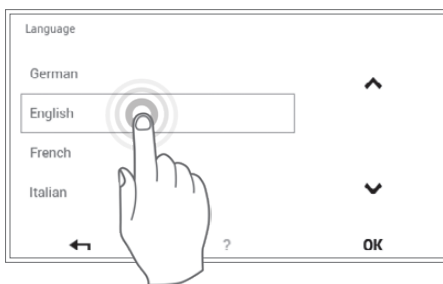


The language of the control can be changed at **Start screen > Main menu (⚙) > Presentation > Language** (5.12.12 page 70, no. 1).

5.13.3 Adapt start screen individually

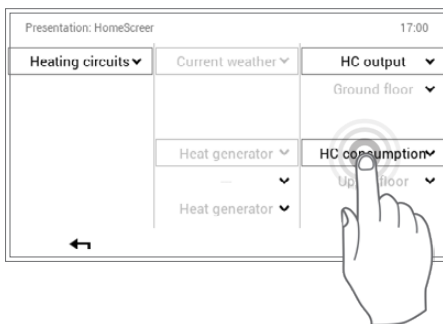

The elements of the start screen can be individually adapted at **Start screen > Main menu (⚙) > Presentation > Start screen** (5.12.12 page 70, no. 5).


5.13.4 Rename heating circuit

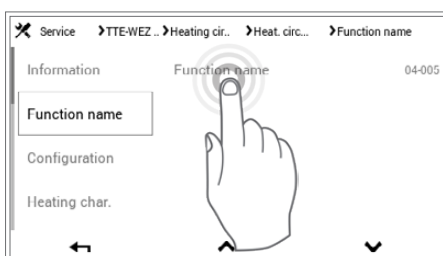


You can give a name to your heating circuit at **Start screen > Main menu > Service > TTE-WEZ > Heating circ. > Select heating circuit > Function name (^v) > Select function name > Select heating circuit > Keyboard inputs**. Bear in mind that your system can include one or more heating circuits.

6. Cooling system control (optional)


The "cooling operation" function can be activated by the installation technician during commissioning by using a corresponding device.


 If cooling mode is active, the system changes over automatically between heating operation and cooling operation depending on the outside temperature.


If the room temperature on the start screen is shown in blue, cooling is in progress. The required room temperature can be changed by touching the +/- keys (see Heating operation - chapter 5.7.1 page 22).

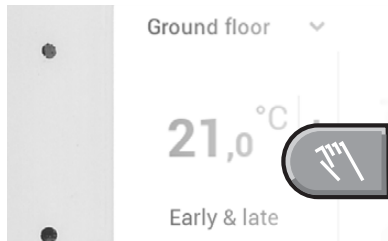


6.1 Setting day program/switching cycles

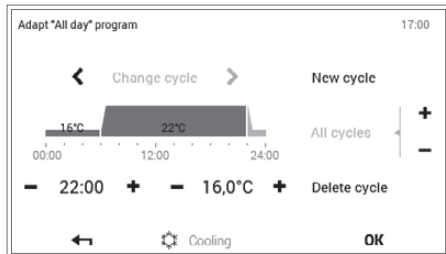



1 The overview of the selected day program can be reached by **Main menu**  **> Programs > Day programs > Adapt**. Various adaptations can be made to the selected day program/switching cycle using **plus (+)** and **minus (-)**. Press **OK** to accept the entry.

 For details about the settings for the day program/switching cycle, refer to chapter 5.10 page 41

 Cooling operation and heating operation have the same switching times. If the switching times for heating operation are changed, the switching times for cooling operation are changed in the same way.


Exclusively the room temperatures can be set differently for heating/cooling operation.

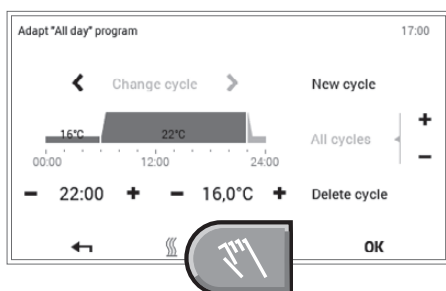

2 To be able to set the required room temperatures for cooling operation, it is necessary for  **Cooling** to be displayed - if it is not, change over by touching.

7. Alarm messages

7.1 Display alarm message

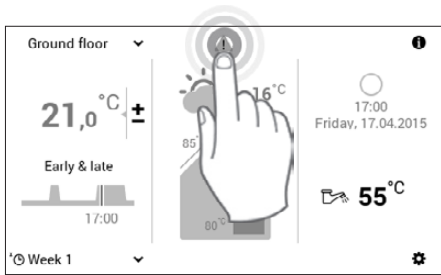


1 Touch the displayed **alarm message icon** to select it.




2 Touch **Details** (▼) to select it.




Use the **Display All** (▼) button at the top left of the screen to select all prior alarm messages by category (information, warning, etc.).

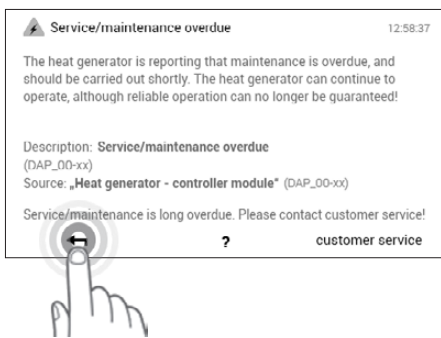

3 A detailed alarm message appears. The message contains detailed information about the malfunction. Use **Back** (←) to close the alarm message view.

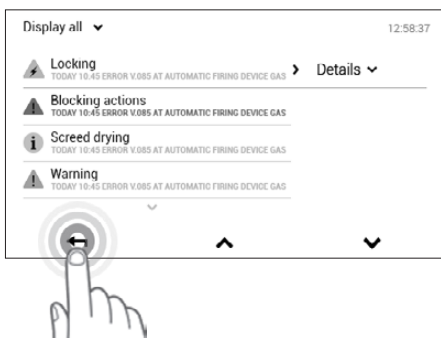

4 Select **Back** (←) again to close the **alarm message overview**.

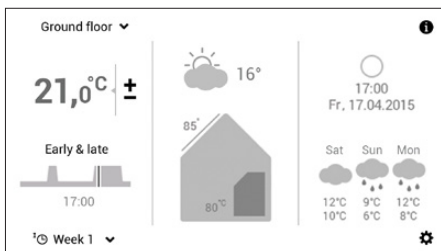

5 Once the malfunction has been rectified, the alarm message icon is no longer displayed in the start screen.



If alarm messages cannot be rectified using the information displayed on the control module, contact Hoval customer service.

7.2 Instructions in the event of faults

1. If the heat generator does not start check if the blocking switch is set to "I".
2. For resetting the fault, see below (point 7.3).
3. Pressing the alarm message icon allows the alarm messages to be requested (see also points Pkt. 7.1 and 5.6.1).

7.3 Resetting the faults

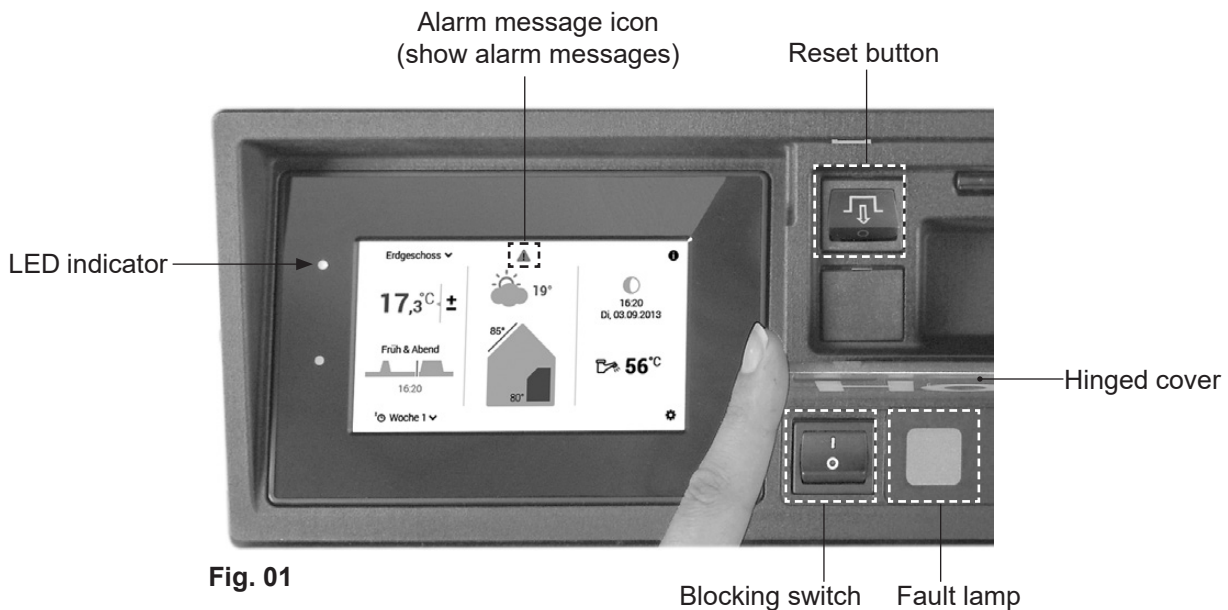


Fig. 01

Faults can be recognised by the alarm message icon and/or by a red-orange flashing LED indicator to the left of the operating field (see also point 5.6.1 page 18, Pos. 6).

If, in addition, the fault lamp next to the blocking switch lights up, the heating operation was stopped. The fault can be acknowledged by pressing the reset button.



The reset button is allowed to be pressed once at most. If the failure indication lamp continues to be lit, please contact Hoval Customer Service.

1. Open the Hinged cover (Fig. 01) on the right of the control panel.
2. Press the reset button for 3 seconds. If the fault lamp goes out, the heat generator carries out a start attempt. If the fault lamp does not go out or lights up again after the start attempt, please contact Hoval Customer Service.

8. Maintenance and inspection (heating system)



The work described below is normally performed by the heating specialist in the course of annual maintenance. Nevertheless, carry out the following checks during the year and perform the work described as necessary.

8.1 Check the operating pressure



In order for heating to work properly, the operating pressure (water pressure in the heating system during operation) must be within a certain range.

- If the operating pressure falls below 0.8 bar, the tool symbol appears on the control panel display as a warning.
- If the operating pressure is below 0.5 bar, heating operation is no longer possible. The water pressure and the locking error message appear on the control panel display.

1. Read off the operating pressure on the pressure gauge (installed externally).



Fig. 02

- Setpoint, see “Calculated operating pressure” in chapter 1.3.
2. If the operating pressure is lower than 1 bar, notify the heating specialist to top up replacement water.



NOTICE

Danger of corrosion

Danger of corrosion due to frequent topping up (more than 1 x/year).

- Contact a heating installer to have the heating system topped up.

8.2 Replenishing replacement water



NOTICE

Filling and replacement water

The heating system can be damaged by improper procedures during filling.

- Proceed professionally when refilling and topping up.
- The filling and replacement water must be of the required water quality (see the “Water quality” chapter in the installation instructions).



Country-specific regulations and manufacturer-specific specifications for replacement water must be observed.



- If the operating pressure falls below 0.8 bar, the tool symbol appears on the control panel display as a warning.
- If the operating pressure is below 0.5 bar, heating operation is no longer possible. The water pressure and the locking error message appear on the control panel display.

Replenish replacement water if the operating pressure drops below 1 bar.

1. Switch off the all-pole switch to disconnect the heat generator from the mains.
2. Connect the filling hose to the water tap of the replenishment station.
3. Deaerate the filling hose.
4. Connect the filling hose to the filling/drain valve.
5. Slowly fill the heat generator until the calculated operating pressure is displayed on the pressure gauge.
6. If no automatic air vent is available, vent the heat generator using a manual air vent. Repeat steps 5 and 6 if necessary.
7. Close the tap and filling/drain valve.
8. Unscrew the filling hose again after filling.
9. Check the operating pressure again.
10. Switch the heat generator back on.



After filling the heating system:

- Check the water connections for leakage.

9. Saving energy

9.1 Specific steps for saving energy

ENERGY



With only a few simple measures, you can



save energy on a sustainable basis,



cut energy costs and



protect the environment.

It's easy! Just bear in mind the following tips:

- **Set the room temperature and the heating times independently!**
Adapt the heating times and room temperatures according to when you will be present and absent (see the operating instructions for the optional TopTronic® E heating control). A temperature reduction of only 1 °C can save 6 % of your energy costs.
- **Correct ventilation**
Ventilate every three to four hours for a few minutes with the window full open, preferably with a through draft. Avoid leaving the windows tilted open when it is cold outside! Correct heating and ventilation also help to prevent mildew forming. Ventilation is not necessary if you are using a domestic ventilation unit.
- **Close roller blinds and shutters at night**
Keep the roller blinds and shutters on doors and windows closed at night to reduce energy losses.
If necessary, seal gaps and cracks at windows and doors.
- **Do not obstruct radiators**
Avoid placing furniture in front of radiators. Also avoid closing curtains during the day. At night, on the other hand, they can have an insulating effect.
Furthermore, avoid drying damp laundry directly on the radiators. The heat generated by the radiators cannot get into the room in the first place and the hot water is merely circulated.
- **Reduce the room temperature at night**
Save energy while you sleep by reducing the room temperature at night. The room should not cool down excessively, though. This increases the energy required to reheat it, and pipes could freeze.
- **Set the domestic hot water temperature**
Set the domestic hot water temperature as low as possible. Aim for temperatures between 45 °C and 60 °C. Remember to activate the legionella function once a week in the week programme (see the operating instructions for the optional TopTronic® E heating control).
- **Take a shower rather than a bath**
A bath consumes about three times as much energy and water as a shower.
- **Regular maintenance**
Have your heating system regularly cleaned and checked by a specialist. We therefore recommend that you conclude a service contract with your Hoval customer service department. Bleed the radiators if you hear noises coming from the pipework or if the radiators do not achieve an even temperature.

10. Disposal

10.1 Notes on environmental protection



Dispose of the packaging properly.

Heat pumps are electrical devices made from high-quality materials and filled with refrigerant and must therefore not be disposed of as normal household waste, but professionally and correctly as prescribed by the local authorities.

Used batteries must not be disposed of as domestic waste. Remove the batteries contained in the heat pump and return them to appropriate collection points.

The refrigerant is only allowed to be drawn off and disposed of in accordance with the relevant regulations by an authorised Hoval customer service technician.

Failure to effect proper disposal can lead to damage to the environment and health.



WARNING

Units must be marked accordingly to indicate that they have been taken out of operation and drained of refrigerant. This marking must be dated and signed. A notice indicating the presence of flammable refrigerant (e.g. flame symbol) must be visible on the dismantled units or components, or must be attached before disposal.

Hoval quality. You can count on us.

Hoval is one of the leading international companies for heating and indoor climate solutions. Drawing on more than 75 years of experience and benefiting from a close-knit team culture, the Hoval Group delivers exciting solutions and develops technically superior products. This leadership role requires a sense of responsibility for energy and the environment, which is expressed in an intelligent combination of different heating technologies and customised indoor climate solutions.

Hoval also provides personal consultations and comprehensive customer service. With around 2500 employees in 15 companies around the world, Hoval sees itself not as a conglomerate, but as a large family that thinks and acts globally.

Hoval heating and indoor climate solutions are currently exported to more than 50 countries.

Responsibility for energy and environment

Liechtenstein

Hoval Aktiengesellschaft
9490 Vaduz
+423 399 24 00
hoval.com

United Kingdom

Hoval Ltd.
Newark Notts. NG 24 1JN
+44 1636 672 711
hoval.co.uk