



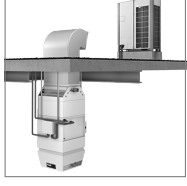



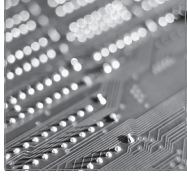
## Hoval TopVent<sup>®</sup> TP | MP

Design handbook

Recirculation and supply air units with efficient air distribution  
for heating and cooling with decentralised heat pump





	<p><b>Hoval Indoor Climate Systems</b> 3</p> <p>Efficient. Flexible. Reliable.</p>	A
	<p><b>TopVent® TP</b> 7</p> <p>Recirculation units with efficient air distribution for heating and cooling spaces up to 25 m in height with decentralised heat pump</p>	B
	<p><b>TopVent® MP</b> 31</p> <p>Supply air units with efficient air distribution for ventilating, heating and cooling spaces up to 25 m in height with decentralised heat pump</p>	C
	<p><b>Options</b> 57</p>	D
	<p><b>Transport and installation</b> 63</p>	E
	<p><b>System design</b> 75</p>	F
	<p><b>Control systems</b></p> <p>Hoval TopTronic® C → see «Control Systems for Hoval Indoor Climate Systems» manual</p>	





## Hoval Indoor Climate Systems

Efficient. Flexible. Reliable.

A



## Efficient. Flexible. Reliable.

Hoval indoor climate systems are decentralised systems for heating, cooling and ventilating halls for industrial, commercial and leisure applications. The systems have a modular structure. One system comprises several ventilation units which are spread around the room. These units are equipped with reversible heat pumps and gas-fired appliances for decentralised heat and cold generation, or they heat and cool with a connection to a central energy supply. Tailored control systems complete the system and ensure the effective combination and optimal use of all resources.

### Diverse range of units ensures flexibility

Different types of ventilation units can be combined to create the perfect system for the project in question:

- RoofVent® supply and extract air handling units
- TopVent® supply air units
- TopVent® recirculation units

The number of supply and extract air handling units depends on how much fresh air is required in order to create a comfortable atmosphere for people in the building. Recirculation units cover additional heat or cool demand as required. A broad range of unit types and sizes with heating and cooling coils in various output levels means that the overall output of the system can be scaled to whatever level is required.

Specially designed unit versions are also available for halls with particularly humid or oily extract air.

Furthermore, there is a range of units available which have been expressly developed for very specific purposes. ProcessVent units, for example, are coupled with extract air purification systems in industrial halls and recover heat from process air.

### Draught-free air distribution

A key feature of Hoval indoor climate units is the patented vortex air distributor, known as the Air-Injector. It is controlled automatically and changes the blowing angle of the air continuously between vertical and horizontal. The highly efficient air supply system has many advantages:

- It provides a high level of comfort during heating and cooling. No draughts develop in the hall.
- The efficient and even air distribution ensures that the indoor climate units cover a large area.
- The Air-Injector keeps the temperature stratification in the room low, thus minimising heat loss through the roof.

### Control with specialist expertise

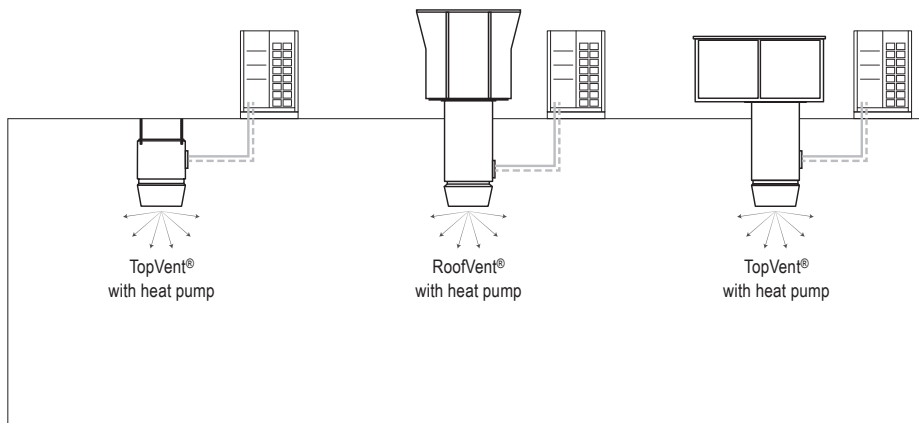
The TopTronic® C control system, which was specifically developed for Hoval indoor climate systems, regulates the separate units individually and controls them based on zones. This enables optimal adjustment to the local requirements of the different usage areas in the building. The patented control algorithm optimises energy use and ensures maximum comfort and hygiene levels. Clear interfaces make it easy to connect the system to the building management system.

Simpler control systems are also available for units that are only used for supply air or air recirculation.


### Competent and reliable

Hoval will support you and provide expert knowledge throughout all project phases. You can rely on comprehensive technical advice when it comes to planning Hoval indoor climate systems and on the skills of the Hoval technicians during the installation, commissioning and maintenance of the system.


## System with decentralised heat and cold generation with heat pump



## System with central heat and cold generation

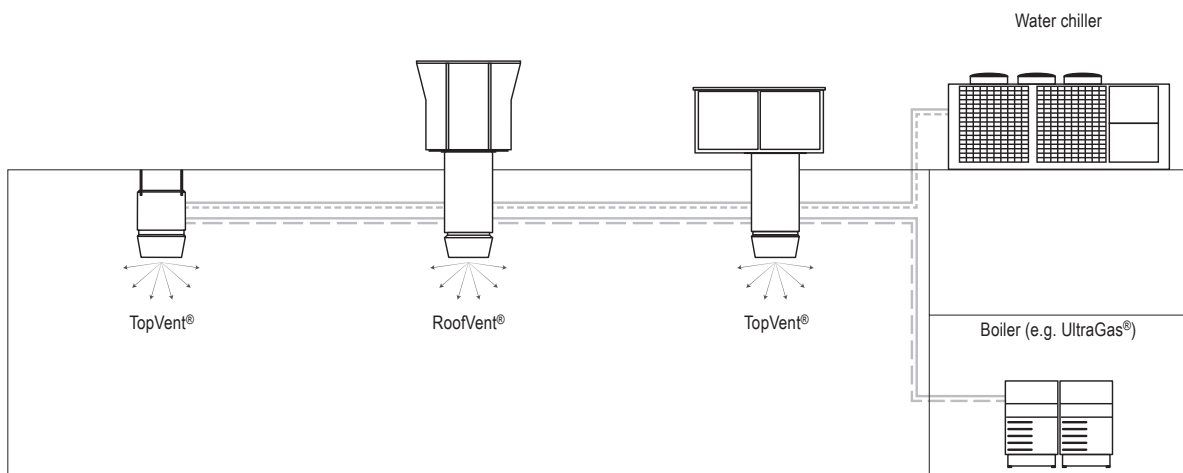


## System with decentralised, gas-fired heat generation

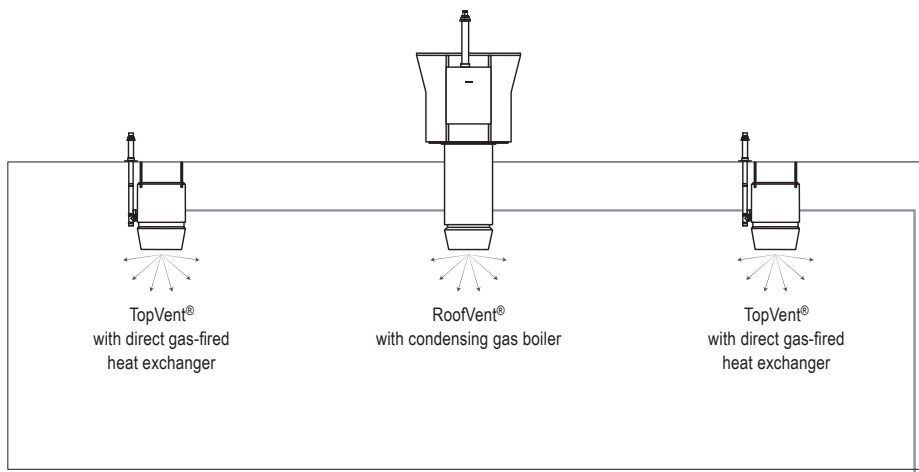





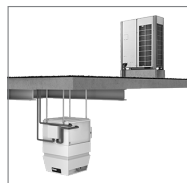

**TopVent® TP**

Recirculation units with efficient air distribution  
for heating and cooling spaces up to 25 m in height  
with decentralised heat pump

1 Use . . . . .	8
2 Construction and operation . . . . .	8
3 Technical data . . . . .	14
4 Specification texts . . . . .	25

## 1 Use

### 1.1 Intended use

TopVent® TP units are recirculation units intended for heating and cooling spaces up to 25 m in height with decentralised heat pump. They have the following functions:

- Heating and cooling with heat pump
- Recirculation operation
- Air distribution and destratification with adjustable Air-Injector
- Air filtration (option)

The TopVent® TP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the «fan coil unit» type, provided for in Commission Regulation (EU) 2016/2281.

The Hoval TopTronic® C integrated control system ensures energy-efficient, demand-based operation of Hoval indoor climate systems.

Intended use also includes compliance with the operating instructions. Any usage over and above this use is considered to be not as intended. The manufacturer can accept no liability for damage resulting from improper use.

### 1.2 User group

The units are only allowed to be installed, operated and maintained by authorised and instructed personnel who are well acquainted with the units and are informed about possible dangers.

## 2 Construction and operation

### 2.1 Construction

The TopVent® TP unit consists of the following components:

#### Recirculation unit

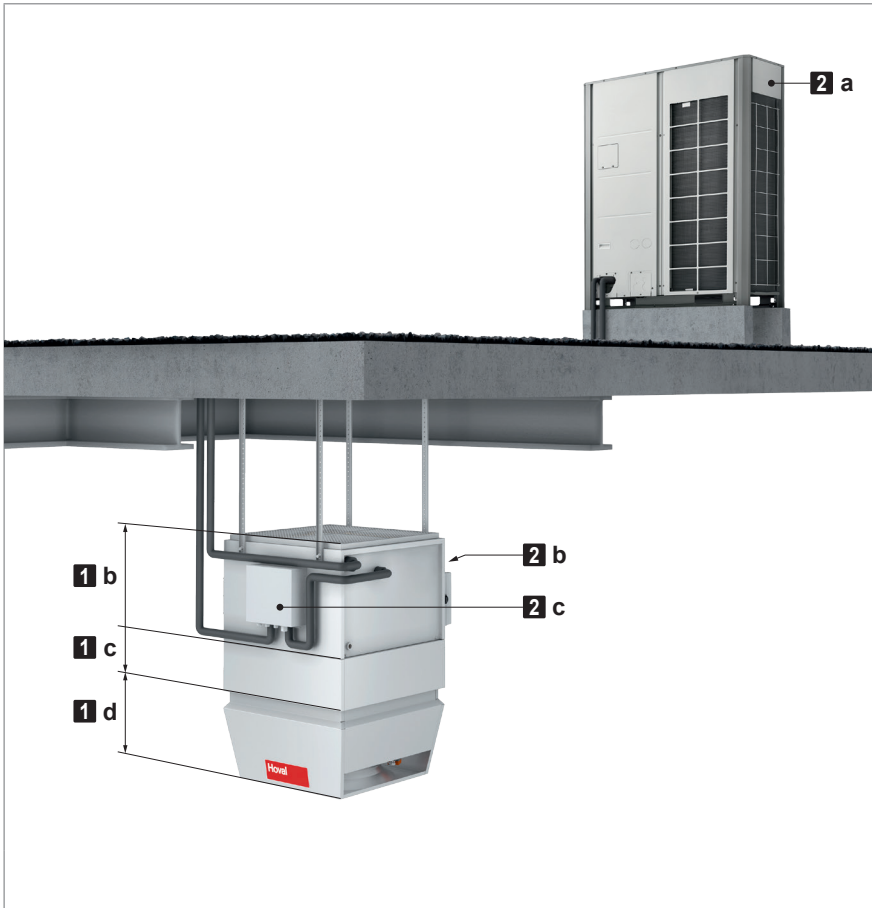
- Filter box (option)
  - A filter box with pocket filters or a flat filter box with pleated cell filters is optionally available for air filtration. Filter class: ISO Coarse 60 %
- Heating/cooling section
  - The heating/cooling section contains the following components:
    - Heating/cooling coil for heating and cooling the supply air
    - Condensate separator
- Fan unit
  - Radial fan with energy-saving EC motor
- Air-Injector
  - The Air-Injector is a patented, infinitely variable vortex air distributor for the draught-free introduction of air into the hall under changing operating conditions.

As part of the TopTronic® C control system, the unit control box is an integral component.

#### Heat pump system

The reversible air/air heat pump system in split design generates both heat and cold decentrally. It consists of the following components:

- Heat pump with continuously modulating inverter technology for precise output control and high efficiency
- Communication kit for communication between heat pump, expansion valve and indoor climate unit
- EEV kit with expansion valve
- Branch joint kit (only for heat pump Q)




- 1** Recirculation unit
  - a** Filter box of flat filter box (not shown here)
  - b** Heating/cooling section
  - c** Fan unit
  - d** Air-Injector
- 2** Heat pump system
  - a** Heat pump
  - b** Communication kit
  - c** EEV kit

Fig. B1: TopVent® TP components



**Notice**

The picture only shows the schematic layout. In contrast to the illustration here, the EEV kit is located on the refrigerant connection side.

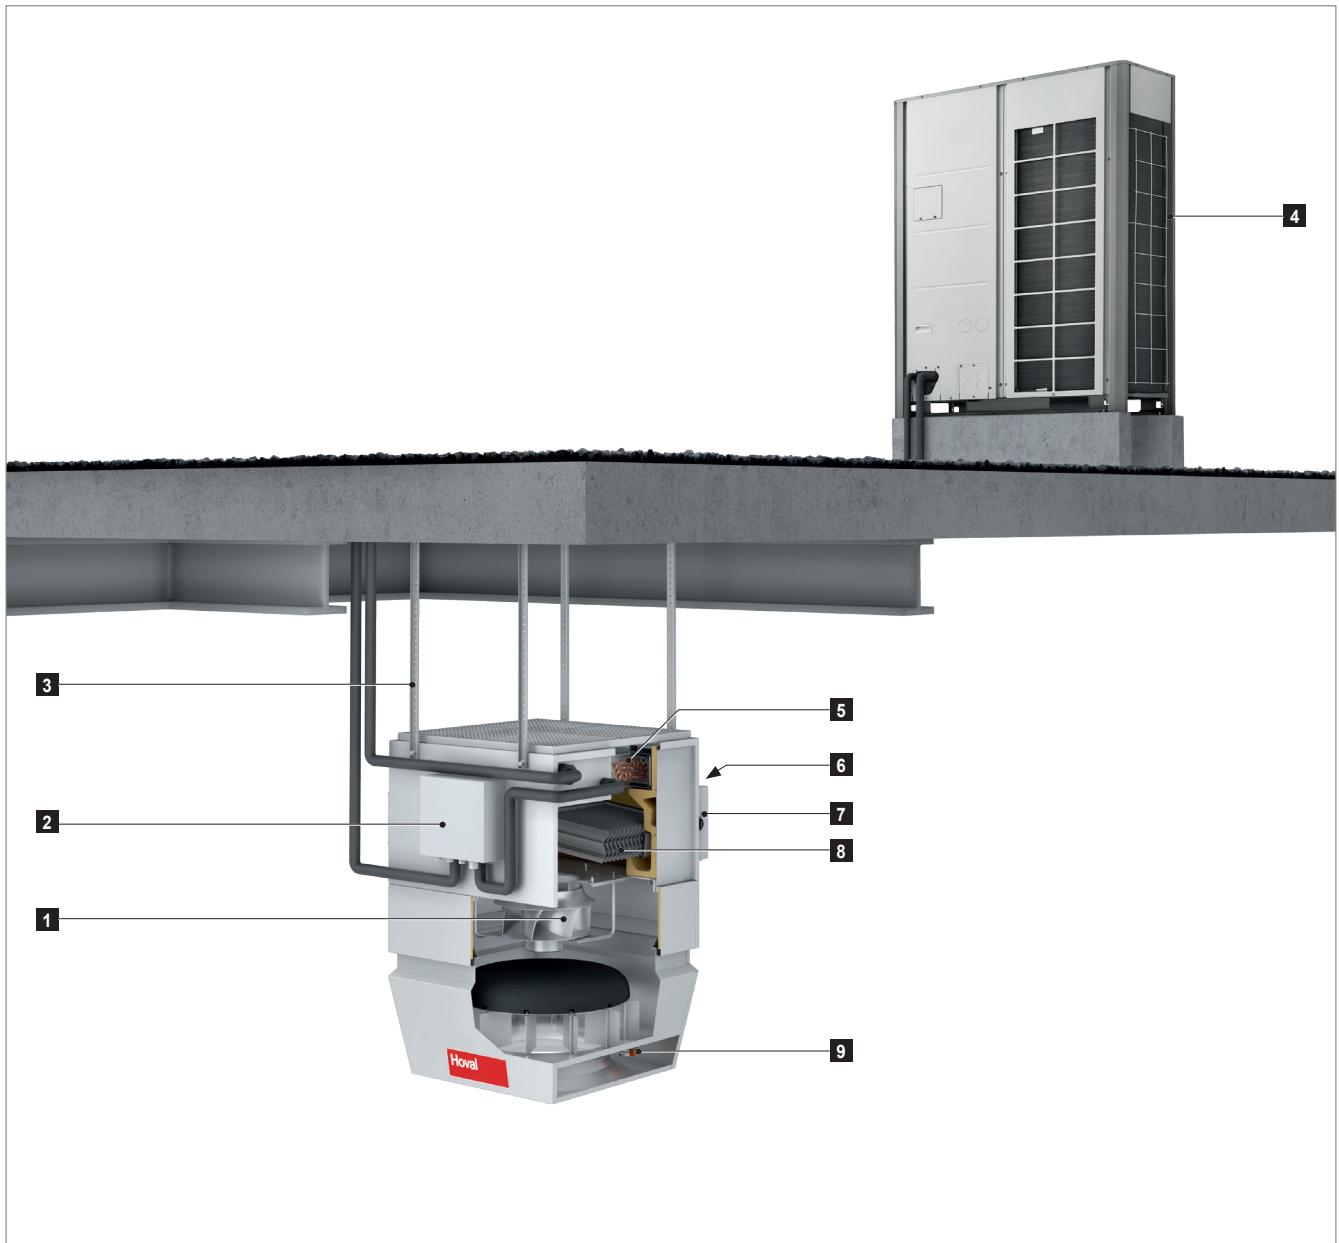


- |  |   |
|--|---|
| <p><b>1</b> Fan</p> <p><b>2</b> EEV kit with expansion valve</p> <p><b>3</b> Suspension set</p> <p><b>4</b> Heat pump</p> <p><b>5</b> Heating/cooling coil</p> | <p><b>6</b> Communication kit</p> <p><b>7</b> Unit control box</p> <p><b>8</b> Condensate separator</p> <p><b>9</b> Actuator Air-Injector</p> |
|--|---|

Fig. B2: TopVent® TP construction

**i Notice**  
The picture only shows the schematic layout. In contrast to the illustration here, the EEV kit is located on the refrigerant connection side.

2.2 Function


TopVent® TP-6-P | TopVent® TP-9-P

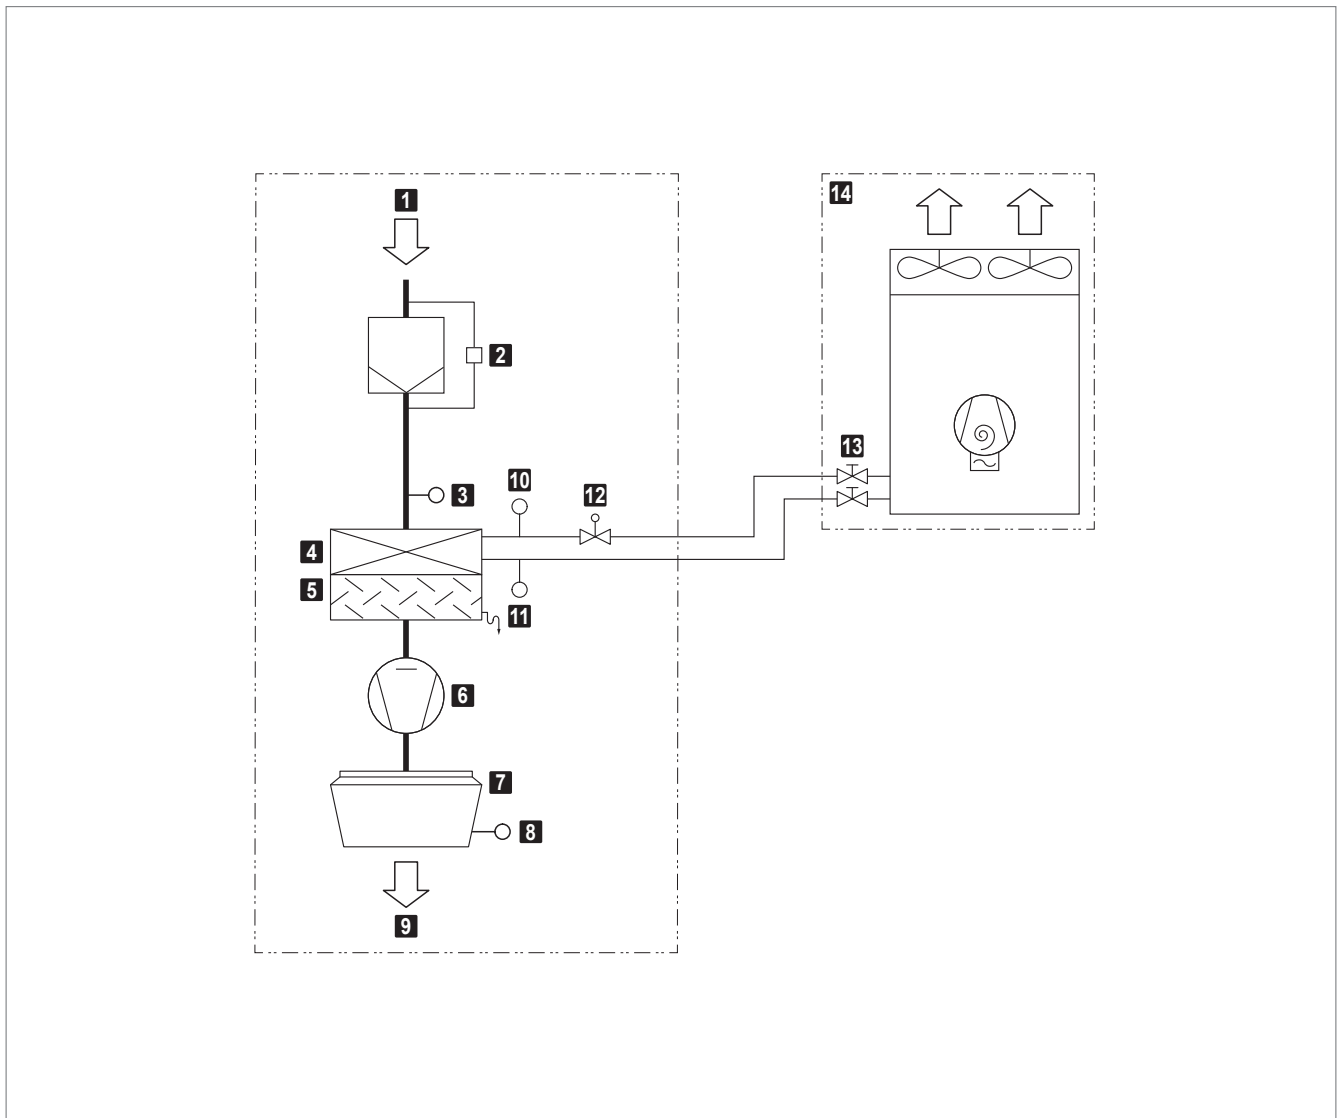

- |  |  |
|--|--|
| <b>1</b> Extract air   | <b>8</b> Supply air temperature sensor               |
| <b>2</b> Air filter with differential pressure switch (optional) | <b>9</b> Supply air                                  |
| <b>3</b> Air inlet temperature sensor heating/cooling coil       | <b>10</b> Liquid temperature sensor (supplied loose) |
| <b>4</b> Heating/cooling coil                                    | <b>11</b> Gas temperature sensor (supplied loose)    |
| <b>5</b> Condensate separator                                    | <b>12</b> Expansion valve                            |
| <b>6</b> Fan   | <b>13</b> Shut-off valves                            |
| <b>7</b> Air-Injector with actuator                              | <b>14</b> Heat pump P                                |

Fig. B3: TopVent® TP-6-P | TopVent® TP-9-P function diagram

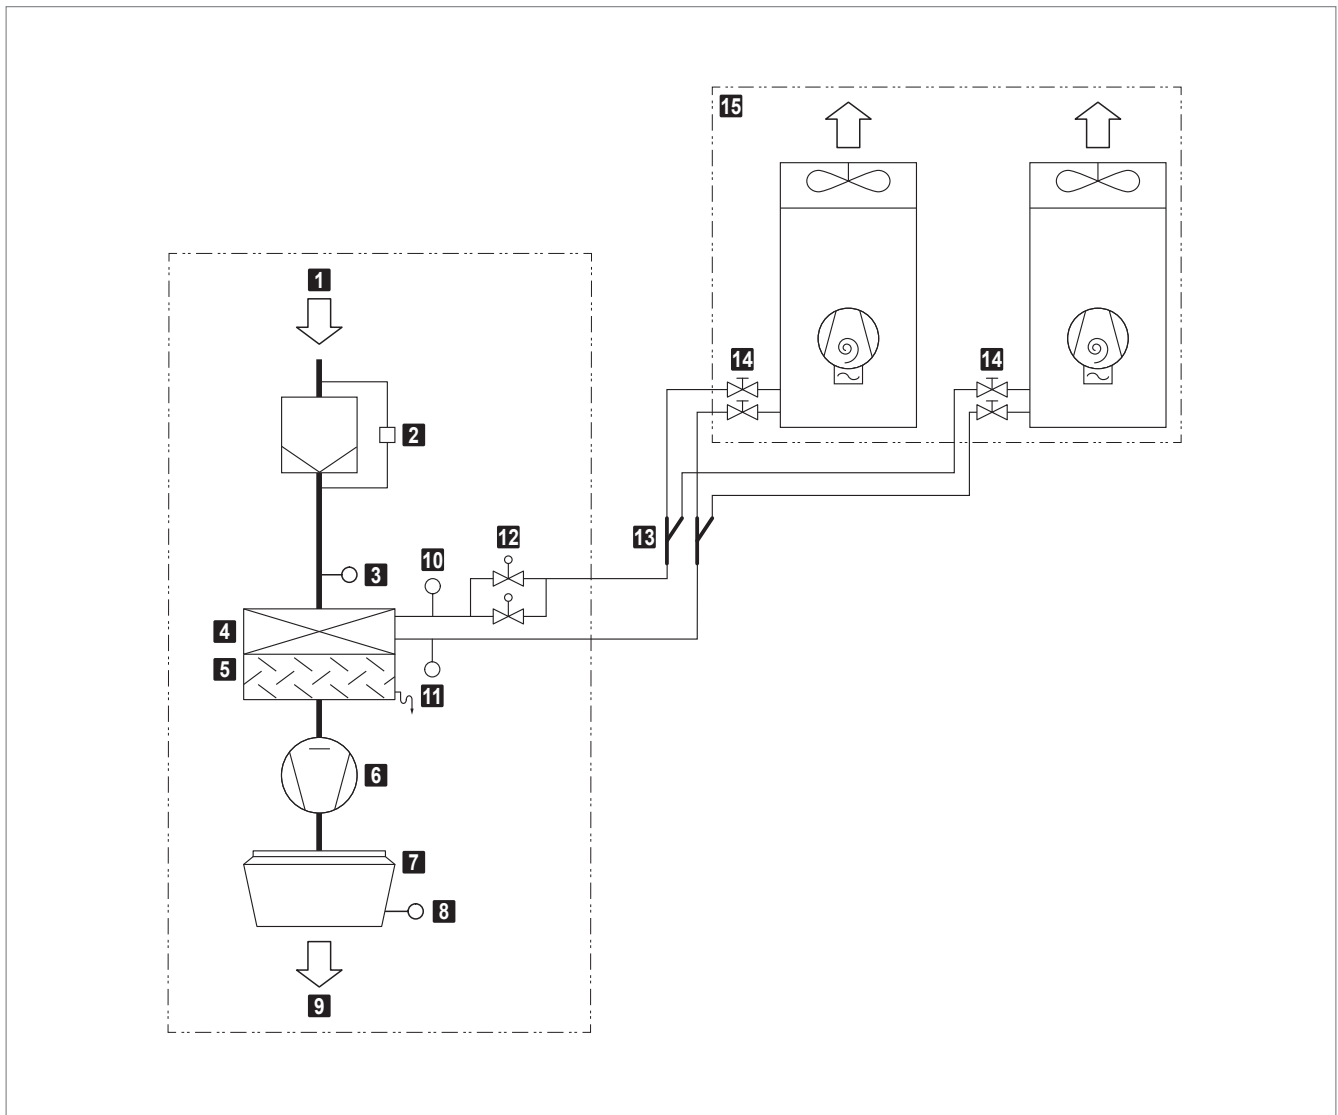TopVent® TP-9-Q



- |  |  |
|--|--|
| <b>1</b> Extract air   | <b>9</b> Supply air  |
| <b>2</b> Air filter with differential pressure switch (optional) | <b>10</b> Liquid temperature sensor (supplied loose)       |
| <b>3</b> Air inlet temperature sensor heating/cooling coil       | <b>11</b> Gas temperature sensor (supplied loose)          |
| <b>4</b> Heating/cooling coil                                    | <b>12</b> Expansion valves (supplied loose in the EEV kit) |
| <b>5</b> Condensate separator                                    | <b>13</b> Branch joint kit Q (supplied loose)              |
| <b>6</b> Fan   | <b>14</b> Shut-off valves                                  |
| <b>7</b> Air-Injector with actuator                              | <b>15</b> Heat pump Q                                      |
| <b>8</b> Supply air temperature sensor                           |  |

Fig. B4: TopVent® TP-9-Q function diagram

### 2.3 Operating modes

The TopVent® TP has the following operating modes:

- Recirculation
- Recirculation speed 1
- Standby

The TopTronic® C control system regulates these operating modes automatically for each control zone in accordance with the specifications in the calendar. The following points also apply:

- The operating mode of a control zone can be switched over manually.
- Each TopVent® unit can operate individually in a local operating mode: Off, Recirculation, Recirculation speed 1

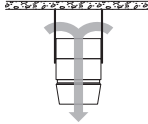
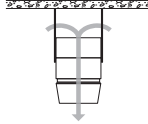
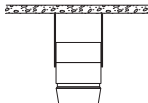
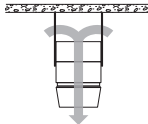

Code	Operating mode		Description	
REC	<b>Recirculation</b> On/Off operation: during heat or cool demand, the unit draws in room air, heats or cools it and blows it back into the room. The room temperature set value day is active.		Fan ..... speed 1/2 <sup>1)</sup> Heating/cooling ..... on <sup>1)</sup>  <sup>1)</sup> Depending on heat or cool demand	
	DES ■ Destratification: To avoid heat build-up under the ceiling, it may be appropriate to switch on the fan when there is no heat or cool demand (either in permanent operation or in on/off operation depending on the temperature stratification, as desired).		Fan ..... speed 2 Heating/cooling ..... off	
REC1	<b>Recirculation speed 1</b> The same as REC, but the unit operates only at speed 1 (low air flow rate)		Fan ..... speed 1 Heating/cooling ..... on <sup>1)</sup>  <sup>1)</sup> Depending on heat or cool demand	
	DES ■ Destratification: The same as for REC, but the unit operates only at speed 1		Fan ..... speed 1 Heating/cooling ..... off	
ST	<b>Standby</b> The unit is ready for operation; the following operating modes are activated if required:			
	CPR ■ Cooling protection: If the room temperature drops below the set value for cooling protection, the unit heats up the room in recirculation operation.			Fan ..... speed 2 Heating ..... on
	OPR ■ Overheating protection: If the room temperature rises above the set value for overheating protection, the unit cools down the room in recirculation operation.			Fan ..... speed 2 Cooling ..... on
L_OFF	<b>Off (local operating mode)</b> The unit is switched off.		Fan ..... off Heating/cooling ..... off	

Table B1: TopVent® TP operating modes

### 3 Technical data

#### 3.1 Type code

	<b>TP - 6 - P ...</b>
<b>Unit type</b>	TopVent® TP
<b>Unit size</b>	6 or 9
<b>Heating/cooling section</b>	P with coil type P for heat pump P Q with coil type Q for heat pump Q
<b>Further options</b>	

Table B2: Type code

#### 3.2 Application limits

<b>Heating mode</b>				
Fresh air temperature (WB)	min.	°C	-25	
	max.	°C	18	
Air inlet temperature to the heating/cooling coil (DB)	min.	°C	5	
	max.	°C	24	
<b>Cooling mode</b>				
Fresh air temperature (DB)	min.	°C	-10	
	max.	°C	48	
Air inlet temperature to the heating/cooling coil (WB)	min.	°C	14	
	max.	°C	26	
Extract air temperature		max.	°C	50
Moisture content of extract air <sup>1)</sup>		max.	g/kg	15
Supply air temperature		max.	°C	45
Room temperature setpoint		min.	°C	12
		max.	°C	26
Air flow rate	Size 6:	min.	m³/h	3100
	Size 9:	min.	m³/h	5000
Condensate quantity	Size 6:	max.	kg/h	90
	Size 9:	max.	kg/h	150
The units cannot be used in:				
<ul style="list-style-type: none"> <li>■ Damp locations</li> <li>■ Rooms with mineral oil vapours in the air</li> <li>■ Rooms with a high salt content in the air</li> <li>■ Rooms with acidic or alkaline vapours in the air</li> </ul>				
1) Units for applications where the humidity in the room increases by more than 2 g/kg are available on request.				

Table B3: Application limits



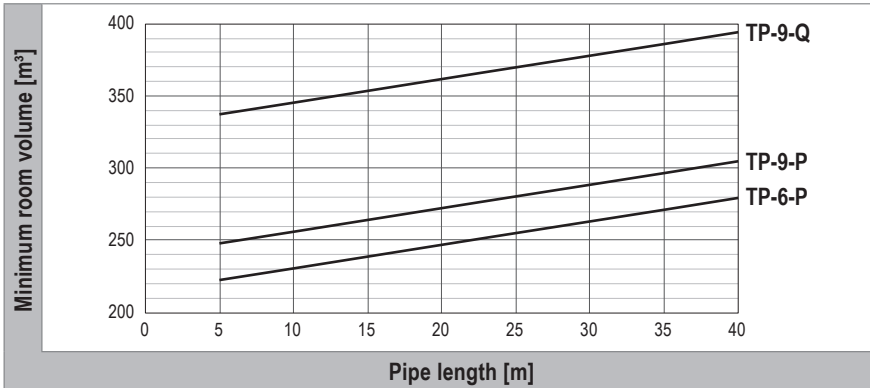


Fig. B5: Minimum room volume depending on the total refrigerant charge in accordance with EN 378

According to EN 378 (Refrigerating systems and heat pumps - Safety and environmental requirements), no additional safety measures for risk reduction are required for Hoval indoor climate units with heat pumps under the following conditions:

- The conditions according to EN 378 Annex C 3.1 are fulfilled.
- The room volume corresponds to the minimum values shown in Fig. B5 meaning that the permissible QLMV value is not exceeded.

### 3.3 Electrical connection

#### TopVent® TP

Unit type		TP-6	TP-9
Supply voltage	V AC	3 × 400	3 × 400
Permitted voltage tolerance	%	± 5	± 5
Frequency	Hz	50	50
Connected load	kW	1.5	3.3
Current consumption max.	A	2.7	5.6
Series fuse	A	13.0	13.0
Protection rating	–	IP 54	IP 54

Table B4: TopVent® TP electrical connections

#### Heat pump

Heat pump		P	Q
Supply voltage	V AC	3 × 400	3 × 400
Permitted voltage tolerance	%	± 2	± 2
Frequency	Hz	50	50
Connected load	kW	16.8	2 × 15.9
Current consumption max.	A	26.9	2 × 25.5
Series fuse	A	32.0	2 × 32.0
Inrush current	A	5.9	2 × 5.9

Table B5: Heat pump electrical connections

### 3.4 Air flow rate

Unit type		TP-6	TP-9
Nominal air flow rate	m <sup>3</sup> /h	6000	9000
Floor area covered			
<ul style="list-style-type: none"> <li>■ for applications with higher comfort requirements (e.g. production halls, assembly halls, sports halls)</li> </ul>	m <sup>2</sup>	537	946
<ul style="list-style-type: none"> <li>■ for applications with low comfort requirements (e.g. warehouses, logistics centres)</li> </ul>	m <sup>2</sup>	953	1674

Table B6: Air flow rate

### 3.5 Technical data of the heat pump

Heat pump			P	Q
<b>Heating</b>	Rated heat output <sup>1)</sup>	kW	39.2	67.2
	Power consumption	kW	8.43	15.54
	COP	–	4.65	4.32
	$\eta_{s,h}$	–	204	197
	SCOP	–	5.17	4.99
<b>Cooling</b>	Rated cooling capacity <sup>2)</sup>	kW	39.2	67.2
	Power consumption	kW	11.88	23.30
	EER	–	3.30	2.88
	$\eta_{s,c}$	–	339	315
	SEER	–	8.55	7.94
Refrigerant	–	R32	R32	
Refrigerant fill volume	kg	11.4	2 × 8.5	

1) With fresh air temperature 7 °C / extract air temperature 20 °C  
 2) With fresh air temperature 35 °C / extract air temperature 27 °C / 45 % rel. humidity

Table B7: Heat pump technical data

### 3.6 Heat output

$t_F$ °C	$t_{room}$ °C	Type TP-	Q kW	$H_{max}$ m	$t_S$ °C	$P_{HP}$ kW
-5	16	6-P	46.9	11.6	41.2	12.4
		9-P	46.9	14.5	33.5	12.4
		9-Q	80.4	11.6	44.5	23.4
	20	6-P	41.3	12.3	42.4	11.0
		9-P	41.3	15.4	35.6	11.0
		9-Q	70.8	12.3	45.4	20.5
-15	16	6-P	41.6	12.2	38.6	14.8
		9-P	41.6	15.3	31.7	14.8
		9-Q	71.2	12.2	41.5	28.9
	20	6-P	41.3	12.3	42.4	13.7
		9-P	41.3	15.4	35.6	13.7
		9-Q	70.6	12.3	45.3	26.5

Legend:  $t_F$  = Fresh air temperature  
 $t_{room}$  = Room air temperature  
 Q = Heat output  
 $H_{max}$  = Maximum mounting height  
 $t_S$  = Supply air temperature  
 $P_{HP}$  = Power consumption of the heat pump

Reference: ■ At room air temperature 16 °C: extract air temperature 18 °C  
 ■ At room air temperature 20 °C: extract air temperature 22 °C

Table B8: TopVent® TP heat output

### 3.7 Cooling capacity

$t_F$ °C	$t_{room}$ °C	$RH_{room}$ %	Type TP-	$Q_{sen}$ kW	$Q_{tot}$ kW	$t_S$ °C	$m_C$ kg/h	$P_{HP}$ kW
28	22	50	6-P	23.9	29.2	12.2	7.8	6.6
			9-P	23.3	29.2	16.3	8.7	6.6
			9-Q	40.0	50.1	10.8	14.9	12.1
		70	6-P	21.0	33.8	13.6	18.7	9.5
			9-P	23.2	38.3	16.4	22.2	9.5
			9-Q	37.1	61.2	11.8	35.5	16.7
32	26	50	6-P	29.2	41.4	13.5	17.9	11.6
			9-P	29.1	41.4	18.4	18.0	11.6
			9-Q	49.5	70.3	11.7	30.6	22.7
		70	6-P	23.2	44.8	16.5	31.7	12.5
			9-P	23.2	44.8	20.3	31.8	12.5
			9-Q	39.7	76.8	14.9	54.4	25.0

Legend:  $t_F$  = Fresh air temperature  
 $t_{room}$  = Room air temperature  
 $RH_{room}$  = Relative humidity of the room air  
 $Q_{sen}$  = Sensible cooling capacity  
 $Q_{tot}$  = Total cooling capacity  
 $t_S$  = Supply air temperature  
 $m_C$  = Condensate quantity  
 $P_{HP}$  = Power consumption of the heat pump

Reference: ■ At room air temperature 22 °C: extract air temperature 24 °C  
 ■ At room air temperature 26 °C: extract air temperature 28 °C

Table B9: TopVent® TP cooling capacity

### 3.8 Sound level

#### TopVent® TP

Unit type		TP-6	TP-9
Sound pressure level (at a distance of 5 m) <sup>1)</sup>	dB(A)	59	61
Total sound power level	dB(A)	81	83
Octave sound power level	63 Hz	42	48
	125 Hz	56	68
	250 Hz	65	70
	500 Hz	70	75
	1000 Hz	76	78
	2000 Hz	76	76
	4000 Hz	74	75
	8000 Hz	68	68

1) With hemispherical radiation in a low-reflection environment

Table B10: TopVent® TP sound level

#### Heat pump

Heat pump		P		Q	
		Heating	Cooling	Heating	Cooling
Sound pressure level (at a distance of 5 m)	dB(A)	59.0	59.0	63.0	61.0
Total sound power level <sup>1)</sup>	dB(A)	81.0	81.0	85.0	83.0
Octave sound pressure level <sup>2)</sup>	63 Hz	62.5	63.6	68.7	67.4
	125 Hz	58.5	58.6	62.4	59.9
	250 Hz	60.1	57.7	62.2	60.8
	500 Hz	58.6	58.4	60.8	59.7
	1000 Hz	54.3	52.2	57.6	56.4
	2000 Hz	51.6	49.8	54.5	53.6
	4000 Hz	53.0	52.8	49.9	50.4
	8000 Hz	46.7	45.9	49.2	48.2

1) The values given are maximum values; the noise level is fluctuating due to scroll technology.

2) Measured at a distance of 1 m in front of the unit and 1 m above the floor in a semi-anechoic chamber.

Table B11: Heat pump sound level

For particularly quiet unit operation (e.g. during the night), the heat pump can be operated in silent mode. It then runs at a reduced speed of the compressor and/or fan, which also leads to a reduced capacity output depending on the setting parameters.

Silent mode	Noise reduction	Capacity level	
		Heat pump P	Heat pump Q
Level 1	- 3 dB	100 %	100 %
Level 2	- 6 dB	95 %	80 %
Level 3	- 9 dB	75 %	55 %

Table B12: Noise reduction and capacity output in silent mode

3.9 Product information according to ErP

Model	TopVent® TP			Unit
	6-P	9-P	9-Q	
Cooling capacity (sensible) ( $P_{rated,c}$ )	29.4	28.2	48.4	kW
Cooling capacity (latent) ( $P_{rated,c}$ )	9.8	11.0	18.8	kW
Heating capacity ( $P_{rated,h}$ )	44.1	44.1	75.6	kW
Total electric power input ( $P_{elec}$ )	1.04	1.79	1.79	kW
Sound power level ( $L_{WA}$ )	81.0	83.0	83.0	dB
Contact details	Hoval Aktiengesellschaft Austrasse 70, 9490 Vaduz, Liechtenstein <a href="http://www.hoval.com">www.hoval.com</a>			

Table B13: Product information according to Commission Regulation (EU) 2016/2281, Table 13

3.10 Dimensions and weights

TopVent® TP-6-P


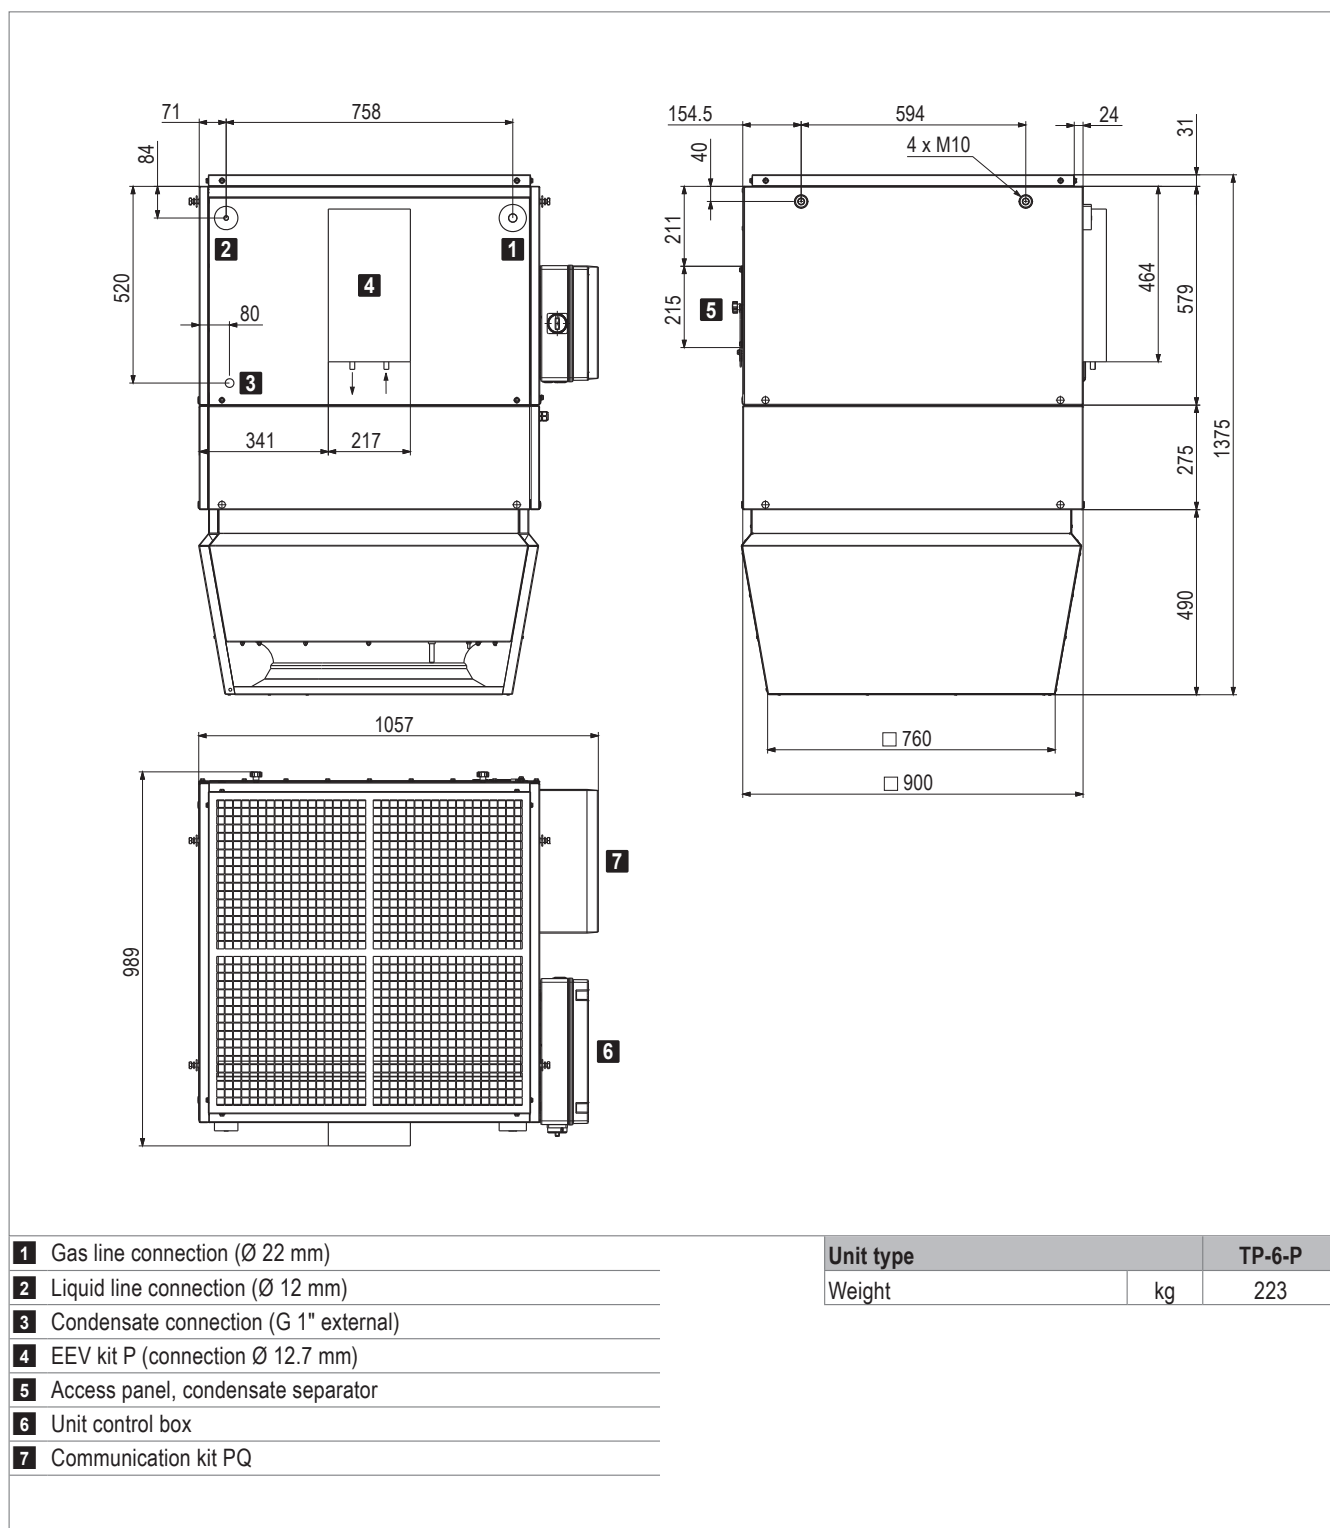


Fig. B6: TopVent® TP-6-P dimensions and weights

**TopVent® TP-9-P**

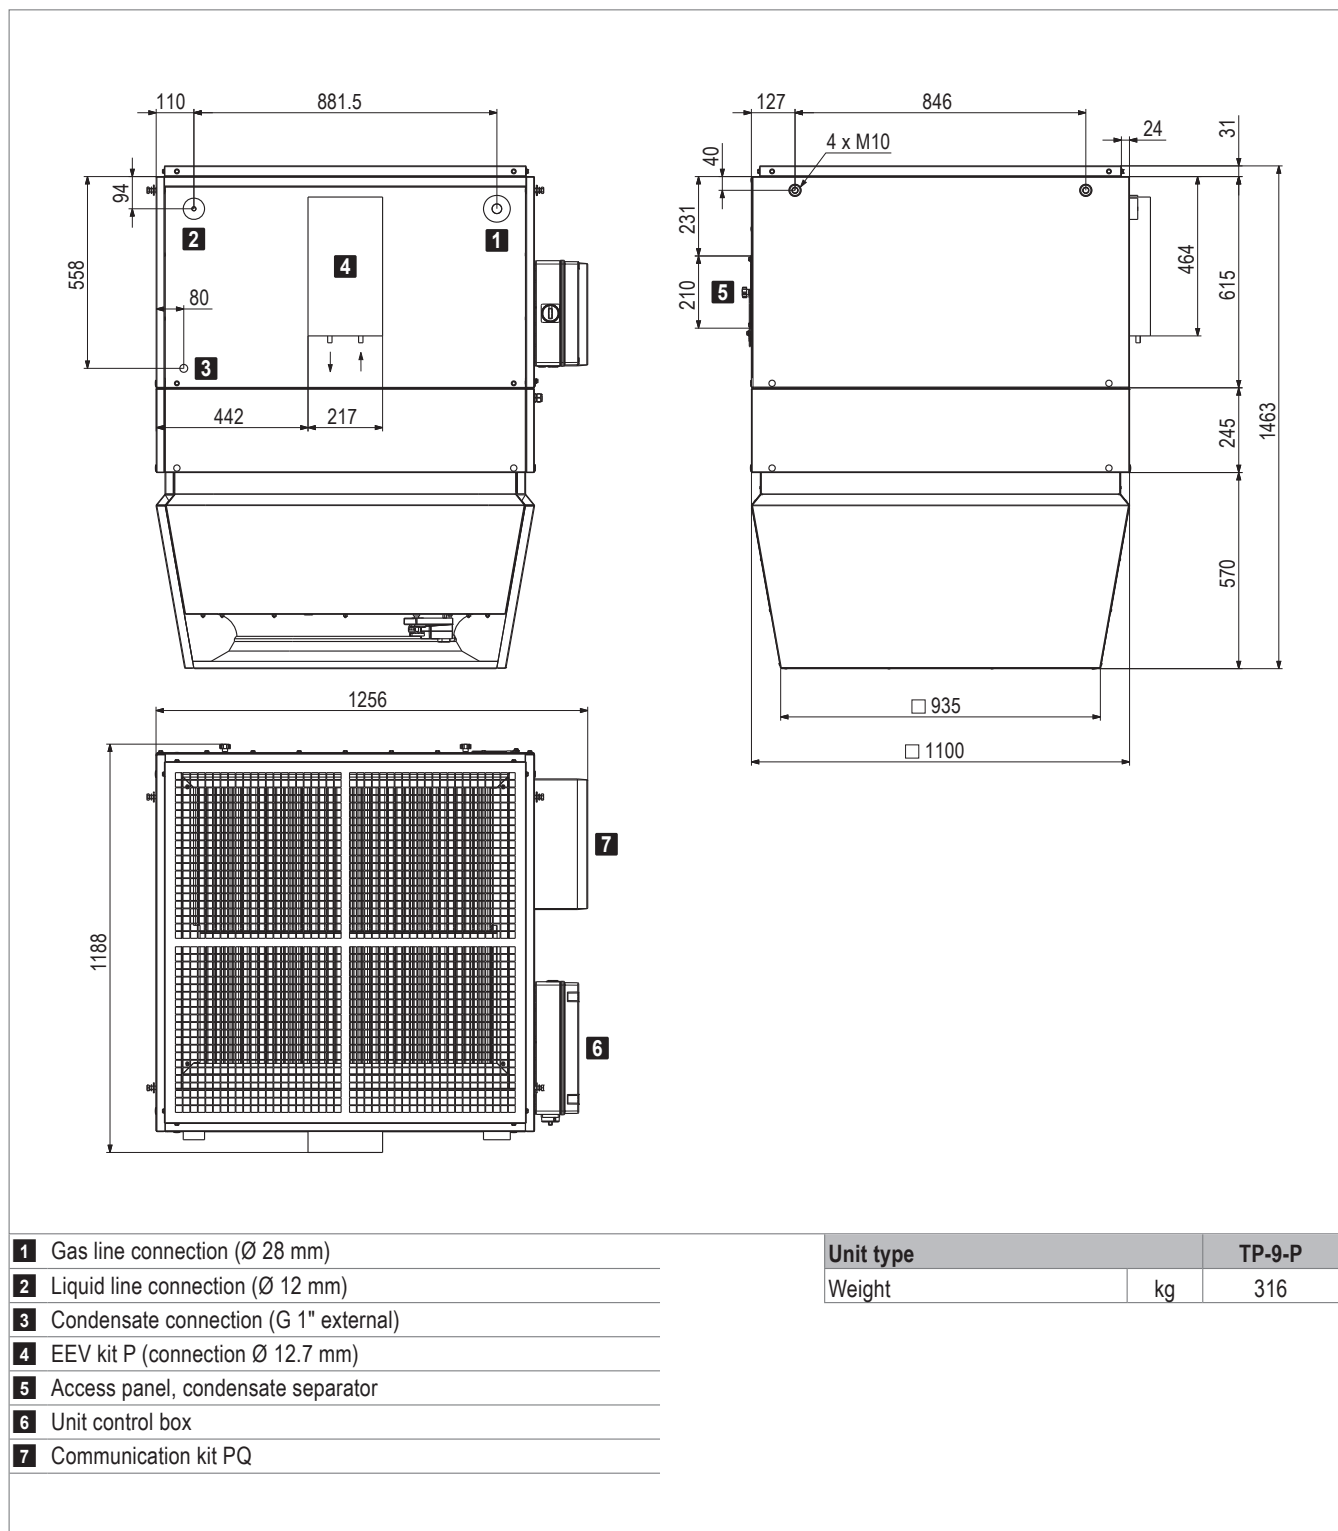


- 1** Gas line connection (Ø 28 mm)
- 2** Liquid line connection (Ø 12 mm)
- 3** Condensate connection (G 1" external)
- 4** EEV kit P (connection Ø 12.7 mm)
- 5** Access panel, condensate separator
- 6** Unit control box
- 7** Communication kit PQ

Unit type		TP-9-P
Weight	kg	316

Fig. B7: TopVent® TP-9-P dimensions and weights

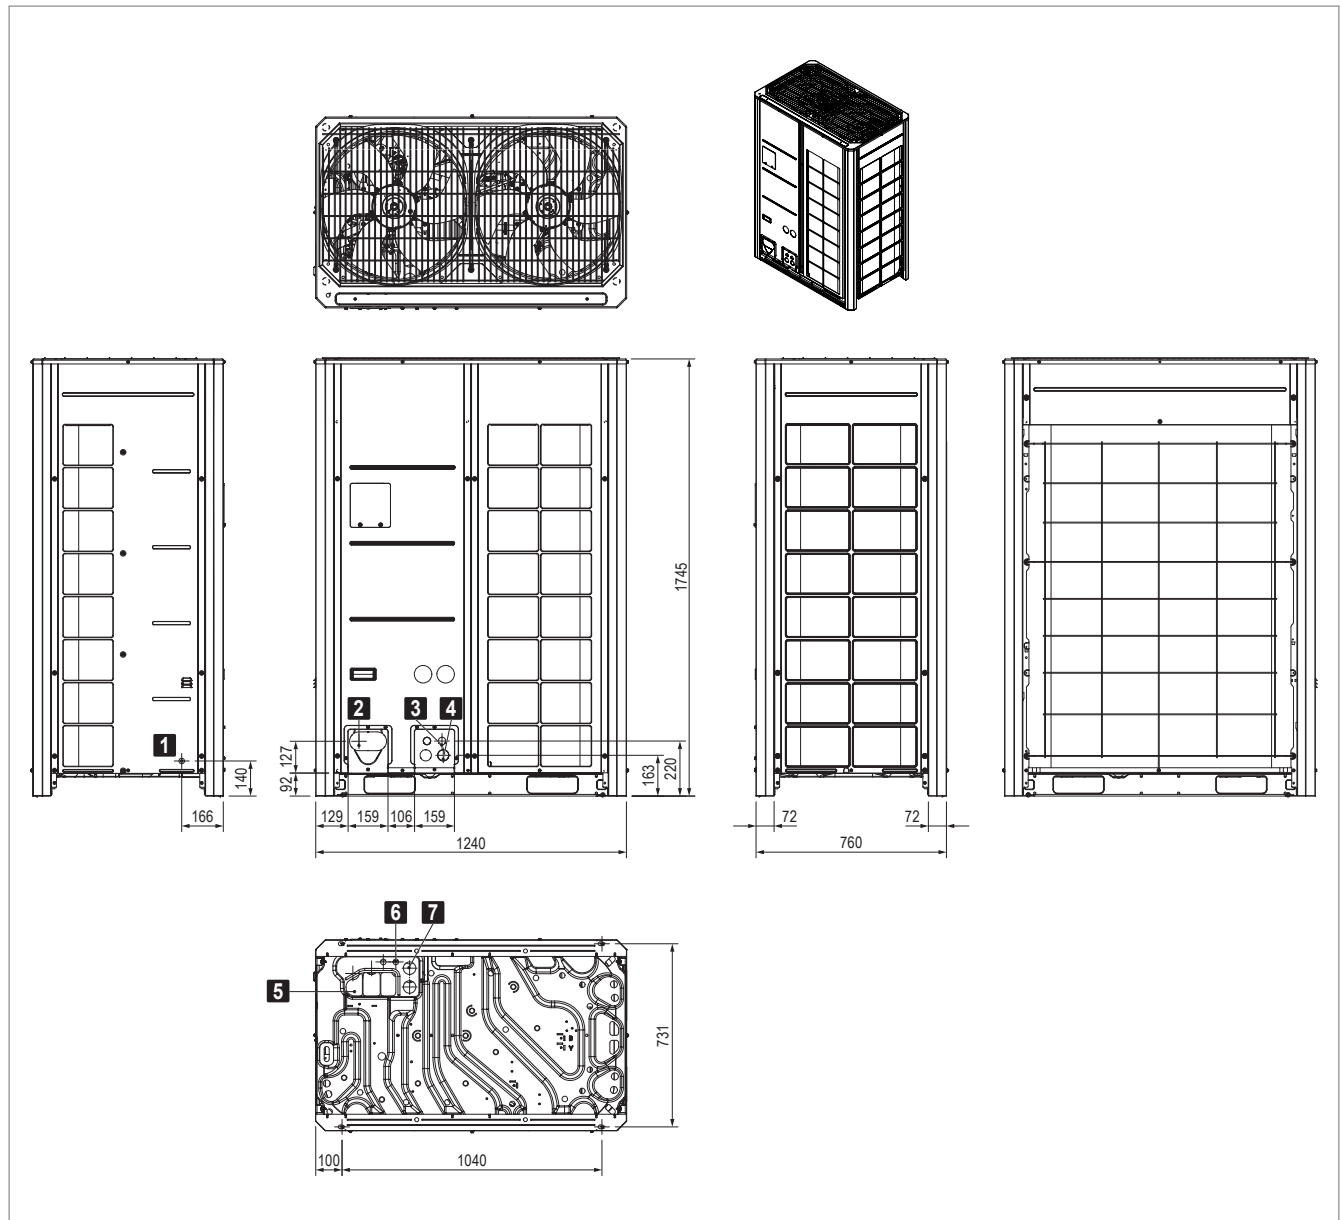Heat pump P



- 1** Opening for leak-tightness test

---

- 2** Opening for refrigerant pipes (front)
  - Liquid line connection                    Ø 12.7 mm
  - Gas line connection                        Ø 22.2 mm

---

- 3** Opening for signal lines (front)

---

- 4** Opening for mains cable (front)

---

- 5** Opening for refrigerant pipes (bottom)

---

- 6** Opening for signal lines (bottom)

---

- 7** Opening for mains cable (bottom)

Heat pump		P
Weight	kg	255

Fig. B8: Heat pump P dimensions and weights



**TopVent® TP-9-Q**


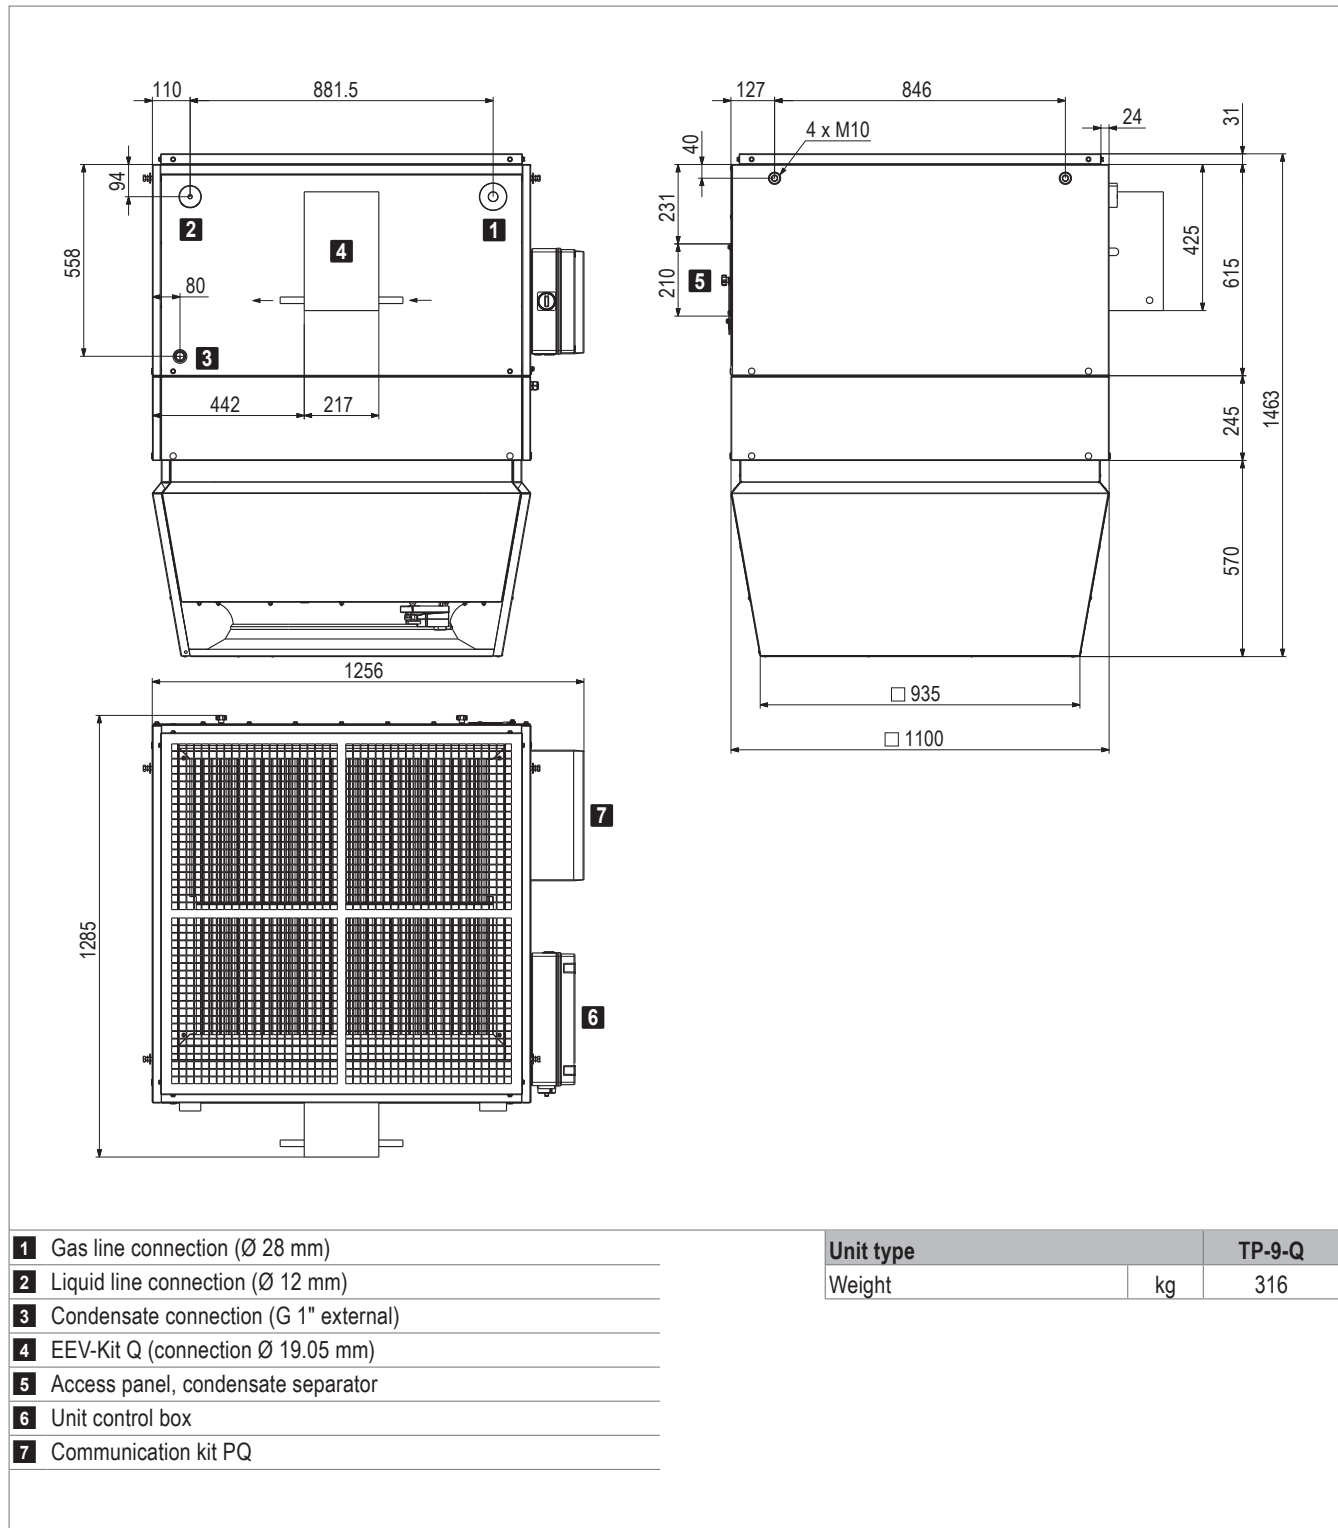


Fig. B9: TopVent® TP-9-Q dimensions and weights

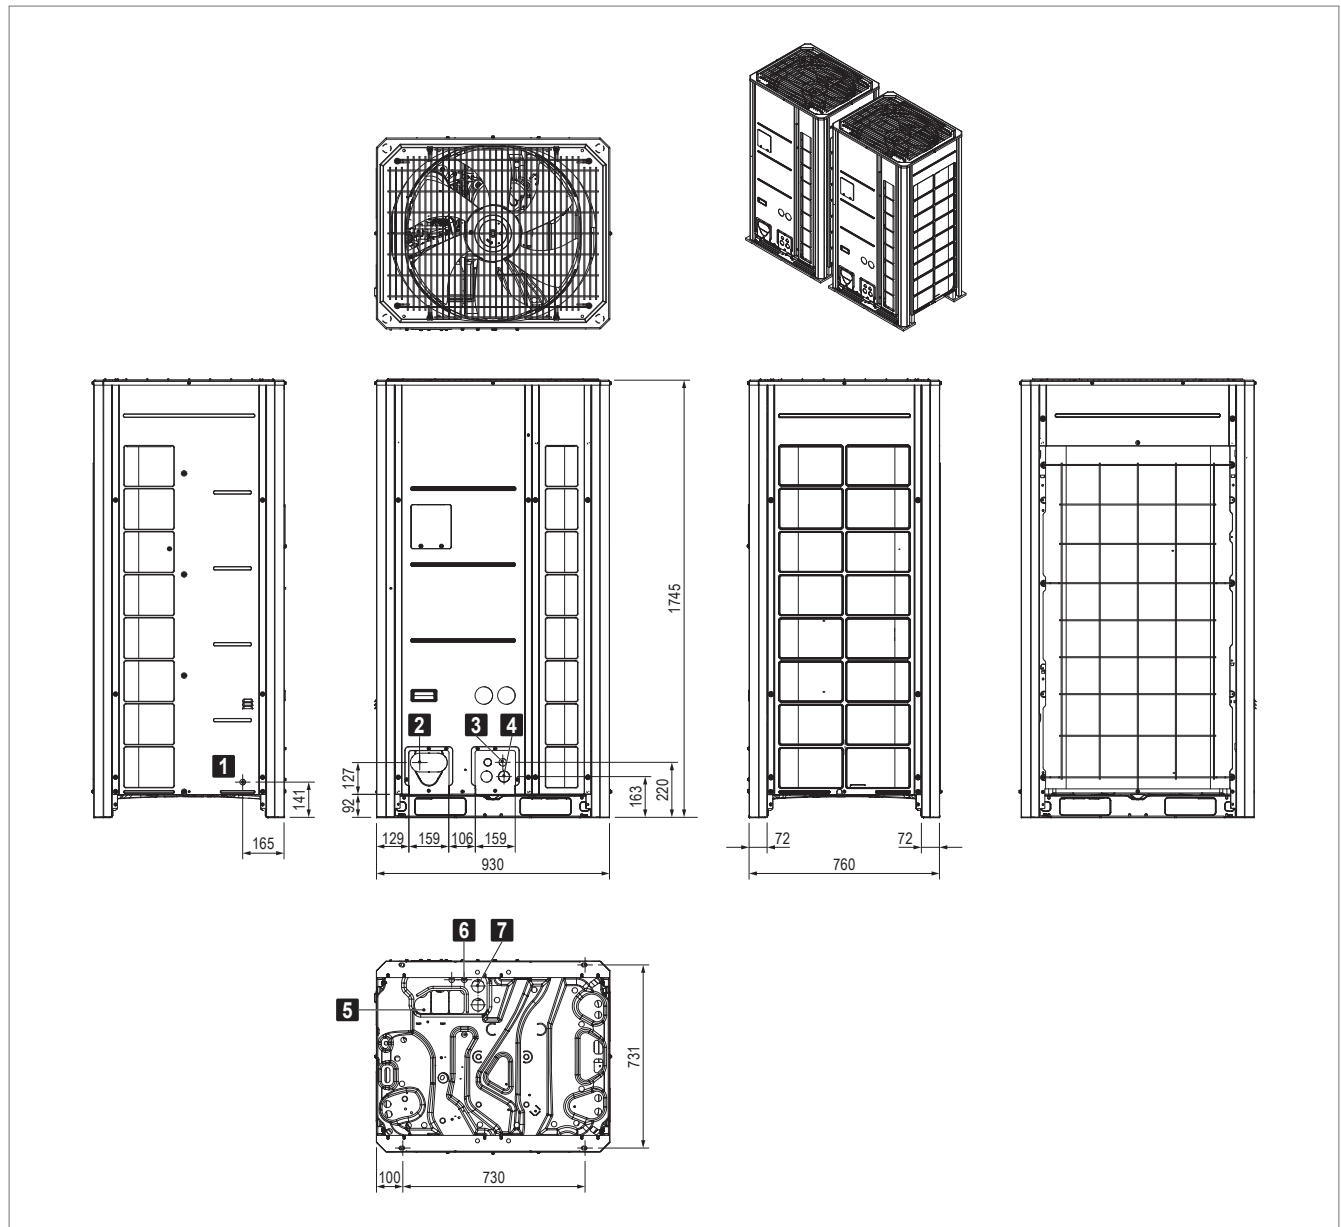Heat pump Q



- 1** Opening for leak-tightness test

---

- 2** Opening for refrigerant pipes (front)
  - Liquid line connection                    Ø 12.7 mm
  - Gas line connection                        Ø 22.2 mm

---

- 3** Opening for signal lines (front)

---

- 4** Opening for mains cable (front)

---

- 5** Opening for refrigerant pipes (bottom)

---

- 6** Opening for signal lines (bottom)

---

- 7** Opening for mains cable (bottom)

Heat pump		Q
Weight	kg	2 × 215

Fig. B10: Heat pump Q dimensions and weights

## 4 Specification texts

### 4.1 TopVent® TP

Recirculation unit with reversible heat pump system for heating and cooling spaces up to 25 m in height, equipped with highly efficient air distributor.

The unit consists of the following components:

- Fan unit
- Heating/cooling section
- Air-Injector
- Unit control box
- Optional components

The heat pump system consists of the following components:

- Heat pump
- Communication kit
- EEV kit
- Branch joint kit (only for heat pump Q)

The TopVent® TP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the «fan coil unit» type, provided for in Commission Regulation (EU) 2016/2281.

---

#### Fan unit

---

Consisting of radial fan with high-efficiency EC motor, backwards-curved, three-dimensional contoured blades and free-running rotor made of a high-performance composite material, aerodynamically optimised inflow nozzle, low-noise, with integrated overload protection.

---

#### Heating/cooling section

---

Housing made of magnesium zinc sheet, air-tight, flame retardant, hygienic and easy to maintain because of smooth internal surfaces and ageing-resistant, silicone-free sealing materials, internally insulated with close-pored polyurethane. The heating/cooling section contains:

- The highly efficient heating/cooling coil consisting of seamless copper pipes with pressed-on, optimised and profiled aluminium fins, manifold made of copper and injection distributor
- The pull-out condensate separator with collecting channel, made of high-quality corrosion-resistant material, with a downslope in all directions for rapid draining
- The condensate trap for connecting to a condensate drain (supplied)

---

#### Air-Injector

---

##### Design with Air-Injector

Housing made of magnesium zinc sheet, air-tight, flame retardant, hygienic and easy to maintain because of ageing-resistant, silicone-free sealing materials, internally insulated with closed-cell polyethylene foam, with:

- Vortex air distributor with concentric outlet nozzle, adjustable vanes and integrated absorber hood
- Actuator for infinitely variable adjustment of the air distribution from vertical to horizontal
  - for draught-free air distribution in the hall under changing operating conditions
  - for the rapid and large-area reduction of temperature stratification in the room through induction of secondary air and strong mixing of the room air with supply air
- Supply air temperature sensor

##### Design without Air-Injector (variant)

Unit configured without vortex air distributor for connection to an on-site supply air duct and on-site air distribution, supply air temperature sensor supplied loose.

---

#### Unit control box

---

Control box fitted at the side of the casing for connection of the power supply and housing the control components that facilitate energy-optimised operation, controlled by the control system TopTronic® C. Plastic casing, protection rating IP 56. The following components are installed:

- Isolation switch
- Circuit board with all required electrical components, unit controller (clipped on)

The circuit board is fitted with push-in terminals facilitating easy installation of the connection cables. All components in the unit control box as well as sensors and actuators in the unit are fully factory-wired.

Power supply and bus connection to be installed on site.

---

#### Options for the unit

---

##### Suspension set

For ceiling installation of the unit consisting of 4 pairs U-profiles made of magnesium zinc sheet, height-adjustable to 1300 mm.

##### Filter box

Housing made of magnesium zinc sheet with 2 ISO coarse 60% bag filters (G4), with differential pressure switch for filter monitoring, factory-wired to the circuit board in the unit control box.

**Flat filter box**

Housing made of magnesium zinc sheet with 4 pleated ISO coarse 60% cell filters (G4), with differential pressure switch for filter monitoring, factory-wired to the circuit board in the unit control box.

**Standard paint finish**

Exterior painting in Hoval red (RAL 3000), including optional components and suspension set.

**Paint finish as desired**

Exterior painting of the unit in choice of RAL colour, including optional components and suspension set.

**Recirculation silencer**

As an attachment to the unit, made of magnesium zinc sheet, lined with sound insulation matting, insertion attenuation 3 dB.

**Condensate pump**

Consisting of a centrifugal pump and a drip tray, max. delivery rate of 150 l/h with a delivery head of 3 m. Condensate pump with connection cable enclosed.

**Heat pump system**

Highly efficient air-to-air heat pump system in split design with continuously modulating inverter technology for precise capacity control, reversible for heating and cooling the supply air, consisting of the following components:

**Heat pump P**

- Compact unit for outdoor installation
- Galvanised sheet steel casing, painted in RAL 7038 (agate grey) / RAL 7037 (dusty grey)
- Variable-speed inverter scroll compressor
- 2 speed-controlled fans
- Coated Al/Cu finned-tube evaporator or condenser
- Electronic expansion valve (for heating mode)
- 4-way valve
- Refrigerant shut-off valves
- Refrigerant R32
- Terminal box

**Heat pump Q**

- Cascade consisting of 2 compact devices for outdoor installation
- Galvanised sheet steel casing, painted in RAL 7038 (agate grey) / RAL 7037 (dusty grey)
- 1 variable-speed inverter scroll compressor per single unit
- 1 speed-controlled fan per single device per single unit
- Coated Al/Cu finned-tube evaporator or condenser
- Electronic expansion valve (for heating mode)
- 4-way valve
- Refrigerant shut-off valves
- Refrigerant R32
- Terminal box

**Communication kit PQ**

Control box with printed circuit board assembly for communication between heat pump, expansion valve and indoor climate unit and for recording the temperatures at the heating/cooling coil. Mounted on the indoor climate unit and fully wired.

**EEV kit P**

Galvanised sheet steel casing, with 1 electronic expansion valve for cooling mode, thermally insulated and protected against mechanical damage. Mounted on the indoor climate unit.

**EEV kit Q**

Galvanised sheet steel casing, with 2 electronic expansion valves for cooling mode, thermally insulated and protected against mechanical damage.  
On-site: Mounting to the indoor climate unit

**Branch joint kit Q**

For connecting the refrigerant lines of the single units in heat pump Q, consisting of 2 copper Y branch joints.

## 4.2 TopTronic® C – System control

Zone-based control system for the energy-optimised operation of decentralised Hoval indoor climate systems. Maximum system size per system bus: 64 control zones with up to 10 supply and extract air handling units or supply air units and 10 recirculation units each.

### Zone allocation

Configured in advance for the customer at the factory:

	Room designation	Unit type
Zone 1:	_____	_____
Zone 2:	_____	_____
...		

### System structure

- Zone control panel made of coated sheet steel (light grey RAL 7035), ... x ... x ... mm, with:
  - System operator terminal
  - Fresh air temperature sensor
  - 1 zone controller and 1 room temperature sensor per zone (expandable to up to 4 room temperature sensors per zone)
  - Safety relay
  - Electrical cabinet internally pre-wired, all components routed to terminals
- Zone bus: as serial bus for communication with all controllers in one control zone, with robust bus protocol via shielded, twisted bus cable (provided by the client)
- Unit controller: installed in the particular indoor climate unit, works autonomously according to the specifications of the zone controller
- Heating/cooling demand per zone with feedback monitoring

### Functions, standard

- Zone-based autonomous room control. Temperature and ventilation control separately adjustable for each zone
- Room temperature control via room-supply air cascade by means of energy-optimised double sequence control with priority circuit for energy recovery (supply and extract air handling units)
- Intelligent automatic heating to reach the desired room temperature at the switching time
- 5 adjustable room temperature set values per zone:
  - Cooling protection (lower setpoint in standby)
  - Overheating protection (upper setpoint in standby)
  - Room set value winter
  - Room set value summer
  - Night cooling set value (free cooling) (supply and extract air handling units, supply air units)
- Destratification mode for even temperature distribution

- Main operating modes of supply and extract air handling units:
  - VE .... Ventilation, infinitely variably adjustment
  - AQ.... Air quality, automatic control with Hoval combination sensor (option), optional reference variable:
    - CO<sub>2</sub> or VOC
    - Air humidity (optimised dehumidification mode)
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - EA .... Exhaust air, infinitely variably adjustment
  - SA .... Supply air, infinitely variably adjustment
  - ST .... Standby

- Main operating modes of supply air units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - SA .... Supply air, infinitely variably adjustment
    - With Hoval combination sensor (option) also demand-driven control of the fresh air ratio, optional reference variable CO<sub>2</sub> or VOC
  - ST .... Standby

- Main operating modes of recirculation units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - ST .... Standby

- Forced heating (construction site heating) can be activated on each device before completion of the overall system (activation by Hoval service technician)
- Control of draught-free air distribution with the Hoval Air-Injector: the discharge direction is adjusted infinitely variably and automatically according to the respective operating condition and the existing temperatures (heating/cooling).

### Operation

- TopTronic® C-ST system operator terminal: touch panel for visualisation and control of all Hoval indoor climate units registered on the bus

### Options for operation

- Activation of the system operator terminal for VNC access, for visualisation on customer's PC
- TopTronic® C-ZT as zone operator terminal: for simple on-site operation of a control zone
- Manual operating selector switches
- Manual operating selector buttons
- Operating of the units via building management system via standardised interfaces:
  - BACnet
  - Modbus IP
  - Modbus RTU

#### Alarms, protection

- Central alarm management with registration of all alarms (timestamp, priority, status) in an alarm list and alarm memory of the last 50 alarms; forwarding via e-mail can be set in the parameters.
- If there is a failure of communication, bus stations, sensor systems or supply media, each part of the system transitions to a protection mode which safeguards operation.
- A maintenance mode implemented in the control algorithm for testing all physical data points and alarms guarantees high reliability.
- Pre-programmed data points retrievable via logger function for 1 year

#### Options for the zone control panel

- Alarm lamp
- Socket

#### Per zone:

- The change-over between heating and cooling can be either automatic or manual
  - Cooling lock switch for automatic changeover
  - Heating/cooling switch for manual changeover
- Additional room temperature sensors (max. 3)
- Combination sensor room air quality, temperature and humidity
- Combination sensor fresh air temperature and humidity
- Transfer of actual values and setpoints from external systems (0...10 V; 4 - 20 mA)
- Load shedding input
- Signal for external extract air fan
- Operating selector switches on terminal
- Operating selector button on terminal
- Control of distributor pump, incl. power supply
- Control box TW Pro

#### Power distribution:

- Circuit breakers and output terminals for Hoval indoor climate units
- Safety relay (4-pin)

#### 4.3 TopTronic® C – Single zone control panel

Control system for the energy-optimised operation of decentralised Hoval indoor climate systems. Maximum system size: 1 control zone with up to 10 supply and extract air handling units or supply air units and 10 recirculation units.

#### System structure

- Zone control panel, designed as compact cabinet for wall installation, made of coated sheet steel (light grey RAL 7035), 380 × 300 × 210 mm, with:
  - System operator terminal
  - Fresh air temperature sensor
  - Zone controller
  - 1 Room temperature sensor (expandable to up to 4 room temperature sensors)
  - Safety relay
  - Electrical cabinet internally pre-wired, all components routed to terminals
- Zone bus: as serial bus for communication with all controllers in the control zone, with robust bus protocol via shielded, twisted bus cable (provided by the client)
- Unit controller: installed in the particular indoor climate unit, works autonomously according to the specifications of the zone controller
- Circuit board with external connections for:
  - Power supply
  - Zone bus
  - Room temperature sensors (max. 4)
  - Fresh air temperature sensor
  - Combination sensor room air quality, temperature and humidity
  - Collective alarm
  - Forced off
  - Heating demand
  - Setpoint heating demand
  - Fault heat supply
  - Cooling demand
  - Fault cold supply
  - External enabling heating/cooling (for automatic changeover)
  - External setting heating/cooling (for manual changeover)
  - Changeover valves heating/cooling
  - External setpoint fresh air ratio
  - Operating selector switch on terminal (digital)
  - Operating selector button on terminal

#### Functions, standard

- Room temperature control via sequential control of the coils
- Room temperature control via room-supply air cascade by means of energy-optimised double sequence control with priority circuit for energy recovery (supply and extract air handling units)
- Intelligent automatic heating to reach the desired room temperature at the switching time

- 5 adjustable room temperature set values per zone:
  - Cooling protection (lower setpoint in standby)
  - Overheating protection (upper setpoint in standby)
  - Room set value winter
  - Room set value summer
  - Night cooling set value (free cooling) (supply air units)
- Destratification mode for even temperature distribution
- Main operating modes of supply and extract air handling units:
  - VE .... Ventilation, infinitely variably adjustment
  - AQ.... Air quality, automatic control with Hoval combination sensor (option), optional reference variable CO<sub>2</sub> or VOC
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - EA .... Exhaust air, infinitely variably adjustment
  - SA .... Supply air, infinitely variably adjustment
  - ST .... Standby
- Main operating modes of supply air units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - SA .... Supply air, infinitely variably adjustment
    - With Hoval combination sensor (option) also demand-driven control of the fresh air ratio, optional reference variable CO<sub>2</sub> or VOC
  - ST .... Standby
- Main operating modes of recirculation units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - ST .... Standby
- Forced heating (construction site heating) can be activated on each device before completion of the overall system (activation by Hoval service technician)
- Control of draught-free air distribution with the Hoval Air-Injector: the discharge direction is adjusted infinitely variably and automatically according to the respective operating condition and the existing temperatures (heating/cooling).

**Operation**

- TopTronic® C-ST system operator terminal: touch panel for visualisation and control of all Hoval indoor climate units registered on the bus

**Options for operation**

- Activation of the system operator terminal for VNC access, for visualisation on customer's PC
- Operating of the units via building management system via standardised interfaces:
  - BACnet
  - Modbus IP
  - Modbus RTU

**Alarms, protection**

- Central alarm management with registration of all alarms (timestamp, priority, status) in an alarm list and alarm memory of the last 50 alarms; forwarding via e-mail can be set in the parameters.
- If there is a failure of communication, bus stations, sensor systems or supply media, each part of the system transitions to a protection mode which safeguards operation.
- A maintenance mode implemented in the control algorithm for testing all physical data points and alarms guarantees high reliability.
- Pre-programmed data points retrievable via logger function for 1 year

**Options for the zone control panel**

- Additional room temperature sensors (max. 3)
- Combination sensor room air quality, temperature and humidity
- Signal for external extract air fan
- Control box TW Pro

#### 4.4 HovalSupervisor cloud TopTronic® C

(Terms of use according to [www.hoval.com/hsc](http://www.hoval.com/hsc) are accepted when ordered.)

##### **HovalSupervisor cloud TopTronic® C**

Remote access, visualisation, historization, trends, evaluations and alarming for Hoval indoor climate systems with TopTronic® C control

- Project-specific system engineering
- Visualisation of the system statuses, error messages, actual and nominal values of the entire plant system
- Graphical display of the entire plant control system, in order to complete an analysis of sequences and subsequently to be able to perform an optimisation
- Integrated continuous line recorder for a period of 3 years
- Integrated alarm management
- Multi-user system: simultaneous access, 2 users included per plant
- Max. 300 data points historicized
- Max. 10 control zones

Consisting of:

- Project-specific engineering of the visualisation as described above
- Industrial router for connecting the TopTronic® C control system
  - Metal casing installed in the zone control panel
  - Without SIM card, free choice of phone network
  - Router configuration possible via web server
  - Network connections:
    - 2 x 10/100Mbit Ethernet
    - 2 x SIM card slot
  - SMA connections:
    - 1 x WLAN
    - 2 x mobile data via integrated antenna
  - Power supply for industrial router installed in zone control panel

##### **HovalSupervisor cloud TopTronic® C subscription**

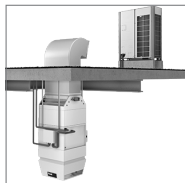
Subscription for use of the HovalSupervisor cloud for visualisation of a TopTronic® C system

- 1 year term (subscription billed once a year)
- Use of the HovalSupervisor cloud and storage of the data in the cloud
- Paid support during business hours (only for the software, not for the system)
- The respective valid conditions of use and the service level agreement (SLA) apply, which can be retrieved online.

##### **Options for HovalSupervisor cloud**

- Antenna to improve mobile data reception in conjunction with the HovalSupervisor cloud TopTronic® C
  - Antenna with mounting bracket for on-site installation outside the TopTronic® C zone control panel
  - 2G/3G/4G-LTE/5G-ready
  - SMA port available on the antenna
- Antenna extension cable for connecting the antenna in conjunction with the HovalSupervisor cloud
  - SMA port
  - Double shielded
  - Length: 5 m





**TopVent® MP**

Supply air units with efficient air distribution  
for ventilating, heating and cooling spaces up to 25 m in height  
with decentralised heat pump

1 Use . . . . .32  
2 Construction and operation . . . . .32  
3 Technical data . . . . .39  
4 Specification texts . . . . .51



## 1 Use

### 1.1 Intended use

TopVent® MP units are supply air units intended for ventilation, heating and cooling spaces up to 25 m in height with decentralised heat pump. They have the following functions:

- Heating and cooling with heat pump
- Fresh air supply
- Mixed air operation
- Recirculation operation
- Air distribution and destratification with adjustable Air-Injector
- Air filtration

The TopVent® MP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the «fan coil unit» type, provided for in Commission Regulation (EU) 2016/2281.

The Hoval TopTronic® C integrated control system ensures energy-efficient, demand-based operation of Hoval indoor climate systems.

Intended use also includes compliance with the operating instructions. Any usage over and above this use is considered to be not as intended. The manufacturer can accept no liability for damage resulting from improper use.

### 1.2 User group

The units are only allowed to be installed, operated and maintained by authorised and instructed personnel who are well acquainted with the units and are informed about possible dangers.

## 2 Construction and operation

### 2.1 Construction

The TopVent® MP unit consists of the following components:

#### Supply air unit

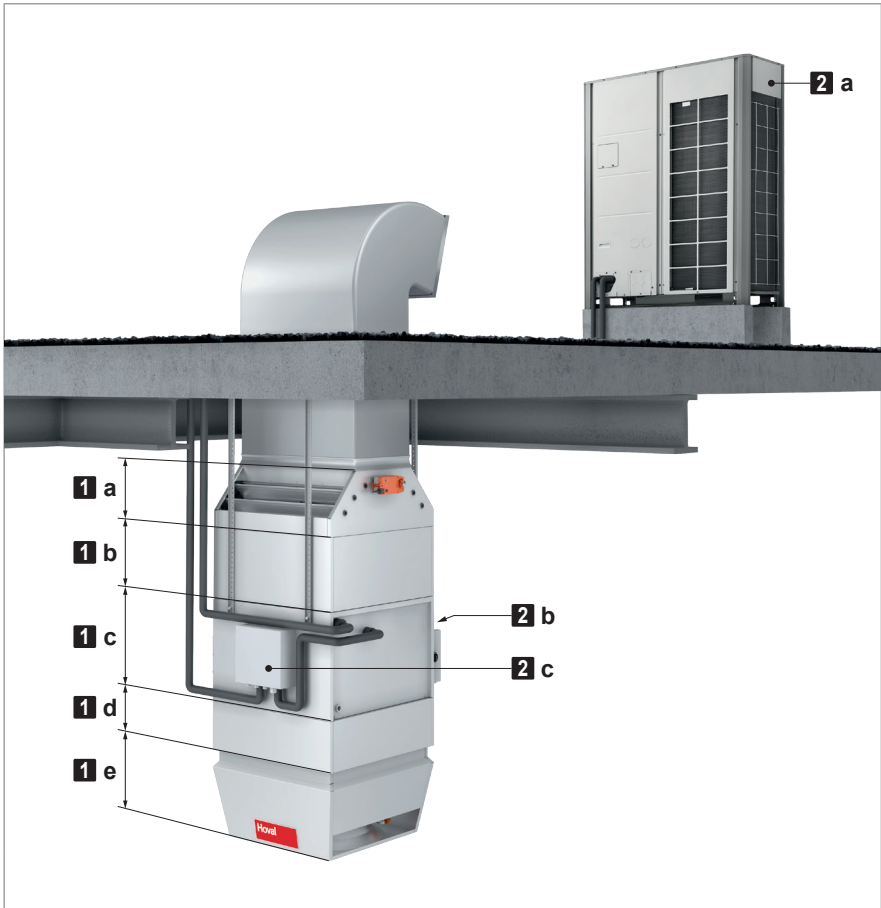
- Mixed air box with fresh air and recirculation dampers linked to move in opposite directions, equipped with actuator with spring return
- Filter box
  - For air filtration, 2 pocket filters ISO Coarse 60% are installed.
- Heating/cooling section
  - The heating cooling section contains the following components:
    - Heating/cooling coil for heating and cooling the supply air
    - Condensate separator
- Fan unit
  - Radial fan with energy-saving EC motor
- Air-Injector
  - The Air-Injector is a patented, infinitely variable vortex air distributor for the draught-free introduction of air into the hall under changing operating conditions.

As part of the TopTronic® C control system, the unit control box is an integral component.

#### Heat pump system

The reversible air/air heat pump system in split design generates both heat and cold decentrally. It consists of the following components:

- Heat pump with continuously modulating inverter technology for precise output control and high efficiency
- Communication kit for communication between heat pump, expansion valve and indoor climate unit
- EEV kit with expansion valve
- Branch joint kit (only for heat pump Q)




- 1** Supply air unit
  - a** Mixed air box
  - b** Filter box
  - c** Heating/cooling section
  - d** Fan unit
  - e** Air-Injector
- 2** Heat pump system
  - a** Heat pump
  - b** Communication kit
  - c** EEV kit

Fig. C1: TopVent® MP components



**Notice**

The picture only shows the schematic layout. In contrast to the illustration here, the EEV kit is located on the refrigerant connection side.

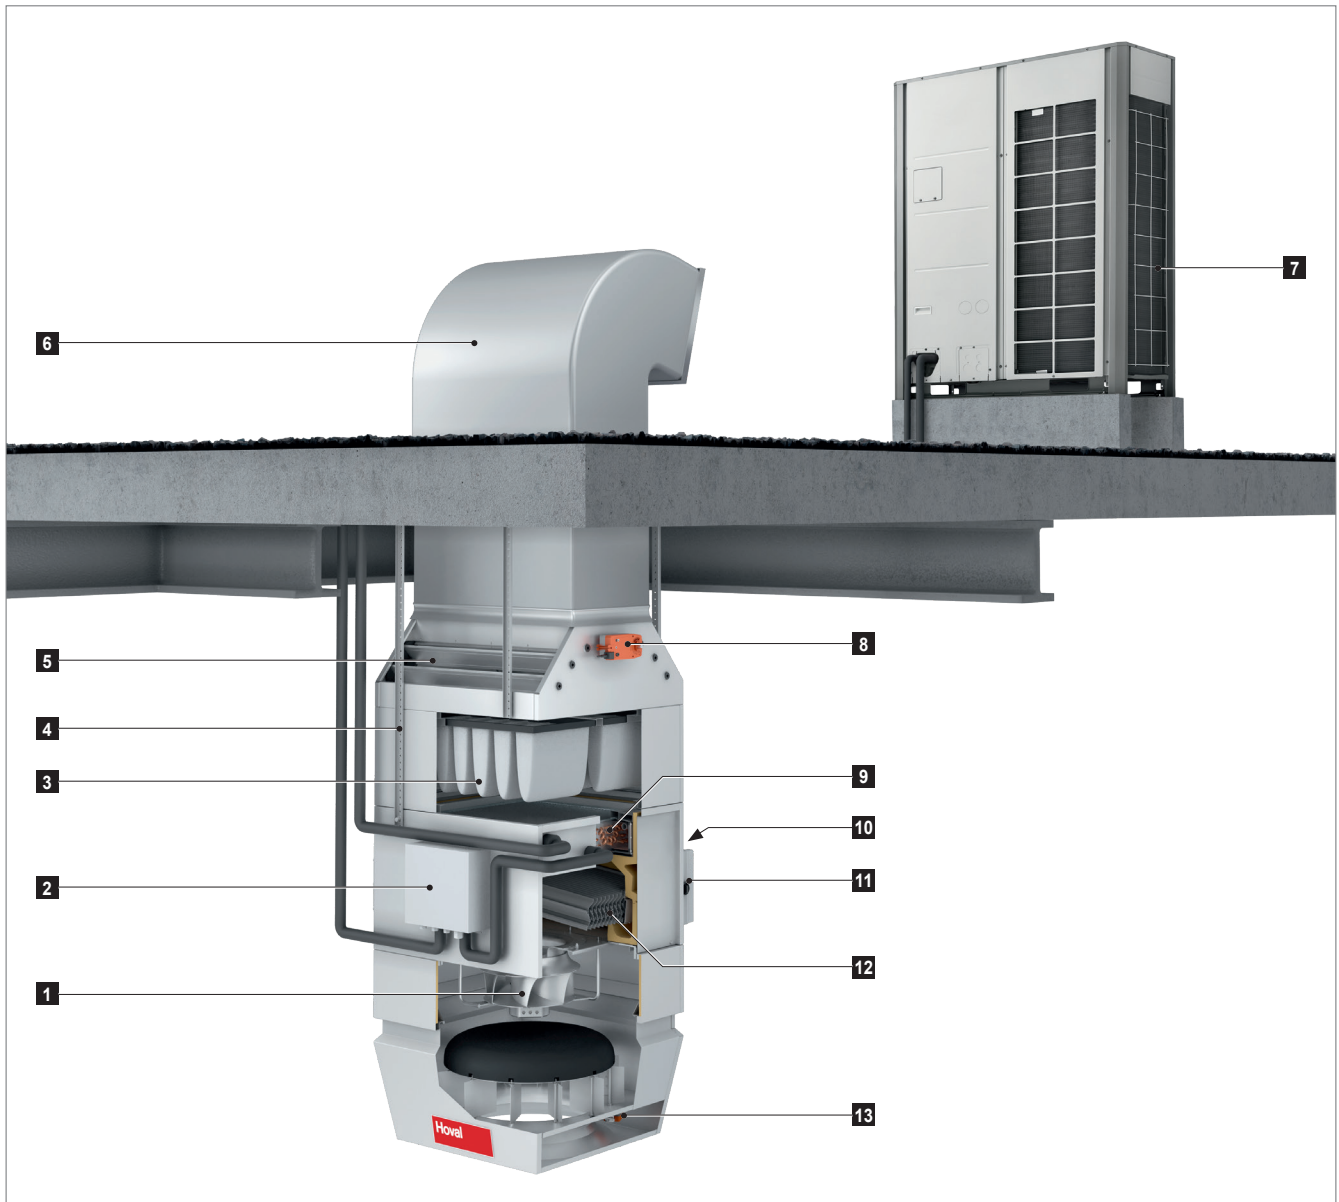


- |                                       |                                    |
|---------------------------------------|------------------------------------|
| <b>1</b> Fan                          | <b>8</b> Fresh air damper actuator |
| <b>2</b> EEV kit with expansion valve | <b>9</b> Heating/cooling coil      |
| <b>3</b> Air filter                   | <b>10</b> Communication kit        |
| <b>4</b> Suspension set               | <b>11</b> Unit control box         |
| <b>5</b> Recirculation damper         | <b>12</b> Condensate separator     |
| <b>6</b> Fresh air duct (on-site)     | <b>13</b> Actuator Air-Injector    |
| <b>7</b> Heat pump                    |                                    |

Fig. C2: TopVent® MP construction

**i Notice**  
The picture only shows the schematic layout. In contrast to the illustration here, the EEV kit is located on the refrigerant connection side.

2.2 Function


TopVent® MP-6-P | TopVent® MP-9-P

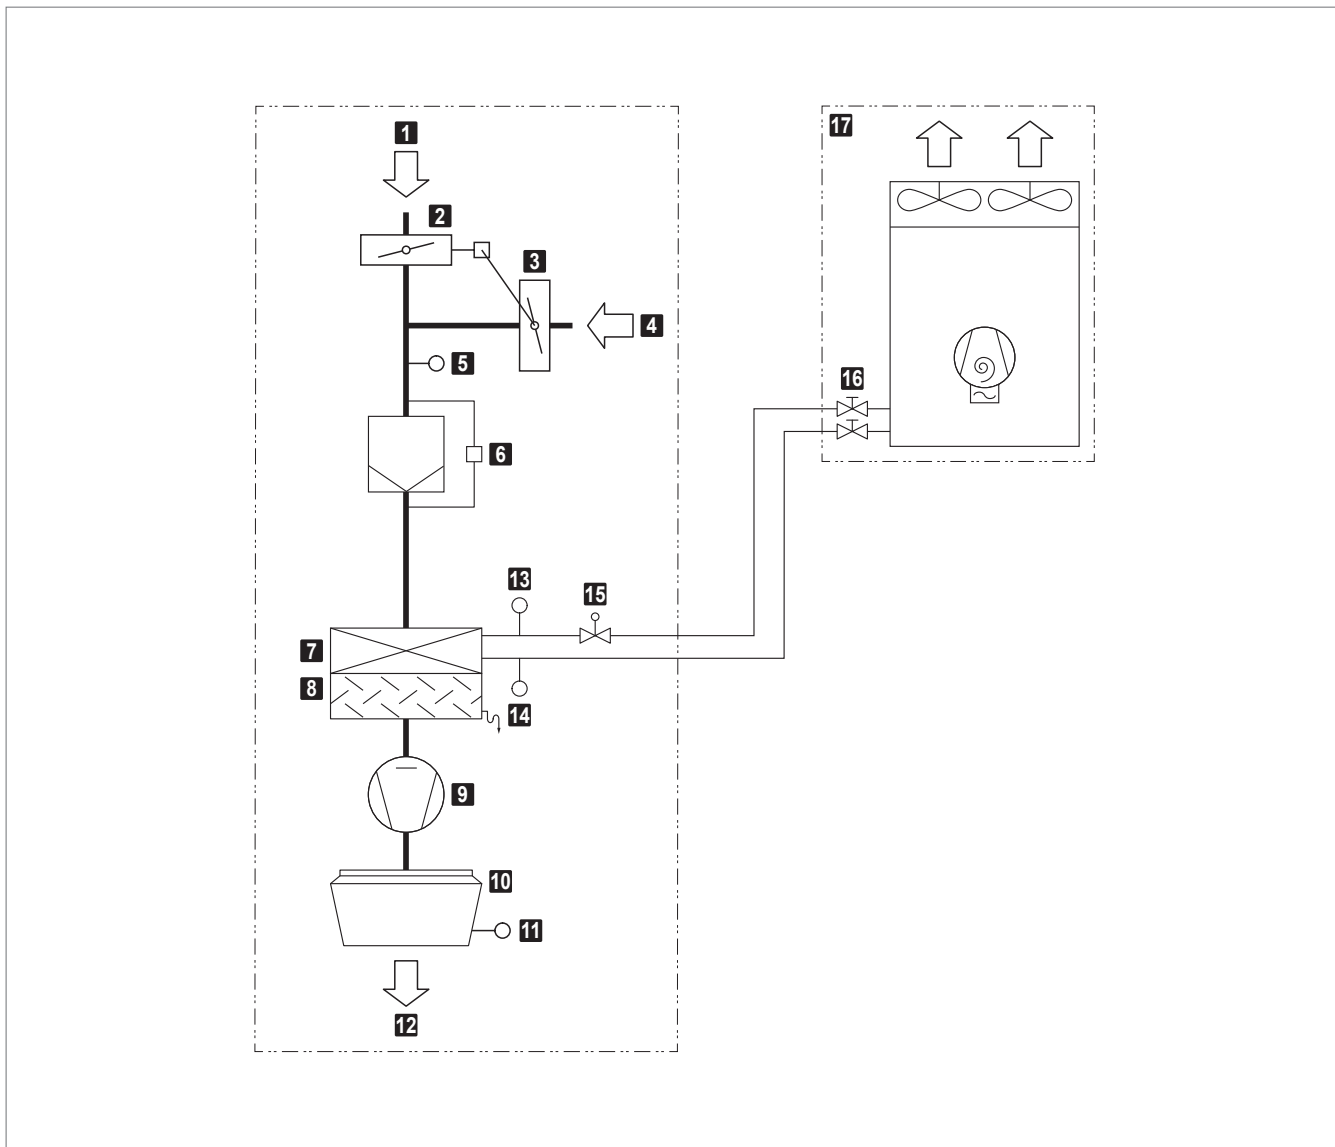

- |   |  |
|---|--|
| <b>1</b> Fresh air  | <b>10</b> Air-Injector with actuator                 |
| <b>2</b> Fresh air damper with actuator                         | <b>11</b> Supply air temperature sensor              |
| <b>3</b> Recirculation damper (opposed to the fresh air damper) | <b>12</b> Supply air                                 |
| <b>4</b> Extract air  | <b>13</b> Liquid temperature sensor (supplied loose) |
| <b>5</b> Mixed air temperature sensor                           | <b>14</b> Gas temperature sensor (supplied loose)    |
| <b>6</b> Air filter with differential pressure switch           | <b>15</b> Expansion valve                            |
| <b>7</b> Heating/cooling coil                                   | <b>16</b> Shut-off valves                            |
| <b>8</b> Condensate separator                                   | <b>17</b> Heat pump P                                |
| <b>9</b> Fan  |  |

Fig. C3: TopVent® MP-6-P | TopVent® MP-9-P function diagram

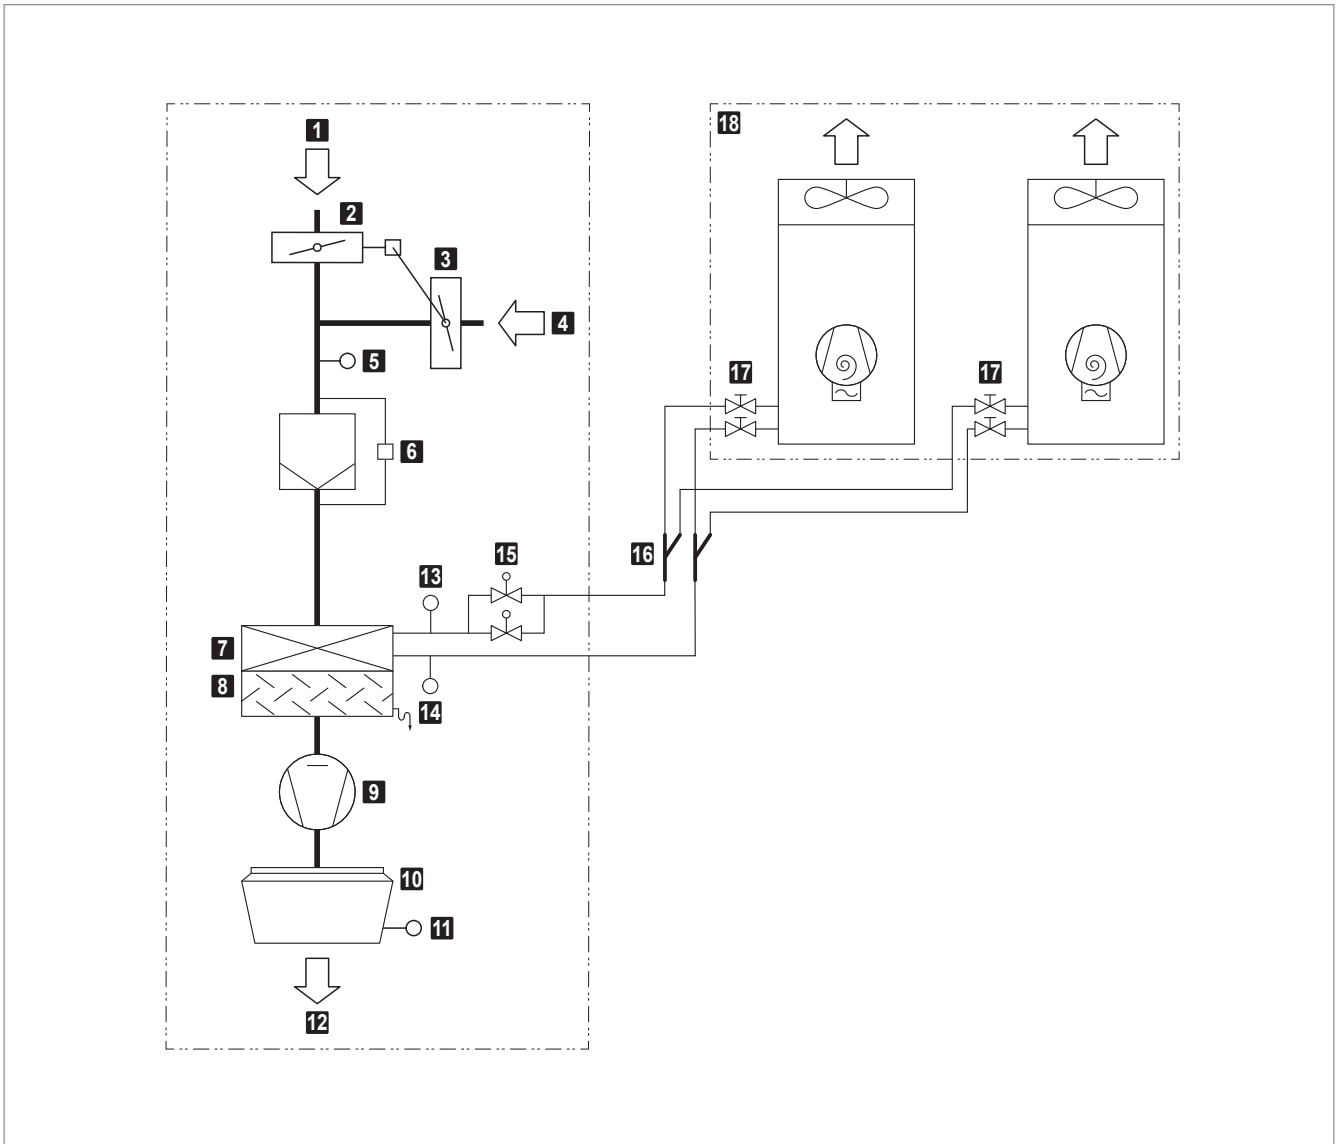TopVent® MP-9-Q



- |   |  |
|---|--|
| <b>1</b> Fresh air  | <b>10</b> Air-Injector with actuator                       |
| <b>2</b> Fresh air damper with actuator                         | <b>11</b> Supply air temperature sensor                    |
| <b>3</b> Recirculation damper (opposed to the fresh air damper) | <b>12</b> Supply air                                       |
| <b>4</b> Extract air  | <b>13</b> Liquid temperature sensor (supplied loose)       |
| <b>5</b> Mixed air temperature sensor                           | <b>14</b> Gas temperature sensor (supplied loose)          |
| <b>6</b> Air filter with differential pressure switch           | <b>15</b> Expansion valves (supplied loose in the EEV kit) |
| <b>7</b> Heating/cooling coil                                   | <b>16</b> Branch joint kit Q (supplied loose)              |
| <b>8</b> Condensate separator                                   | <b>17</b> Shut-off valves                                  |
| <b>9</b> Fan  | <b>18</b> Heat pump Q                                      |

Fig. C4: TopVent® MP-9-Q function diagram

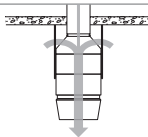

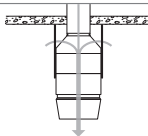
2.3 Operating modes

TopVent® MP operates in the following modes:

- Supply air speed 2
- Supply air speed 1
- Recirculation
- Recirculation speed 1
- Standby

The TopTronic® C control system regulates these operating modes automatically for each control zone in accordance with the specifications in the calendar. The following points also apply:

- The operating mode of a control zone can be switched over manually.
- Each TopVent® MP unit can operate individually in a local operating mode: Off, Supply air speed 2, Supply air speed 1, Recirculation, Recirculation speed 1.

Code	Operating mode		Description
SA2	<b>Supply air speed 2</b> The fan runs at speed 2 (high air flow rate). The room temperature set value day is active. The unit blows fresh air into the room. The control of the fresh air ratio can be selected:		
	<u>Fixed fresh air ratio:</u> The unit operates continuously with the set fresh air ratio. The system controls the heating/cooling according to the heating/cooling demand.		Fan ..... speed 2 Fresh air damper..... 10% open <sup>1)</sup> Heating/cooling ..... 0-100% <sup>2)</sup>  1) Percentage is adjustable 2) Depending on heat or cool demand
	<u>Variable fresh air ratio:</u> <ul style="list-style-type: none"> <li>■ The system regulates the fresh air ratio depending on the temperature. The set fresh air ratio serves as a minimum value. If the temperature conditions permit, more fresh air is brought into the room and used for free heating or free cooling. Only when this potential is fully utilised is the heating/cooling switched on via the coil if required.</li> <li>■ If a combination sensor for room air is installed (option), the system additionally controls the fresh air ratio depending on the air quality:                             <ul style="list-style-type: none"> <li>– If there is no heat demand, the fresh air damper is opened 100% if the indoor air quality is too poor.</li> <li>– When the setpoint value for the CO<sub>2</sub> or VOC content of the room air is reached, the fresh air damper closes again to the set minimum value.</li> </ul> </li> </ul>		Fan ..... speed 2 Fresh air damper..... MIN-100% open <sup>1)</sup> Heating/cooling ..... 0-100% <sup>2)</sup>  1) A minimum value can be set 2) Depending on heat or cool demand
 <b>Notice</b> In order to save heating energy, the unit only operates with the set minimum fresh air rate when heat is required.			
SA1	<b>Supply air speed 1</b> The same as SA2, but the fan operates at speed 1 (low air flow rate)		Fan ..... speed 1 Fresh air damper..... MIN-100% open <sup>1)</sup> Heating/cooling ..... 0-100%  1) Fixed or variable (see above)


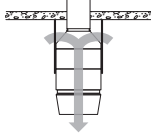
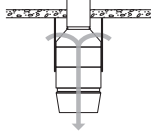
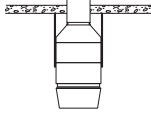
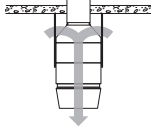
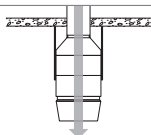
Code	Operating mode		Description
REC	<b>Recirculation</b> On/Off operation: during heat or cool demand, the unit draws in room air, heats or cools it and blows it back into the room. The room temperature set value day is active.		Fan ..... speed 1/2 <sup>1)</sup> Fresh air damper..... closed Heating/cooling ..... on <sup>1)</sup>  <sup>1)</sup> Depending on heat or cool demand
DES	<ul style="list-style-type: none"> <li>■ Destratification: To avoid heat build-up under the ceiling, it may be appropriate to switch on the fan when there is no heat or cool demand (either in permanent operation or in on/off operation depending on the temperature stratification, as desired).</li> </ul>		Fan ..... speed 2 Fresh air damper..... closed Heating/cooling ..... off
REC1	<b>Recirculation speed 1</b> The same as REC, but the unit operates only at speed 1 (low air flow rate)		Fan ..... speed 1 Fresh air damper..... closed Heating/cooling ..... on <sup>1)</sup>  <sup>1)</sup> Depending on heat or cool demand
DES	<ul style="list-style-type: none"> <li>■ Destratification: The same as for REC, but the unit operates only at speed 1</li> </ul>		Fan ..... speed 1 Fresh air damper..... closed Heating/cooling ..... off
ST	<b>Standby</b> The unit is ready for operation; the following operating modes are activated if required:		
CPR	<ul style="list-style-type: none"> <li>■ Cooling protection: If the room temperature drops below the set value for cooling protection, the unit heats up the room in recirculation operation.</li> </ul>		Fan ..... speed 2 Fresh air damper..... closed Heating ..... on
OPR	<ul style="list-style-type: none"> <li>■ Overheating protection: If the room temperature rises above the set value for overheating protection, the unit cools down the room in recirculation operation.</li> </ul>		Fan ..... speed 2 Fresh air damper..... closed Cooling..... on
NCS	<ul style="list-style-type: none"> <li>■ Night cooling: If the room temperature exceeds the set value for night cooling and the current fresh air temperature permits it, the unit blows cool fresh air into the room and extracts warmer room air.</li> </ul>		Fan ..... speed 2 Fresh air damper..... open Heating/cooling ..... off
L_OFF	<b>Off</b> (local operating mode) The unit is switched off; frost protection for the unit remains active.		Fan ..... off Fresh air damper..... closed Heating/cooling ..... off

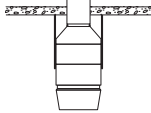Table C1: Operating modes TopVent® MP



### 3 Technical data

#### 3.1 Type code

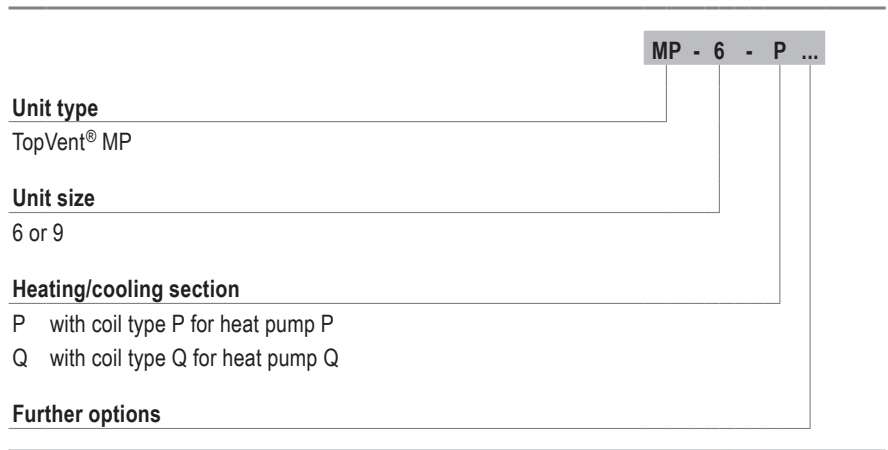


Table C2: Type code

### 3.2 Application limits

<b>Heating mode</b>				
Fresh air temperature (WB)		min.	°C	-25
		max.	°C	18
Air inlet temperature to the heating/cooling coil (DB)		min.	°C	5
		max.	°C	24
<b>Cooling mode</b>				
Fresh air temperature (DB)		min.	°C	-10
		max.	°C	48
Air inlet temperature to the heating/cooling coil (WB)		min.	°C	14
		max.	°C	26
Extract air temperature		max.	°C	50
Moisture content of extract air <sup>1)</sup>		max.	g/kg	15
Supply air temperature		max.	°C	45
Room temperature setpoint		min.	°C	12
		max.	°C	26
Air flow rate	Size 6:	min.	m <sup>3</sup> /h	3100
	Size 9:	min.	m <sup>3</sup> /h	5000
Condensate quantity	Size 6:	max.	kg/h	90
	Size 9:	max.	kg/h	150
The units cannot be used in:				
<ul style="list-style-type: none"> <li>■ Damp locations</li> <li>■ Rooms with mineral oil vapours in the air</li> <li>■ Rooms with a high salt content in the air</li> <li>■ Rooms with acidic or alkaline vapours in the air</li> </ul>				
1) Units for applications where the humidity in the room increases by more than 2 g/kg are available on request.				

Table C3: Application limits

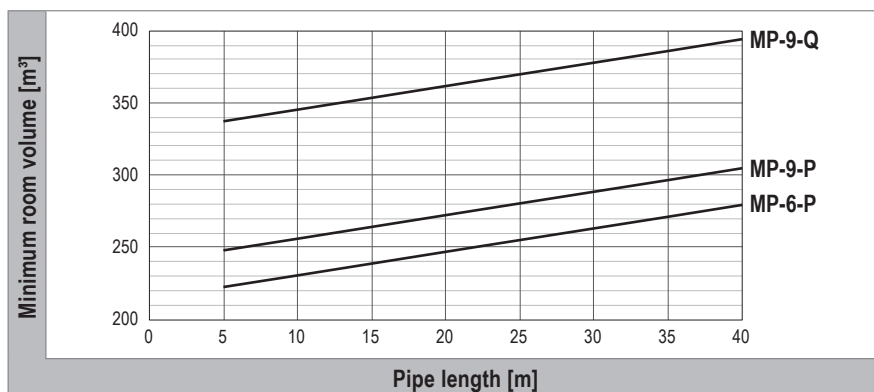


Fig. C5: Minimum room volume depending on the total refrigerant charge in accordance with EN 378

According to EN 378 (Refrigerating systems and heat pumps - Safety and environmental requirements), no additional safety measures for risk reduction are required for Hoval indoor climate units with heat pumps under the following conditions:

- The conditions according to EN 378 Annex C 3.1 are fulfilled.
- The room volume corresponds to the minimum values shown in Fig. C5 meaning that the permissible QLMV value is not exceeded.

### 3.3 Electrical connection

#### TopVent® MP

Unit type		MP-6	MP-9
Supply voltage	V AC	3 × 400	3 × 400
Permitted voltage tolerance	%	± 5	± 5
Frequency	Hz	50	50
Connected load	kW	1.5	3.3
Current consumption max.	A	2.8	5.7
Series fuse	A	13.0	13.0
Protection rating	–	IP 54	IP 54

Table C4: Electrical connection TopVent® MP

#### Heat pump

Heat pump		P	Q
Supply voltage	V AC	3 × 400	3 × 400
Permitted voltage tolerance	%	± 2	± 2
Frequency	Hz	50	50
Connected load	kW	16.8	2 × 15.9
Current consumption max.	A	26.9	2 × 25.5
Series fuse	A	32.0	2 × 32.0
Inrush current	A	5.9	2 × 5.9

Table C5: Heat pump electrical connections

### 3.4 Air flow rate

Unit type		MP-6	MP-9
Nominal air flow rate	m³/h	6000	9000
Floor area covered	m²	537	946

Table C6: Air flow rate

### 3.5 Air filtration

Filter	Fresh air / Extract air
Class acc. to ISO 16890	ISO coarse 60 %
Class acc. to EN 779	G4
Factory setting of differential pressure switches	180 Pa

Table C7: Air filtration

3.6 Technical data of the heat pump

Heat pump			P	Q
Heating	Rated heat output <sup>1)</sup>	kW	39.2	67.2
	Power consumption	kW	8.43	15.54
	COP	–	4.65	4.32
	$\eta_{s,h}$	–	204	197
	SCOP	–	5.17	4.99
Cooling	Rated cooling capacity <sup>2)</sup>	kW	39.2	67.2
	Power consumption	kW	11.88	23.30
	EER	–	3.30	2.88
	$\eta_{s,c}$	–	339	315
	SEER	–	8.55	7.94
Refrigerant	–	R32	R32	
Refrigerant fill volume	kg	11.4	2 × 8.5	

1) With fresh air temperature 7 °C / extract air temperature 20 °C  
 2) With fresh air temperature 35 °C / extract air temperature 27 °C / 45 % rel. humidity

Table C8: Heat pump technical data

3.7 Heat output

t <sub>F</sub> °C	t <sub>room</sub> °C	Type	Q kW	H <sub>max</sub> m	t <sub>s</sub> °C	P <sub>HP</sub> kW
-5	16	6-P	49.6	11.8	40.3	13.5
		9-P	49.6	15.1	32.1	13.5
		9-Q	85.2	11.7	43.8	25.6
	20	6-P	45.5	12.4	41.8	12.2
		9-P	45.5	16.1	34.3	12.2
		9-Q	78.0	12.4	45.0	22.9
-15	16	6-P	42.0	13.0	35.5	15.1
		9-P	42.0	15.1	28.6	15.1
		9-Q	71.8	13.0	38.4	29.3
	20	6-P	41.6	13.3	38.9	14.8
		9-P	41.6	17.4	32.0	14.8
		9-Q	71.2	13.2	41.8	28.9

Legend: t<sub>F</sub> = Fresh air temperature  
 t<sub>room</sub> = Room air temperature  
 Q = Heat output  
 H<sub>max</sub> = Maximum mounting height  
 t<sub>s</sub> = Supply air temperature  
 P<sub>HP</sub> = Power consumption of the heat pump

Reference: ■ At room air temperature 16 °C: extract air temperature 18 °C  
 ■ At room air temperature 20 °C: extract air temperature 22 °C  
 ■ Fresh air ratio 10 %

Table C9: Heat output TopVent® MP

3.8 Cooling capacity

$t_F$ °C	$t_{room}$ °C	$RH_{room}$ %	Type	$Q_{sen}$ kW	$Q_{tot}$ kW	$t_s$ °C	$m_C$ kg/h	$P_{HP}$ kW
28	22	50	6-P	23.9	29.2	12.6	7.8	6.6
			9-P	23.4	29.2	16.7	8.5	6.6
			9-Q	40.2	50.1	11.1	14.6	12.1
		70	6-P	21.8	34.9	13.6	19.2	8.6
			9-P	23.3	38.3	16.7	21.9	9.5
			9-Q	38.2	62.7	11.8	35.9	17.1
32	26	50	6-P	29.3	41.4	13.9	17.7	11.6
			9-P	29.3	41.4	18.7	17.7	11.6
			9-Q	50.3	71.0	11.8	30.5	23.0
		70	6-P	23.4	44.8	16.8	31.5	12.5
			9-P	23.4	44.8	20.7	31.4	12.5
			9-Q	40.1	76.8	15.2	53.9	25.0

Legend:  $t_F$  = Fresh air temperature  
 $t_{room}$  = Room air temperature  
 $RH_{room}$  = Relative humidity of the room air  
 $Q_{sen}$  = Sensible cooling capacity  
 $Q_{tot}$  = Total cooling capacity  
 $t_s$  = Supply air temperature  
 $m_C$  = Condensate quantity  
 $P_{HP}$  = Power consumption of the heat pump

Reference: ■ At room air temperature 22 °C: extract air temperature 24 °C  
 ■ At room air temperature 26 °C: extract air temperature 28 °C  
 ■ Fresh air ratio 10 %

Table C10: Cooling capacity TopVent® MP

### 3.9 Sound level

#### TopVent® MP

Unit type		MP-6		MP-9		
		indoors	outdoors	indoors	outdoors	
Sound pressure level (at a distance of 5 m) <sup>1)</sup>	dB(A)	61	55	62	55	
Total sound power level	dB(A)	83	77	84	77	
Octave sound power level	63 Hz	dB	42	38	49	46
	125 Hz	dB	53	48	67	62
	250 Hz	dB	68	62	71	67
	500 Hz	dB	72	68	75	70
	1000 Hz	dB	77	70	79	71
	2000 Hz	dB	78	72	77	71
	4000 Hz	dB	76	70	75	69
	8000 Hz	dB	70	64	69	64

<sup>1)</sup> with a hemispherical radiation pattern in a low-reflection room

Table C11: Sound level TopVent® MP

#### Heat pump

Heat pump		P		Q		
		Heating	Cooling	Heating	Cooling	
Sound pressure level (at a distance of 5 m)	dB(A)	59.0	59.0	63.0	61.0	
Total sound power level <sup>1)</sup>	dB(A)	81.0	81.0	85.0	83.0	
Octave sound pressure level <sup>2)</sup>	63 Hz	dB	62.5	63.6	68.7	67.4
	125 Hz	dB	58.5	58.6	62.4	59.9
	250 Hz	dB	60.1	57.7	62.2	60.8
	500 Hz	dB	58.6	58.4	60.8	59.7
	1000 Hz	dB	54.3	52.2	57.6	56.4
	2000 Hz	dB	51.6	49.8	54.5	53.6
	4000 Hz	dB	53.0	52.8	49.9	50.4
	8000 Hz	dB	46.7	45.9	49.2	48.2

<sup>1)</sup> The values given are maximum values; the noise level is fluctuating due to scroll technology.

<sup>2)</sup> Measured at a distance of 1 m in front of the unit and 1 m above the floor in a semi-anechoic chamber.

Table C12: Heat pump sound level

For particularly quiet unit operation (e.g. during the night), the heat pump can be operated in silent mode. It then runs at a reduced speed of the compressor and/or fan, which also leads to a reduced capacity output depending on the setting parameters.

Silent mode	Noise reduction	Capacity level	
		Heat pump P	Heat pump Q
Level 1	- 3 dB	100 %	100 %
Level 2	- 6 dB	95 %	80 %
Level 3	- 9 dB	75 %	55 %

Table C13: Noise reduction and capacity output in silent mode

3.10 Product information according to ErP

Model	TopVent® MP			Unit
	6-P	9-P	9-Q	
Cooling capacity (sensible) ( $P_{rated,c}$ )	28.2	27.0	46.4	kW
Cooling capacity (latent) ( $P_{rated,c}$ )	11.0	12.2	20.8	kW
Heating capacity ( $P_{rated,h}$ )	46,9	46,9	80,4	kW
Total electric power input ( $P_{elec}$ )	1.34	2.08	2.08	kW
Sound power level ( $L_{WA}$ )	83.0	83.0	84.0	dB
Contact details	Hoval Aktiengesellschaft Austrasse 70, 9490 Vaduz, Liechtenstein www.hoval.com			

Table C14: Product information according to Commission Regulation (EU) 2016/2281, Table 13

3.11 Dimensions and weights

**TopVent® MP-6-P**


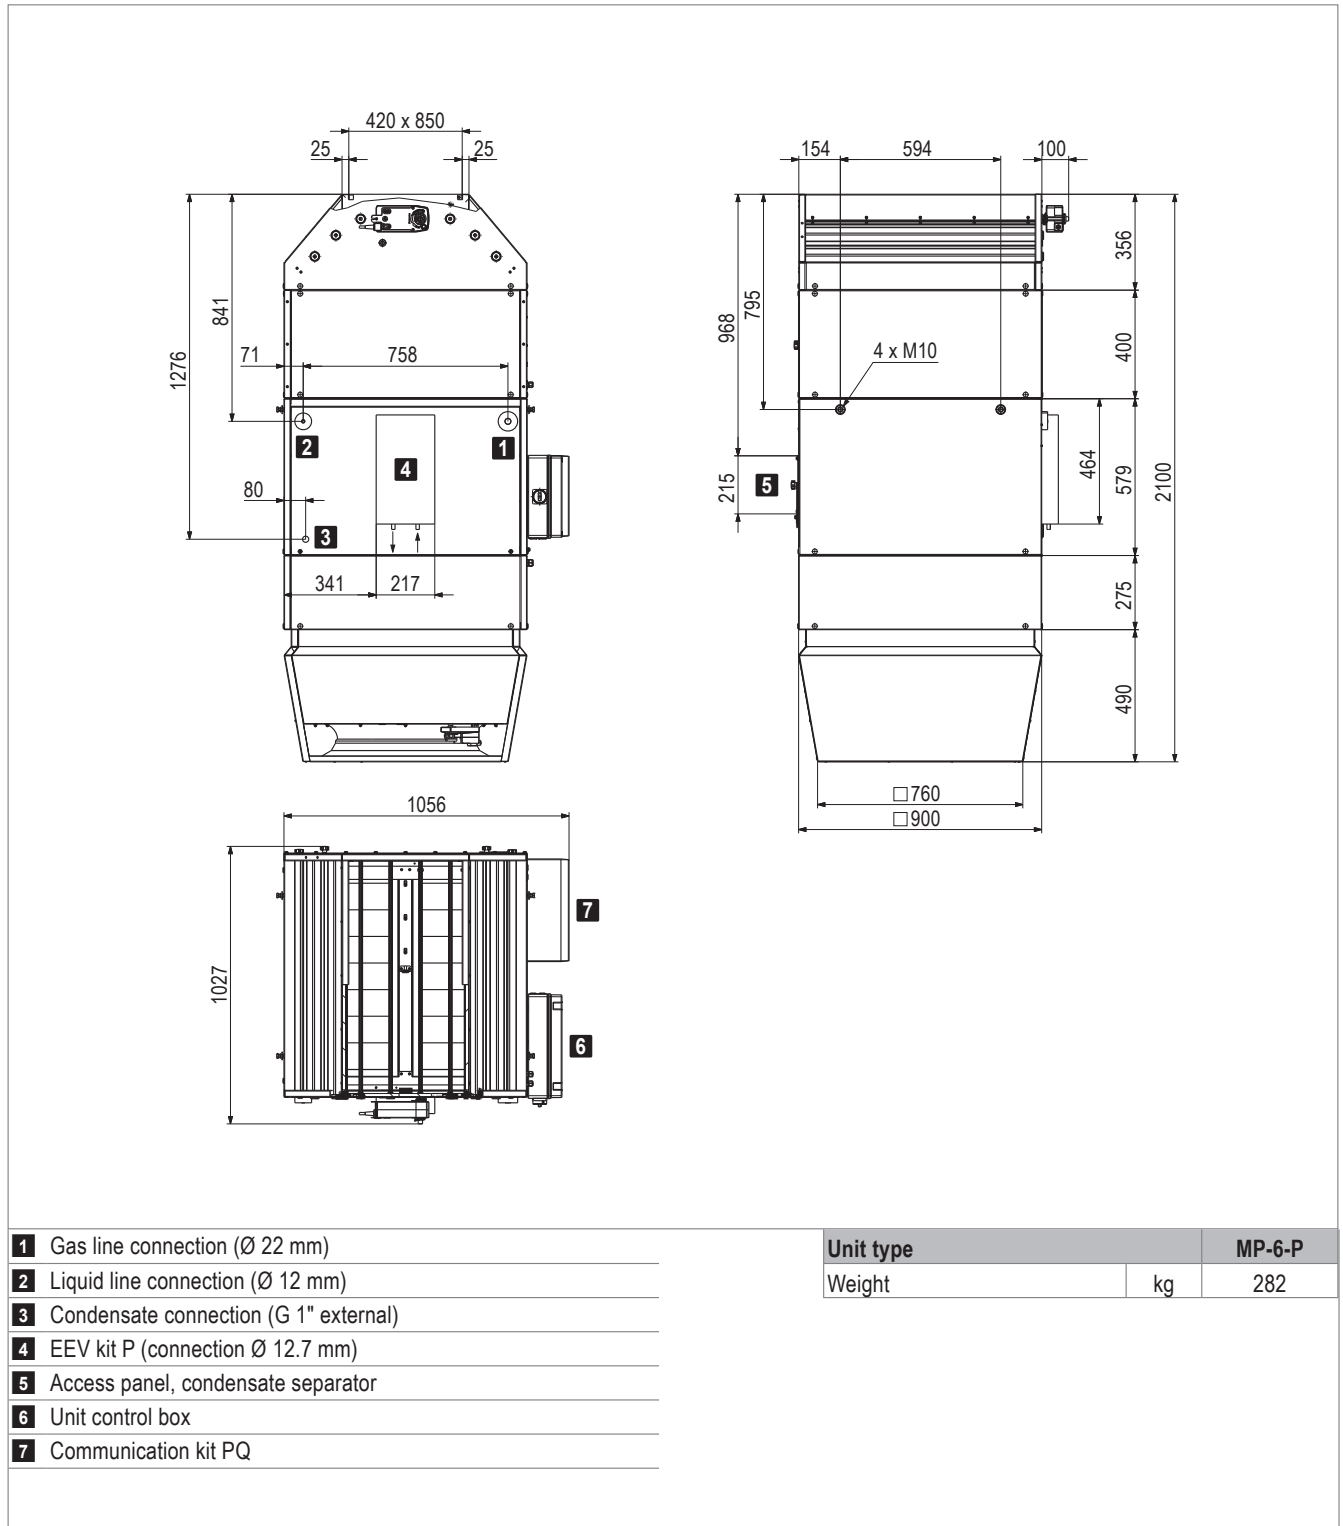


Fig. C6: TopVent® MP-6-P dimensions and weights

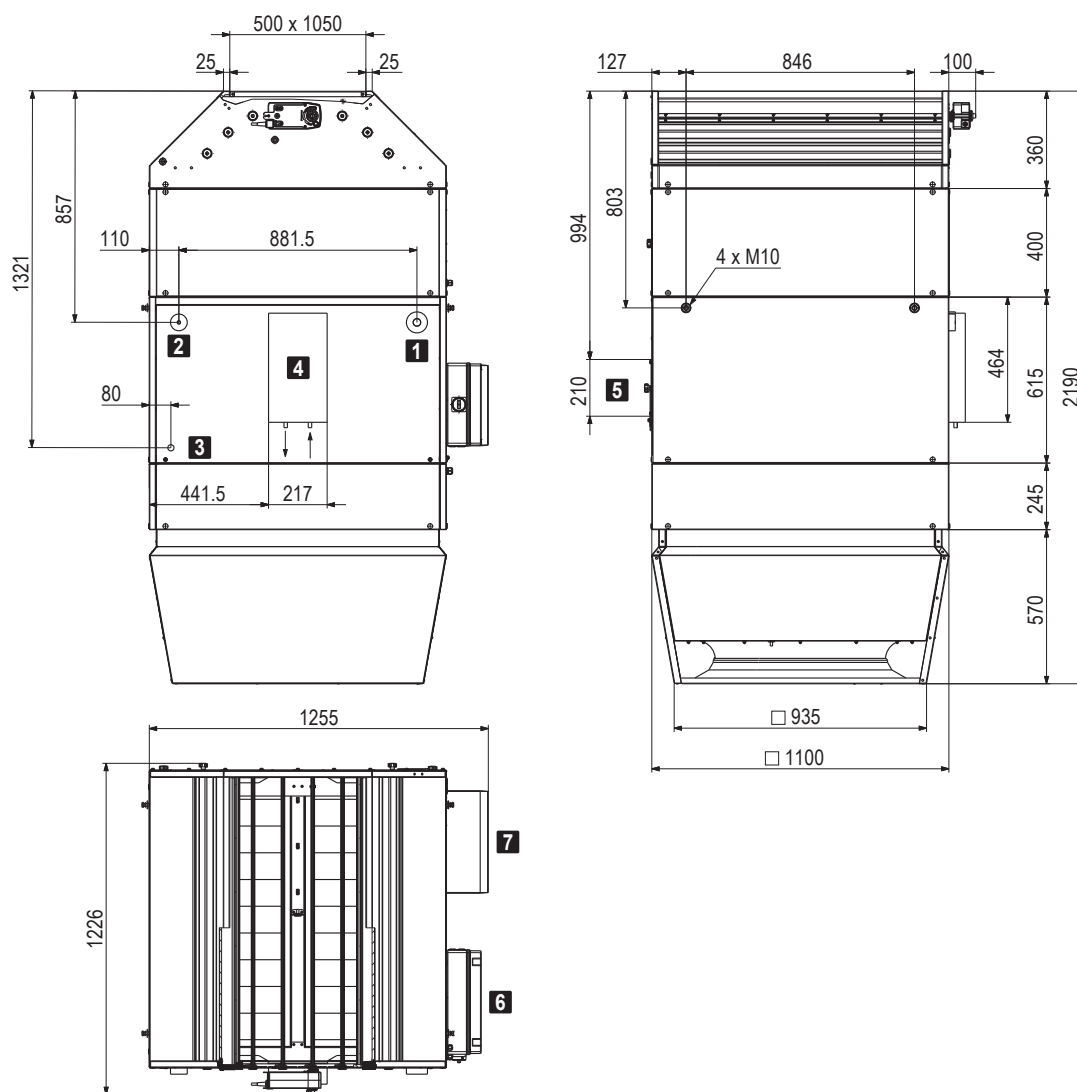

**TopVent® MP-9-P**




- 1** Gas line connection (Ø 28 mm)
- 2** Liquid line connection (Ø 12 mm)
- 3** Condensate connection (G 1" external)
- 4** EEV kit P (connection Ø 12.7 mm)
- 5** Access panel, condensate separator
- 6** Unit control box
- 7** Communication kit PQ

Unit type		MP-9-P
Weight	kg	380

Fig. C7: TopVent® MP-9-P dimensions and weights

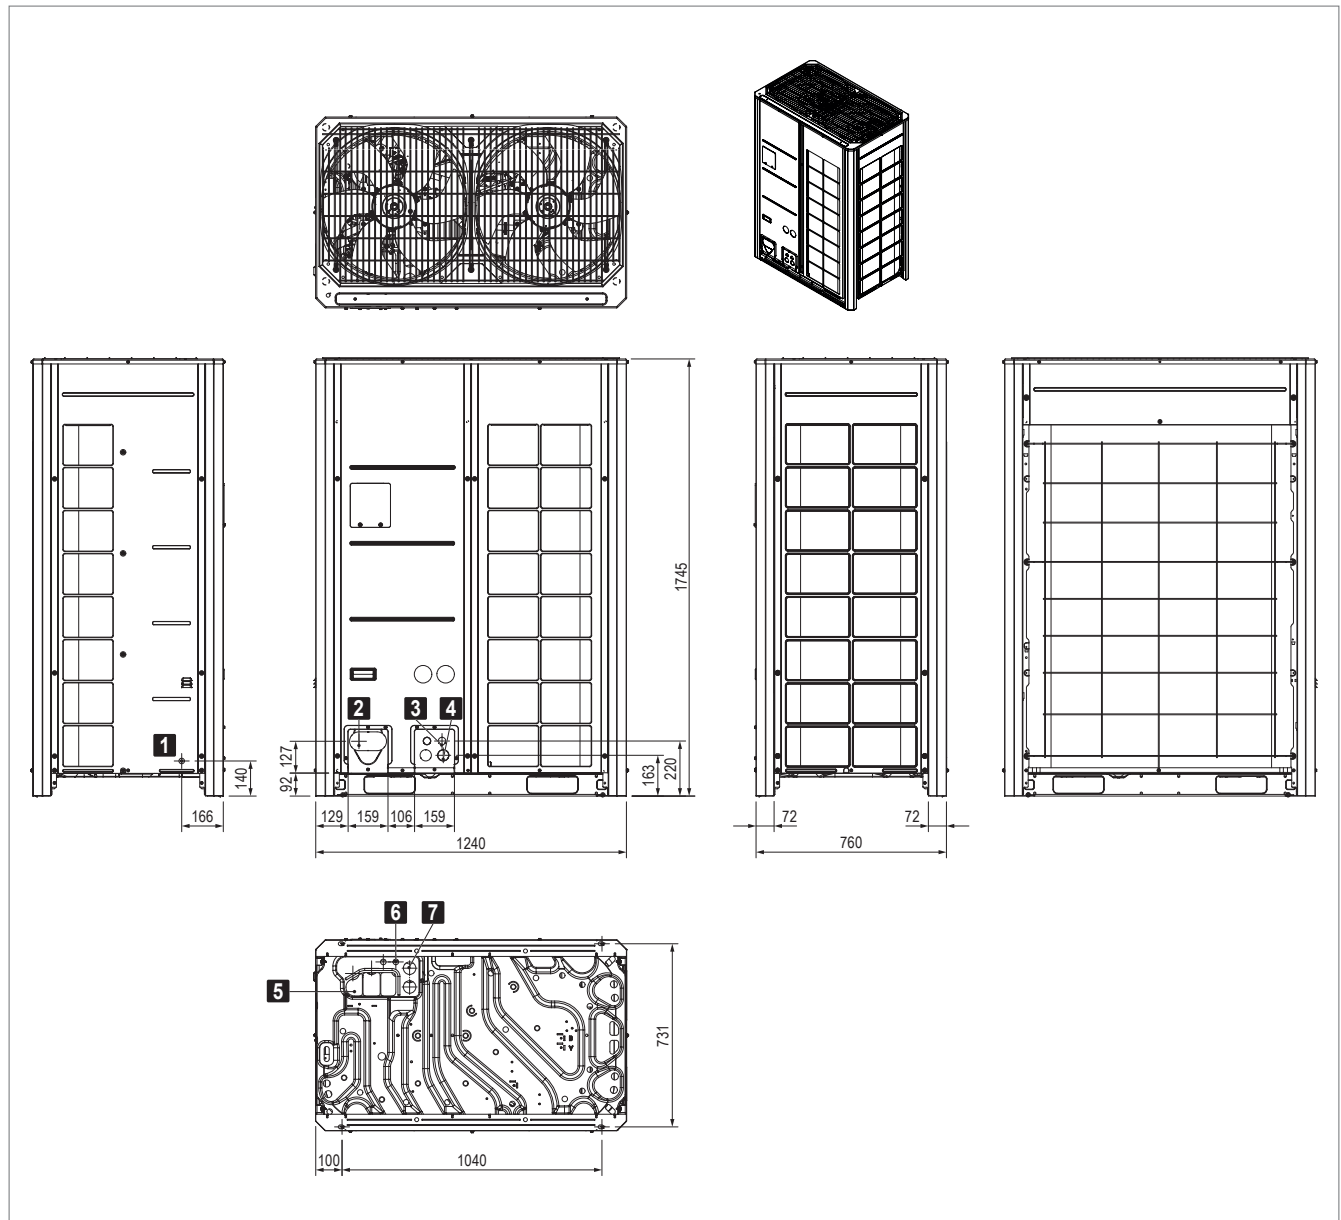Heat pump P



- 1** Opening for leak-tightness test

---

- 2** Opening for refrigerant pipes (front)
  - Liquid line connection                    Ø 12.7 mm
  - Gas line connection                        Ø 22.2 mm

---

- 3** Opening for signal lines (front)

---

- 4** Opening for mains cable (front)

---

- 5** Opening for refrigerant pipes (bottom)

---

- 6** Opening for signal lines (bottom)


---

- 7** Opening for mains cable (bottom)

Heat pump		P
Weight	kg	255

Fig. C8: Heat pump P dimensions and weights

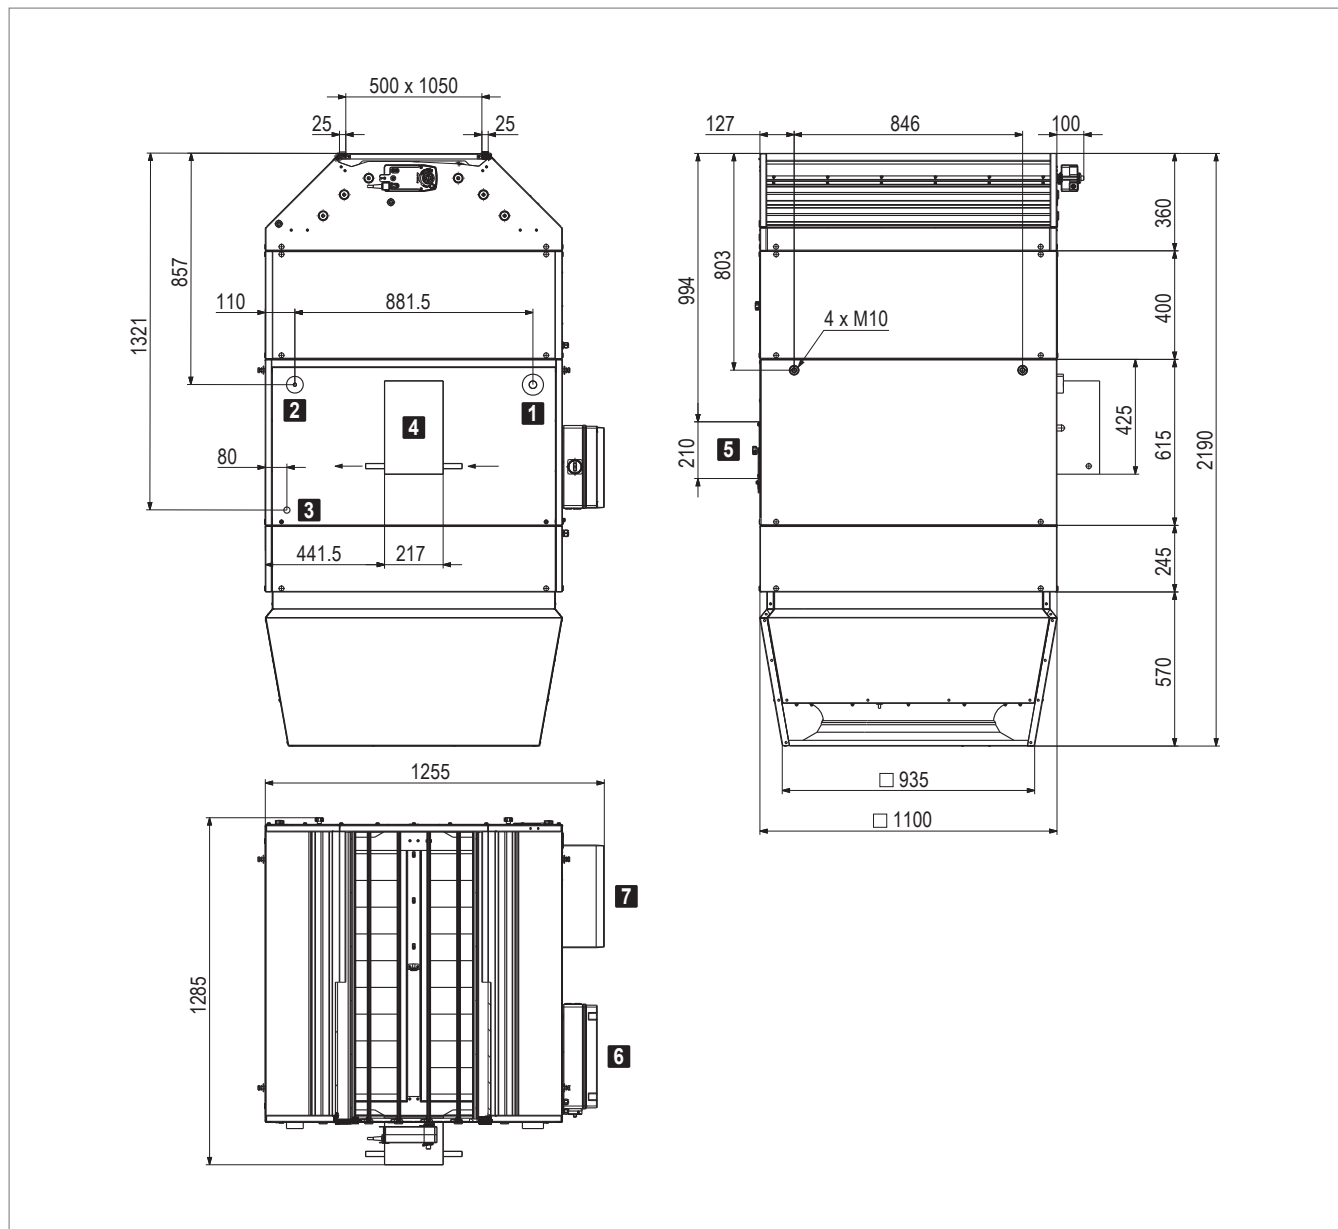TopVent® MP-9-Q




- 1** Gas line connection (Ø 28 mm)
- 2** Liquid line connection (Ø 12 mm)
- 3** Condensate connection (G 1" external)
- 4** EEV-Kit Q (connection Ø 19.05 mm)
- 5** Access panel, condensate separator
- 6** Unit control box
- 7** Communication kit PQ

Unit type		MP-9-Q
Weight	kg	380

Fig. C9: TopVent® MP-9-Q dimensions and weights

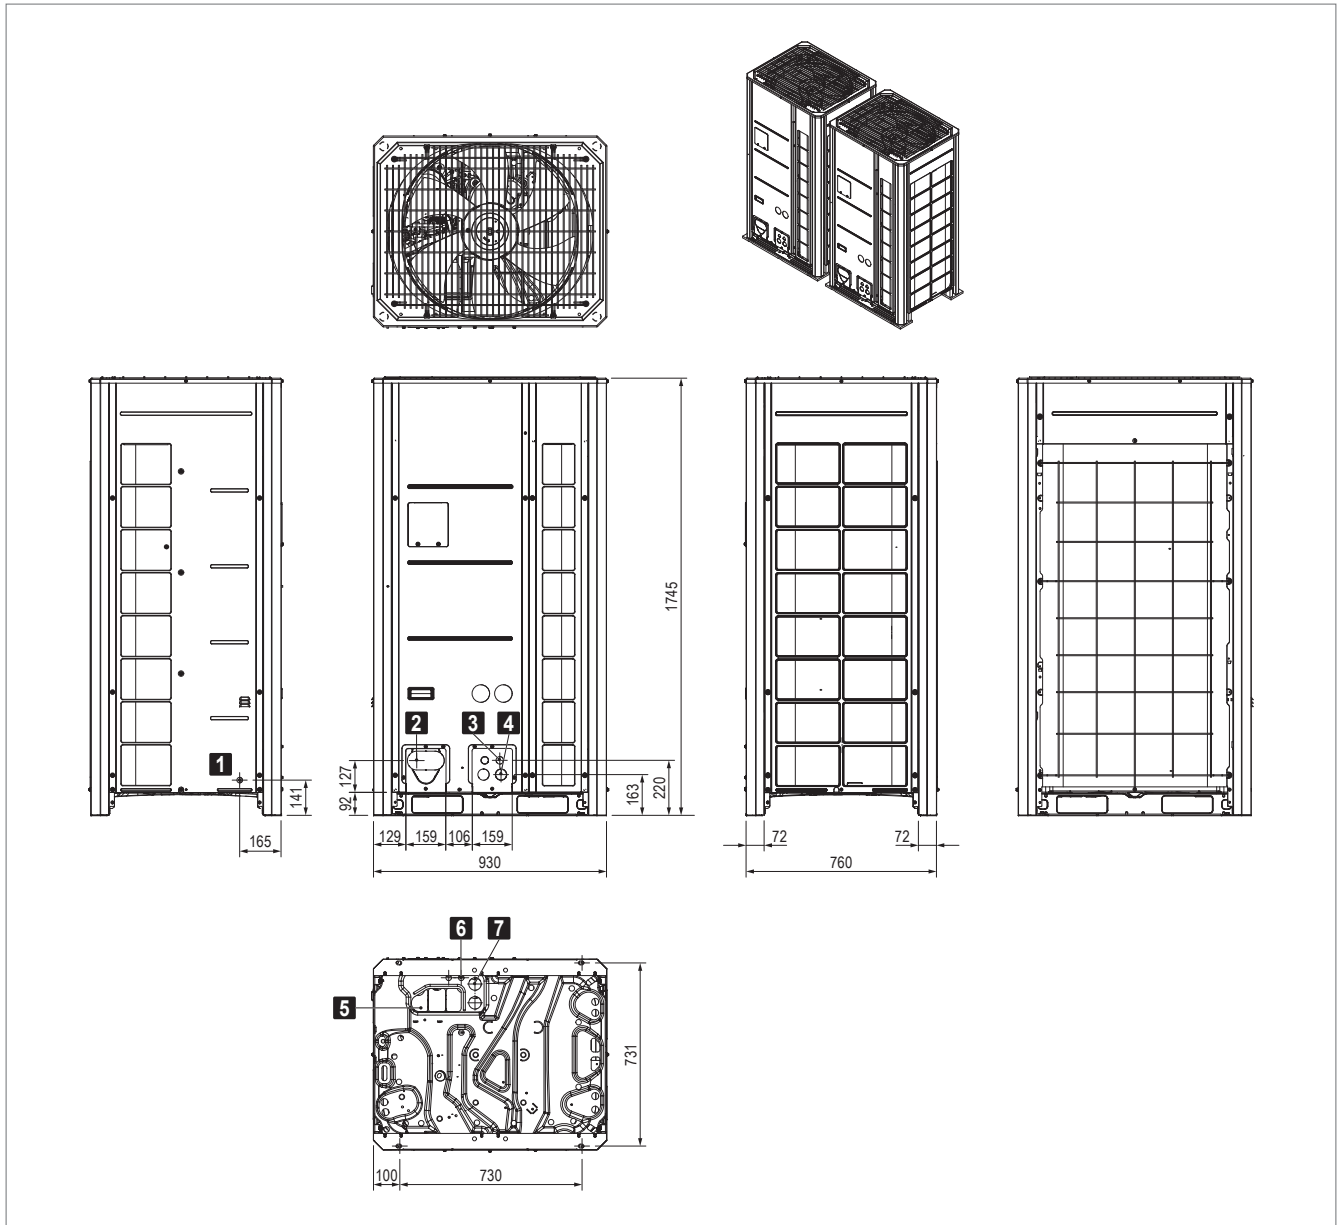Heat pump Q



- 1** Opening for leak-tightness test

---

- 2** Opening for refrigerant pipes (front)
  - Liquid line connection                    Ø 12.7 mm
  - Gas line connection                        Ø 22.2 mm

---

- 3** Opening for signal lines (front)

---

- 4** Opening for mains cable (front)

---

- 5** Opening for refrigerant pipes (bottom)

---

- 6** Opening for signal lines (bottom)

---

- 7** Opening for mains cable (bottom)

Heat pump		Q
Weight	kg	2 × 215

Fig. C10: Heat pump Q dimensions and weights

## 4 Specification texts

### 4.1 TopVent® MP

Supply air unit with reversible heat pump system for ventilating, heating and cooling spaces up to 25 m in height, equipped with highly efficient air distributor.

The unit consists of the following components:

- Fan unit
- Heating/cooling section
- Air-Injector
- Filter box
- Mixed air box
- Unit control box
- Optional components

The heat pump system consists of the following components:

- Heat pump
- Communication kit
- EEV kit
- Branch joint kit (only for heat pump Q)

The TopVent® MP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the «fan coil unit» type, provided for in Commission Regulation (EU) 2016/2281.

---

#### Fan unit

---

Consisting of radial fan with high-efficiency EC motor, backwards-curved, three-dimensional contoured blades and free-running rotor made of a high-performance composite material, aerodynamically optimised inflow nozzle, low-noise, with integrated overload protection.

---

#### Heating/cooling section

---

Housing made of magnesium zinc sheet, air-tight, flame retardant, hygienic and easy to maintain because of smooth internal surfaces and ageing-resistant, silicone-free sealing materials, internally insulated with close-pored polyurethane. The heating/cooling section contains:

- The highly efficient heating/cooling coil consisting of seamless copper pipes with pressed-on, optimised and profiled aluminium fins, manifold made of copper and injection distributor
- The pull-out condensate separator with collecting channel, made of high-quality corrosion-resistant material, with a downslope in all directions for rapid draining
- The condensate trap for connecting to a condensate drain (supplied)

---

#### Air-Injector

---

##### Design with Air-Injector

Housing made of magnesium zinc sheet, air-tight, flame retardant, hygienic and easy to maintain because of ageing-resistant, silicone-free sealing materials, internally insulated with closed-cell polyethylene foam, with:

- Vortex air distributor with concentric outlet nozzle, adjustable vanes and integrated absorber hood
- Actuator for infinitely variable adjustment of the air distribution from vertical to horizontal
  - for draught-free air distribution in the hall under changing operating conditions
  - for the rapid and large-area reduction of temperature stratification in the room through induction of secondary air and strong mixing of the room air with supply air
- Supply air temperature sensor

##### Design without Air-Injector (variant)

Unit configured without vortex air distributor for connection to an on-site supply air duct and on-site air distribution, supply air temperature sensor supplied loose.

---

#### Filter box

---

Housing made of magnesium zinc sheet, internally insulated with closed-cell polyethylene foam, with 2 ISO coarse 60% bag filters (G4), with differential pressure switch for filter monitoring, factory-wired to the circuit board in the unit control box.

---

#### Mixed air box

---

Casing made of magnesium zinc sheet, internally insulated with closed-cell polyethylene foam, with fresh air damper and recirculation damper linked to move in opposite directions; includes actuator with spring return, factory-wired to the circuit board in the unit control box.

---

#### Unit control box

---

Control box fitted at the side of the casing for connection of the power supply and housing the control components that facilitate energy-optimised operation, controlled by the control system TopTronic® C. Plastic casing, protection rating IP 56. The following components are installed:

- Isolation switch
- Circuit board with all required electrical components, unit controller (clipped on)

The circuit board is fitted with push-in terminals facilitating easy installation of the connection cables. All components in the unit control box as well as sensors and actuators in the unit are fully factory-wired.

Power supply and bus connection to be installed on site.

---

#### Options for the unit

---

##### **Suspension set**

For ceiling installation of the unit consisting of 4 pairs U-profiles made of magnesium zinc sheet, height-adjustable to 1300 mm.

##### **Standard paint finish**

Exterior painting in Hoval red (RAL 3000), including optional components and suspension set.

##### **Paint finish as desired**

Exterior painting of the unit in choice of RAL colour, including optional components and suspension set.

##### **Condensate pump**

Consisting of a centrifugal pump and a drip tray, max. delivery rate of 150 l/h with a delivery head of 3 m. Condensate pump with connection cable enclosed.

---

#### Heat pump system

---

Highly efficient air-to-air heat pump system in split design with continuously modulating inverter technology for precise capacity control, reversible for heating and cooling the supply air, consisting of the following components:

##### **Heat pump P**

- Compact unit for outdoor installation
- Galvanised sheet steel casing, painted in RAL 7038 (agate grey) / RAL 7037 (dusty grey)
- Variable-speed inverter scroll compressor
- 2 speed-controlled fans
- Coated Al/Cu finned-tube evaporator or condenser
- Electronic expansion valve (for heating mode)
- 4-way valve
- Refrigerant shut-off valves
- Refrigerant R32
- Terminal box

##### **Heat pump Q**

- Cascade consisting of 2 compact devices for outdoor installation
- Galvanised sheet steel casing, painted in RAL 7038 (agate grey) / RAL 7037 (dusty grey)
- 1 variable-speed inverter scroll compressor per single unit
- 1 speed-controlled fan per single device per single unit
- Coated Al/Cu finned-tube evaporator or condenser
- Electronic expansion valve (for heating mode)
- 4-way valve
- Refrigerant shut-off valves
- Refrigerant R32
- Terminal box

##### **Communication kit PQ**

Control box with printed circuit board assembly for communication between heat pump, expansion valve and indoor climate unit and for recording the temperatures at the heating/cooling coil. Mounted on the indoor climate unit and fully wired.

##### **EEV kit P**

Galvanised sheet steel casing, with 1 electronic expansion valve for cooling mode, thermally insulated and protected against mechanical damage. Mounted on the indoor climate unit.

##### **EEV kit Q**

Galvanised sheet steel casing, with 2 electronic expansion valves for cooling mode, thermally insulated and protected against mechanical damage.  
On-site: Mounting to the indoor climate unit

##### **Branch joint kit Q**

For connecting the refrigerant lines of the single units in heat pump Q, consisting of 2 copper Y branch joints.

## 4.2 TopTronic® C – System control

Zone-based control system for the energy-optimised operation of decentralised Hoval indoor climate systems. Maximum system size per system bus: 64 control zones with up to 10 supply and extract air handling units or supply air units and 10 recirculation units each.

### Zone allocation

Configured in advance for the customer at the factory:

	Room designation	Unit type
Zone 1:	_____	_____
Zone 2:	_____	_____
...		

### System structure

- Zone control panel made of coated sheet steel (light grey RAL 7035), ... x ... x ... mm, with:
  - System operator terminal
  - Fresh air temperature sensor
  - 1 zone controller and 1 room temperature sensor per zone (expandable to up to 4 room temperature sensors per zone)
  - Safety relay
  - Electrical cabinet internally pre-wired, all components routed to terminals
- Zone bus: as serial bus for communication with all controllers in one control zone, with robust bus protocol via shielded, twisted bus cable (provided by the client)
- Unit controller: installed in the particular indoor climate unit, works autonomously according to the specifications of the zone controller
- Heating/cooling demand per zone with feedback monitoring

### Functions, standard

- Zone-based autonomous room control. Temperature and ventilation control separately adjustable for each zone
- Room temperature control via room-supply air cascade by means of energy-optimised double sequence control with priority circuit for energy recovery (supply and extract air handling units)
- Intelligent automatic heating to reach the desired room temperature at the switching time
- 5 adjustable room temperature set values per zone:
  - Cooling protection (lower setpoint in standby)
  - Overheating protection (upper setpoint in standby)
  - Room set value winter
  - Room set value summer
  - Night cooling set value (free cooling) (supply and extract air handling units, supply air units)
- Destratification mode for even temperature distribution

- Main operating modes of supply and extract air handling units:
  - VE .... Ventilation, infinitely variably adjustment
  - AQ.... Air quality, automatic control with Hoval combination sensor (option), optional reference variable:
    - CO<sub>2</sub> or VOC
    - Air humidity (optimised dehumidification mode)
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - EA .... Exhaust air, infinitely variably adjustment
  - SA .... Supply air, infinitely variably adjustment
  - ST .... Standby

- Main operating modes of supply air units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - SA .... Supply air, infinitely variably adjustment
    - With Hoval combination sensor (option) also demand-driven control of the fresh air ratio, optional reference variable CO<sub>2</sub> or VOC
  - ST .... Standby

- Main operating modes of recirculation units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - ST .... Standby

- Forced heating (construction site heating) can be activated on each device before completion of the overall system (activation by Hoval service technician)
- Control of draught-free air distribution with the Hoval Air-Injector: the discharge direction is adjusted infinitely variably and automatically according to the respective operating condition and the existing temperatures (heating/cooling).

### Operation

- TopTronic® C-ST system operator terminal: touch panel for visualisation and control of all Hoval indoor climate units registered on the bus

### Options for operation

- Activation of the system operator terminal for VNC access, for visualisation on customer's PC
- TopTronic® C-ZT as zone operator terminal: for simple on-site operation of a control zone
- Manual operating selector switches
- Manual operating selector buttons
- Operating of the units via building management system via standardised interfaces:
  - BACnet
  - Modbus IP
  - Modbus RTU

#### Alarms, protection

- Central alarm management with registration of all alarms (timestamp, priority, status) in an alarm list and alarm memory of the last 50 alarms; forwarding via e-mail can be set in the parameters.
- If there is a failure of communication, bus stations, sensor systems or supply media, each part of the system transitions to a protection mode which safeguards operation.
- A maintenance mode implemented in the control algorithm for testing all physical data points and alarms guarantees high reliability.
- Pre-programmed data points retrievable via logger function for 1 year

#### Options for the zone control panel

- Alarm lamp
- Socket

#### Per zone:

- The change-over between heating and cooling can be either automatic or manual
  - Cooling lock switch for automatic changeover
  - Heating/cooling switch for manual changeover
- Additional room temperature sensors (max. 3)
- Combination sensor room air quality, temperature and humidity
- Combination sensor fresh air temperature and humidity
- Transfer of actual values and setpoints from external systems (0...10 V; 4 - 20 mA)
- Load shedding input
- Signal for external extract air fan
- Operating selector switches on terminal
- Operating selector button on terminal
- Control of distributor pump, incl. power supply
- Control box TW Pro

#### Power distribution:

- Circuit breakers and output terminals for Hoval indoor climate units
- Safety relay (4-pin)

#### 4.3 TopTronic® C – Single zone control panel

Control system for the energy-optimised operation of decentralised Hoval indoor climate systems. Maximum system size: 1 control zone with up to 10 supply and extract air handling units or supply air units and 10 recirculation units.

#### System structure

- Zone control panel, designed as compact cabinet for wall installation, made of coated sheet steel (light grey RAL 7035), 380 × 300 × 210 mm, with:
  - System operator terminal
  - Fresh air temperature sensor
  - Zone controller
  - 1 Room temperature sensor (expandable to up to 4 room temperature sensors)
  - Safety relay
  - Electrical cabinet internally pre-wired, all components routed to terminals
- Zone bus: as serial bus for communication with all controllers in the control zone, with robust bus protocol via shielded, twisted bus cable (provided by the client)
- Unit controller: installed in the particular indoor climate unit, works autonomously according to the specifications of the zone controller
- Circuit board with external connections for:
  - Power supply
  - Zone bus
  - Room temperature sensors (max. 4)
  - Fresh air temperature sensor
  - Combination sensor room air quality, temperature and humidity
  - Collective alarm
  - Forced off
  - Heating demand
  - Setpoint heating demand
  - Fault heat supply
  - Cooling demand
  - Fault cold supply
  - External enabling heating/cooling (for automatic changeover)
  - External setting heating/cooling (for manual changeover)
  - Changeover valves heating/cooling
  - External setpoint fresh air ratio
  - Operating selector switch on terminal (digital)
  - Operating selector button on terminal

#### Functions, standard

- Room temperature control via sequential control of the coils
- Room temperature control via room-supply air cascade by means of energy-optimised double sequence control with priority circuit for energy recovery (supply and extract air handling units)
- Intelligent automatic heating to reach the desired room temperature at the switching time



- 5 adjustable room temperature set values per zone:
  - Cooling protection (lower setpoint in standby)
  - Overheating protection (upper setpoint in standby)
  - Room set value winter
  - Room set value summer
  - Night cooling set value (free cooling) (supply air units)
- Destratification mode for even temperature distribution
- Main operating modes of supply and extract air handling units:
  - VE .... Ventilation, infinitely variably adjustment
  - AQ.... Air quality, automatic control with Hoval combination sensor (option), optional reference variable CO<sub>2</sub> or VOC
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - EA .... Exhaust air, infinitely variably adjustment
  - SA .... Supply air, infinitely variably adjustment
  - ST .... Standby
- Main operating modes of supply air units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - SA .... Supply air, infinitely variably adjustment
    - With Hoval combination sensor (option) also demand-driven control of the fresh air ratio, optional reference variable CO<sub>2</sub> or VOC
  - ST .... Standby
- Main operating modes of recirculation units:
  - REC . Recirculation, infinitely variably adjustment
  - DES.. Destratification
  - ST .... Standby
- Forced heating (construction site heating) can be activated on each device before completion of the overall system (activation by Hoval service technician)
- Control of draught-free air distribution with the Hoval Air-Injector: the discharge direction is adjusted infinitely variably and automatically according to the respective operating condition and the existing temperatures (heating/cooling).

#### Operation

- TopTronic® C-ST system operator terminal: touch panel for visualisation and control of all Hoval indoor climate units registered on the bus

#### Options for operation

- Activation of the system operator terminal for VNC access, for visualisation on customer's PC
- Operating of the units via building management system via standardised interfaces:
  - BACnet
  - Modbus IP
  - Modbus RTU

#### Alarms, protection

- Central alarm management with registration of all alarms (timestamp, priority, status) in an alarm list and alarm memory of the last 50 alarms; forwarding via e-mail can be set in the parameters.
- If there is a failure of communication, bus stations, sensor systems or supply media, each part of the system transitions to a protection mode which safeguards operation.
- A maintenance mode implemented in the control algorithm for testing all physical data points and alarms guarantees high reliability.
- Pre-programmed data points retrievable via logger function for 1 year

#### Options for the zone control panel

- Additional room temperature sensors (max. 3)
- Combination sensor room air quality, temperature and humidity
- Signal for external extract air fan
- Control box TW Pro

#### 4.4 HovalSupervisor cloud TopTronic® C

(Terms of use according to [www.hoval.com/hsc](http://www.hoval.com/hsc) are accepted when ordered.)

##### **HovalSupervisor cloud TopTronic® C**

Remote access, visualisation, historization, trends, evaluations and alarming for Hoval indoor climate systems with TopTronic® C control

- Project-specific system engineering
- Visualisation of the system statuses, error messages, actual and nominal values of the entire plant system
- Graphical display of the entire plant control system, in order to complete an analysis of sequences and subsequently to be able to perform an optimisation
- Integrated continuous line recorder for a period of 3 years
- Integrated alarm management
- Multi-user system: simultaneous access, 2 users included per plant
- Max. 300 data points historicized
- Max. 10 control zones

Consisting of:

- Project-specific engineering of the visualisation as described above
- Industrial router for connecting the TopTronic® C control system
  - Metal casing installed in the zone control panel
  - Without SIM card, free choice of phone network
  - Router configuration possible via web server
  - Network connections:
    - 2 x 10/100Mbit Ethernet
    - 2 x SIM card slot
  - SMA connections:
    - 1 x WLAN
    - 2 x mobile data via integrated antenna
  - Power supply for industrial router installed in zone control panel

##### **HovalSupervisor cloud TopTronic® C subscription**

Subscription for use of the HovalSupervisor cloud for visualisation of a TopTronic® C system

- 1 year term (subscription billed once a year)
- Use of the HovalSupervisor cloud and storage of the data in the cloud
- Paid support during business hours (only for the software, not for the system)
- The respective valid conditions of use and the service level agreement (SLA) apply, which can be retrieved online.

##### **Options for HovalSupervisor cloud**

- Antenna to improve mobile data reception in conjunction with the HovalSupervisor cloud TopTronic® C
  - Antenna with mounting bracket for on-site installation outside the TopTronic® C zone control panel
  - 2G/3G/4G-LTE/5G-ready
  - SMA port available on the antenna
- Antenna extension cable for connecting the antenna in conjunction with the HovalSupervisor cloud
  - SMA port
  - Double shielded
  - Length: 5 m



**Options**

1 Type code . . . . . .58

2 Design without Air-Injector . . . . . .60

3 Suspension set . . . . . .60

4 Air filtration . . . . . .60

5 Paint finish . . . . . .61

6 Recirculation silencer . . . . . .61

7 Condensate pump . . . . . .62

# 1 Type code

## 1.1 Type code for recirculation units

	TP	6	-	P	/	ST	.	D1	/	S	.	FK	.	LH	.	U-	/	-	.	KP	/	TC	.	-	-	-	-	
<b>Unit type</b> TopVent® TP																												
<b>Unit size</b> 6 or 9																												
<b>Heating/cooling section</b> P with coil type P for heat pump P Q with coil type Q for heat pump Q (only for size 9)																												
<b>Design</b> ST Standard																												
<b>Air outlet</b> D1 Design with Air-Injector D0 Design without Air-Injector																												
<b>Installation</b> - without S Suspension set																												
<b>Filter box</b> -- without FK Filter box FF Flat filter box																												
<b>Paint finish</b> -- without LH Standard paint finish LU Paint finish as desired																												
<b>Silencer</b> -- without U- Recirculation silencer																												
<b>Condensate pump</b> -- without KP Condensate pump																												
<b>Control system</b> TC TopTronic® C																												

Table D1: Type code for recirculation units

## 1.2 Type code for supply air units

	MP	6	-	P	/	ST	.	D1	/	S	.	--	.	LH	.	-	/	-	.	KP	/	TC	.	--	.	--
<b>Unit type</b> TopVent® MP																										
<b>Unit size</b> 6 or 9																										
<b>Heating/cooling section</b> P with coil type P for heat pump P Q with coil type Q for heat pump Q (only for size 9)																										
<b>Design</b> ST Standard																										
<b>Air outlet</b> D1 Design with Air-Injector D0 Design without Air-Injector																										
<b>Installation</b> - without S Suspension set																										
<b>Paint finish</b> -- without LH Standard paint finish LU Paint finish as desired																										
<b>Condensate pump</b> -- without KP Condensate pump																										
<b>Control system</b> TC TopTronic® C																										

Table D2: Type code for supply air units

## 2 Design without Air-Injector

TopVent® units in the design without Air-Injector are suitable for connecting to an air distribution system supplied by the client.

Please note the following:

- The supply air temperature sensor is enclosed. Install it in the supply air duct and wire it up to the unit control box.

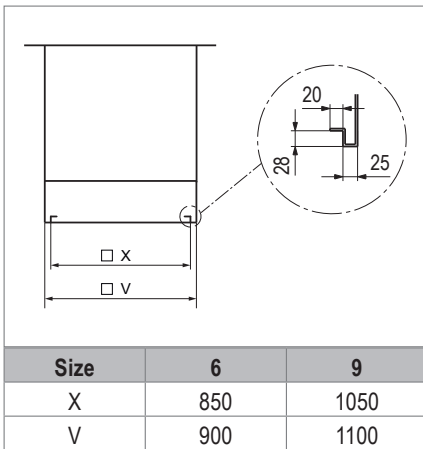


Table D3: Supply air duct connection dimensions (in mm)

## 3 Suspension set

A suspension set is available to make it easy to install the units on the ceiling. The set consists of 4 pairs of U-profiles made of magnesium zinc sheet and is height-adjustable up to 1300 mm.

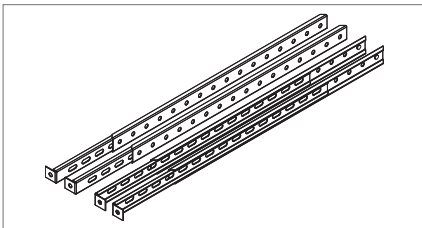


Fig. D1: Suspension set

## 4 Air filtration

For hygiene reasons, Hoval recommends always fitting TopVent® units with a filter.



**Notice**

TopVent® MP units are equipped with the filter box with pocket filters as standard.

### 4.1 Filter box

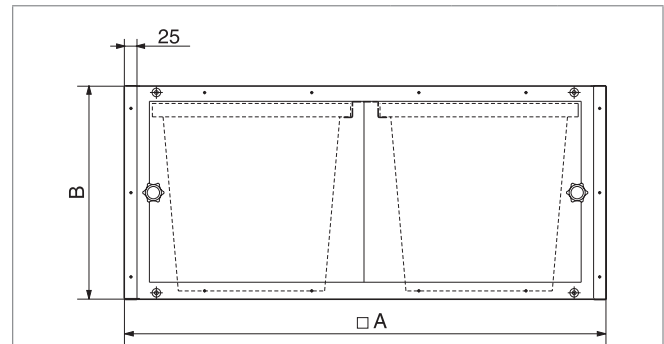
A filter box with 2 bag filters can be installed for the purpose of filtering the recirculation air. The modular construction made of magnesium zinc sheet with 2 sliding doors makes it easy to replace the filters.



**Notice**

In the planning phase make sure there is enough space in front of the sliding doors so that the filters can be replaced with ease.

A differential pressure switch is installed for automatic monitoring of the filter. It shows when the filters have to be changed.




Size		6	9
A	mm	900	1100
B	mm	400	400
Filter class		ISO coarse 60 % (G4)	
Weight	kg	20	24
Factory setting of differential pressure switches	Pa	180	180

Table D4: Filter box technical data

#### 4.2 Flat filter box

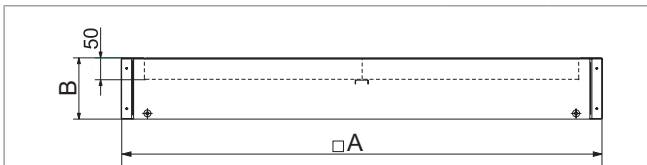A flat filter box with 4 pleated cell filters can be installed for the purpose of filtering the recirculation air. A differential pressure switch is installed for automatic monitoring of the filter. It shows when the filters have to be changed.



Size		6	9
A	mm	900	1100
B	mm	140	165
Filter class		ISO coarse 60 % (G4)	
Weight	kg	10	12.5
Factory setting of differential pressure switches	Pa	180	180

Table D5: Flat filter box technical data

## 5 Paint finish

If the customer wishes, the units can be provided with an exterior paint finish. There are 2 possibilities:

- Standard paint finish in Hoval red (RAL 3000)
- Paint finish in desired RAL colour

## 6 Recirculation silencer

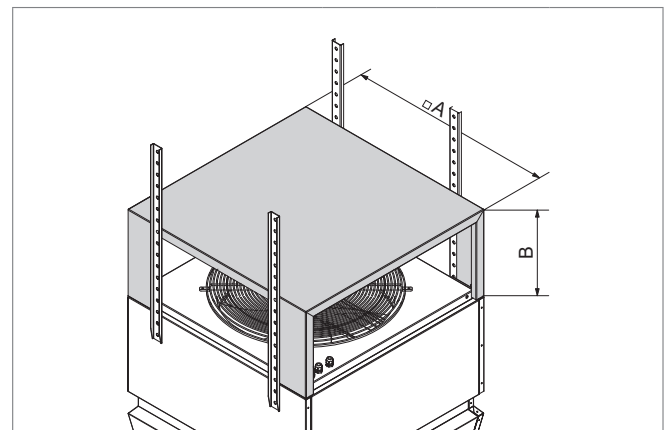
The use of a recirculation silencer for noise reduction is recommended mainly if the TopVent® units are installed under flat, hard ceilings (e.g. made of concrete or sheet steel). The recirculation silencer is mounted on the appliance and thus reduces the sound reflection from the ceiling. Insertion attenuation is 3 dB compared with the total sound power level of each TopVent® unit.

Mount the recirculation units as usual via the 4 fastening points in the heating cooling section (for example, using the optional suspension set).



#### Caution

Risk of injury from falling parts. The silencer cannot bear the weight of the appliance. Do not locate any suspension points on the silencer.



Size		6	9
A	mm	900	1100
B	mm	380	485
Weight	kg	15	20

Table D6: Recirculation silencer dimensions and weights

## 7 Condensate pump

TopVent® cooling units must be connected to a condensate drainage system. For applications in which connection to the waste water system is too expensive or not possible for structural reasons, a condensate pump can be provided. This is installed directly under the condensate drain connection; the supplied container is prepared for installation on the unit. It pumps the condensate through a flexible hose to a delivery head of 3 m, thus enabling discharge of the condensate

- through waste water pipes directly below the ceiling,
- onto the roof.

Flow rate (at 3 m delivery head)	l/h	max. 150
Tank capacity	l	max. 1.9
Dimensions (L x W x H)	mm	288 x 127 x 178
Weight	kg	2.4
Nominal voltage	V AC	230
Power consumption	kW	0.1
Current consumption	A	0.43

Table D7: Condensate pump technical data

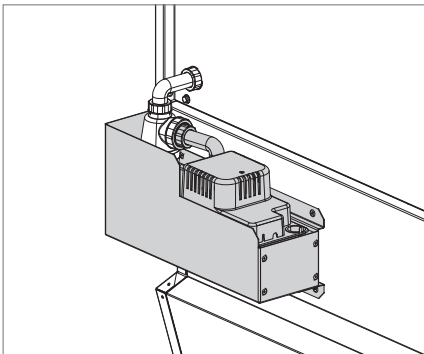


Fig. D2: Condensate pump





**Transport and installation**

1 Installation . . . . .	.64
2 Refrigeration system installation . . . . .	.68
3 Hydraulic installation . . . . .	.70
4 Electrical installation . . . . .	.70

# 1 Installation

## 1.1 Preparation

The scope of delivery includes:

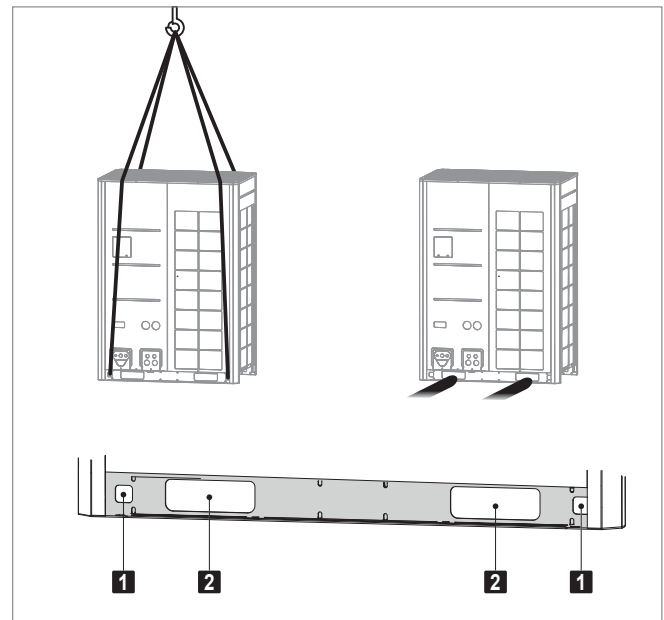
- TopVent® unit, including communication kit and EEV kit, supplied on pallet
- Heat pump
- Accessories (installation material, trap, temperature sensors)
- Optional components

### TopVent® unit

- Make sure that a lifting platform is available for installation.
- For the purposes of installation the unit is provided with 4 M10 rivet nuts with hexagon bolts and washers.
  - Fasten the unit to the ceiling by means of the optional suspension set or by means of flat iron bars, perforated bars, angles, steel cables or similar.
  - Do not use eyebolts.

### Heat pump

- Lifting the heat pump with a crane:
  - Lift the unit at 4 suspension points.
  - Use 2 straps at least 8 m in length.
  - Pass the straps through the openings at the bottom of the unit.
  - Use cloths or boards to protect the points where the unit comes into contact with the straps.
- Lifting the heat pump with a forklift:
  - Transport to the installation site: Lift the unit under the pallet.
  - Unloading from the pallet: Guide the forklift tines into the large rectangular openings under the device.



**1** Openings for straps


**2** Openings for forklift

Fig. E1: Lifting the heat pump

### 1.2 Positioning
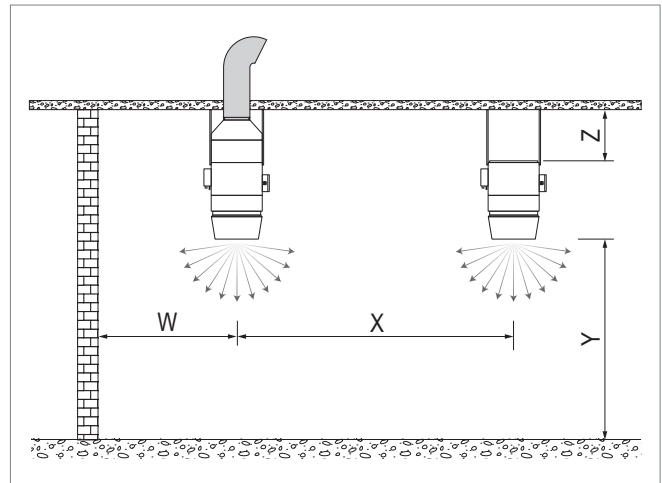
#### TopVent® unit

- Comply with the minimum and maximum distances.
- Only secure the unit to ceilings with sufficient load-bearing capacity.
- All air inlet and air outlet openings must be freely accessible. The supply air jet must be free to spread out unhindered.
- The access panels in the unit must be freely accessible.
- Clearance of at least 0.9 m is required for maintenance work around the heating/cooling section.
- Make sure that supply air units draw in fresh air via the fresh air duct:
  - Intake opening at approx. 1.5 m height above the roof
  - Not impaired by exhaust air openings, flues or the like



Unit type			TP-6	TP-9	MP-6	MP-9
Distance from ceiling Z	min.	m	0.3	0.4	0.3	0.4
	max. <sup>1)</sup>	m	Approx. 9...25			
Mounting height Y	min.	m	4	5	4	5
	<b>Applications with higher comfort requirements</b>					
■ Distance from wall W	max.	m	12	15	12	15
	min.	m	6	7	6	7
■ Unit clearance X	max.	m	23	31	23	31
	min.	m	12	14	12	14
<b>Applications with low comfort requirements</b>						
■ Distance from wall W	max.	m	15	20	–	–
	min.	m	6	7	–	–
■ Unit clearance X	max.	m	30	41	–	–
	min.	m	12	14	–	–

1) The maximum mounting height varies depending on the boundary conditions (for values, see table of heat outputs or calculation with the «HK-Select» selection program)

Table E1: Minimum and maximum distances

### Heat pump

- Place the heat pump as close as possible to the indoor climate unit, in a well ventilated location.



#### Notice

Excessively long refrigerant lines reduce the efficiency of the system. Place the heat pump as close as possible to the indoor climate unit.

- Note the following when choosing a location:
  - Not near a heat source with high temperature
  - Not in locations where dust or dirt can affect the heat exchangers
  - Not in locations with mineral oil vapours in the air
  - Not in locations with acidic or alkaline vapours in the air
  - Not in locations with a high salt content in the air
- Heat pump Q: Place the two single units as close to each other as possible.
  - The maximum length of the refrigerant pipes between the two single units is 10 m.

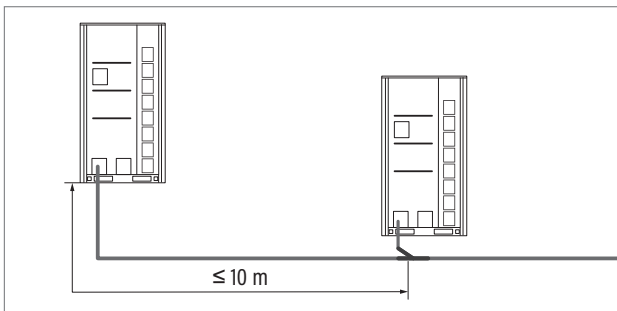


Fig. E2: Maximum length of the refrigerant pipes

- Observe the minimum distances for sufficient air flow through the heat pump.

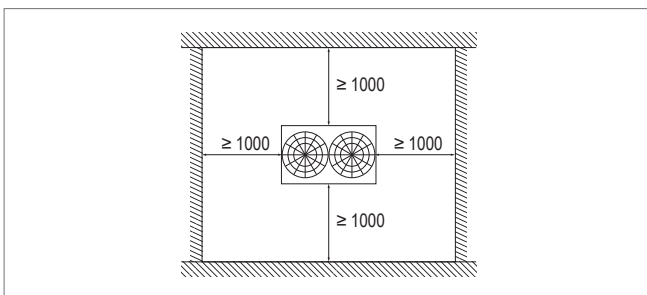


Fig. E3: Minimum distances for the heat pump P (dimensions in mm)

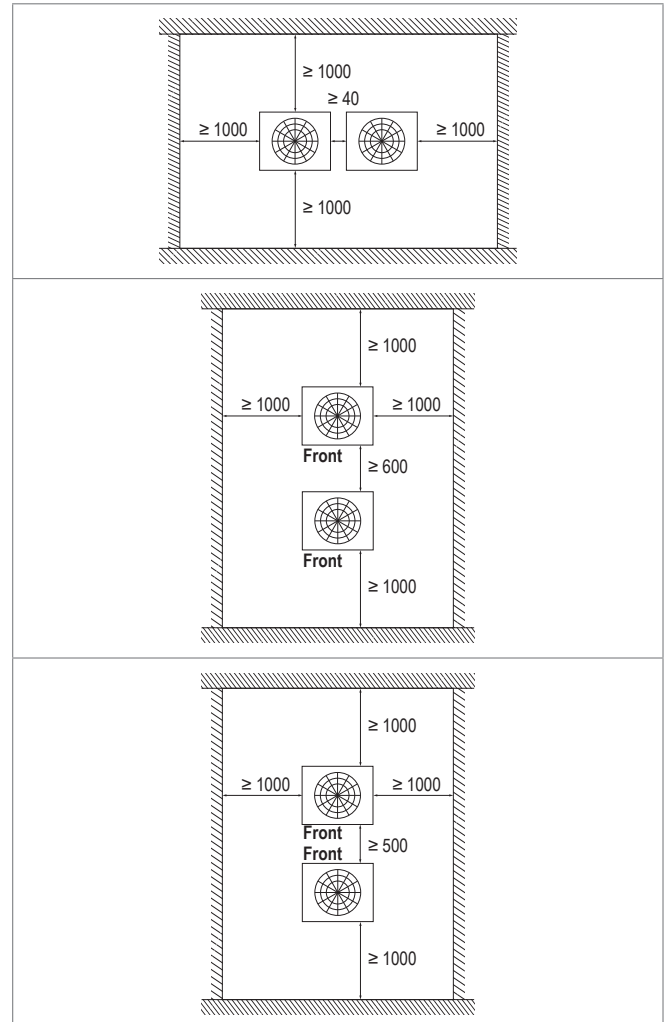


Fig. E4: Minimum distances for the heat pump Q (dimensions in mm)

- Place the heat pump on a solid base with sufficient load-bearing capacity to avoid vibrations and noise.
- Install the heat pump on a solid base or on support blocks made of concrete or steel:
  - The base must be at least 200 mm high to allow sufficient space for the installation of the refrigerant pipes.
  - The support blocks must be at least 100 mm wide and they must also support the unit in the centre.
  - The supporting surface must be flat and level (max. inclination  $\pm 0.2\%$ ). The support points must bear the weight evenly.
  - Water must be free to drain through the base plate of the heat pump.
- Align the heat pump in such a way that the front faces the prevailing wind direction.

- In areas with heavy snowfall:
  - Increase the base height to ensure that the unit operation is not affected by snow.
  - Remove the rear grille from the unit to prevent snow accumulation.


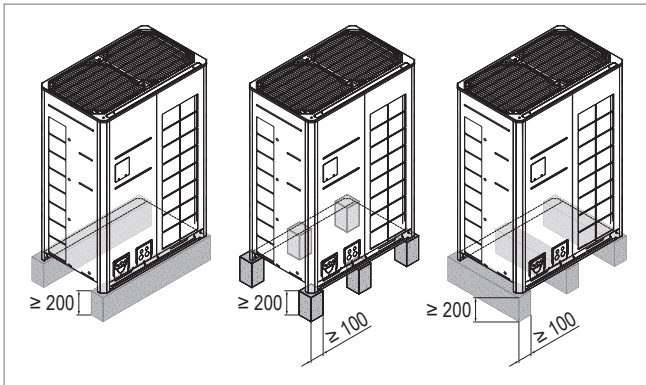


Fig. E5: Base for the heat pump

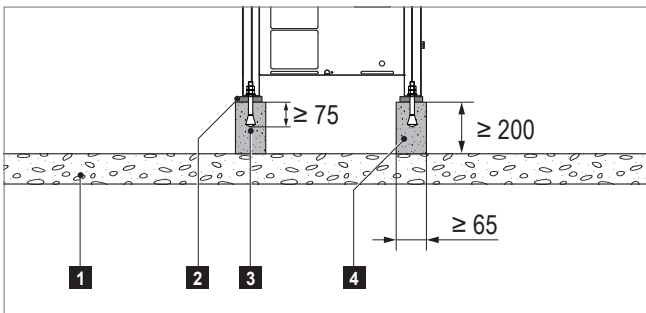

- 1 Firm ground
- 2 Vibration damper
- 3 Anchor bolt Ø 10 mm
- 4 Base made of concrete or steel

Fig. E6: Installing the heat pump

Heat pump	P	Q (2 single units)
A	1240	930
B	1040	730

Table E2: Position of the screw connections (dimensions in mm)

### 1.3 Unit installation

Proceed as follows to position the unit:

#### TopVent® unit

- Transport the unit to the installation site and rotate it to the correct position.
- Fasten the unit to the designated suspension points.
- Connect supply air units to a fresh air duct via a canvas connection and connect both flanges with an earth wire.

#### Heat pump

- Transport the heat pump to the installation site.
- Place the heat pump on the prepared frame.
- Mount the heat pump on the base using vibration dampers and 4 anchor bolts Ø 10 mm.

## 2 Refrigeration system installation

### 2.1 Refrigerant pipes

The refrigerant pipes must be installed by a qualified refrigeration technician in line with the local regulations.

To avoid damaging the unit:

- Do not use any flux.
- Ensure there is a nitrogen supply when soldering.
- Insulate the refrigerant pipes.
- Carry out a leak-tightness test and vacuum drying.

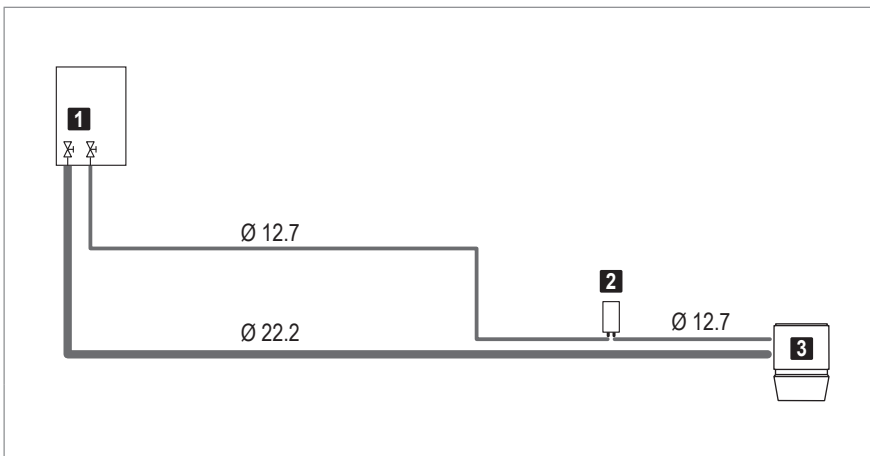


**Notice**

Excessively long refrigerant lines reduce the efficiency of the system. Place the heat pump as close as possible to the indoor climate unit.

- Install the refrigerant pipes as shown in Fig. E7 and Fig. E8 schematically according to the local conditions.
- The maximum length of the liquid line is 40 m.
- The maximum height difference between the heat pump and the indoor climate unit is  $\pm 30$  m.
- The maximum length between the two single units of heat pump Q is 10 m.


#### Refrigerant pipes for heat pump P



- 1** Connections on the heat pump
  - Liquid line . . . . .  $\varnothing$  12.7 mm
  - Gas line . . . . .  $\varnothing$  22.2 mm
- 2** EEV kit P, mounted on the indoor climate unit, connection  $\varnothing$  12.7 mm
- 3** Connections on heating/cooling coil:
  - Unit size 6:**
    - Liquid line . . . . .  $\varnothing$  12 mm
    - Gas line . . . . .  $\varnothing$  22 mm
  - Unit size 9:**
    - Liquid line . . . . .  $\varnothing$  12 mm
    - Gas line . . . . .  $\varnothing$  28 mm

Fig. E7: Refrigerant pipes for heat pump P (pipe diameters in mm)

#### Refrigerant pipes for heat pump Q

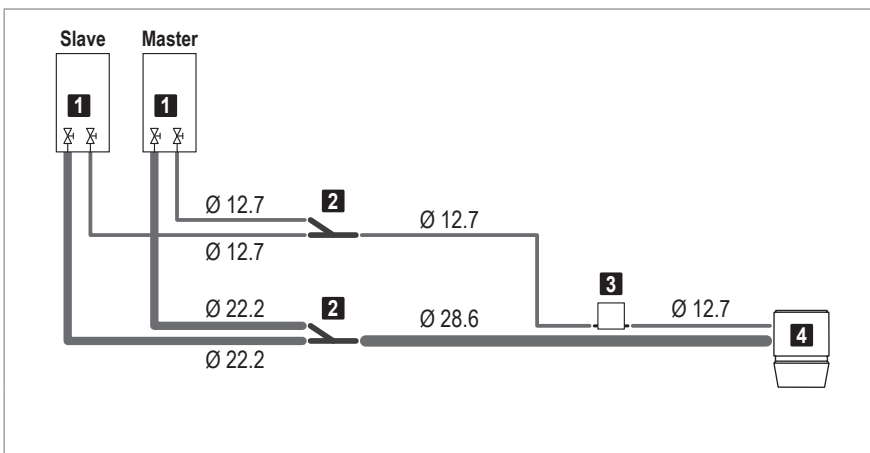

- 1** Connections on the heat pump
  - Liquid line . . . . .  $\varnothing$  12.7 mm
  - Gas line . . . . .  $\varnothing$  22.2 mm
- 2** Branch joint kit, supplied loose
- 3** EEV kit Q, supplied loose, connection  $\varnothing$  19.05 mm
- 4** Connections on heating/cooling coil:
  - Liquid line . . . . .  $\varnothing$  12 mm
  - Gas line . . . . .  $\varnothing$  28 mm

Fig. E8: Refrigerant pipes for heat pump Q (pipe diameters in mm)

- The thickness of the insulation depends on the pipe diameter. Minimum thicknesses are give in Table E3. Thicker insulation is required in hot, humid environments.

Ø	Minimum thickness <sup>1)</sup>	Material
12.7 mm	15 mm	Closed-cell foam, fire protection class B1, temperature-resistant up to 120 °C, outer insulation UV-resistant
22.2 mm	20 mm	
28.6 mm	20 mm	

<sup>1)</sup> Increase the thickness of the insulation in hot, humid environments (> 80% relative humidity).

Table E3: Insulation of the refrigerant pipes

- If the heat pump is placed lower than the main pipe: Install an oil return trap in the gas line.

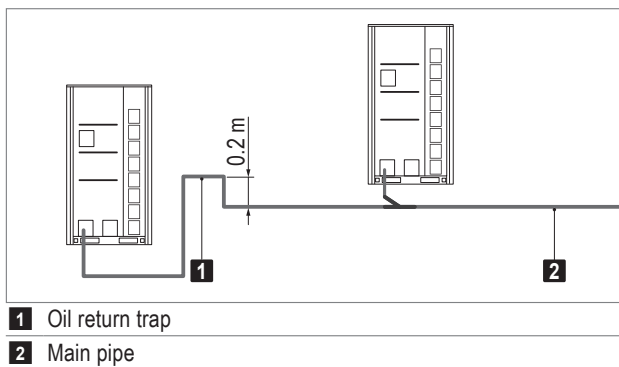


Fig. E9: Oil return trap

- Install the liquid temperature sensor and the gas temperature sensor as close as possible to the heating/cooling coil.

#### Heat pump Q

- The heat pump Q consists of 2 single units. Use the branch joint kit supplied for branching the pipeline.
  - Install the 2 Y branch joints as close as possible to the master unit.
  - The minimum straight pipe length without diameter changes before and after the two Y branch joints is 0.5 m.
  - Install the 2 Y branch joints horizontally so that the two branch pipes are in one plane.


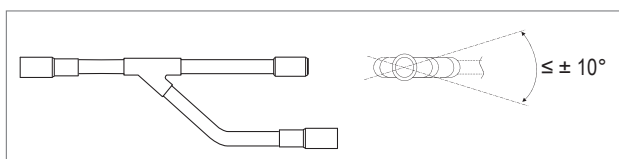


Fig. E10: Installation of the branch joint kit

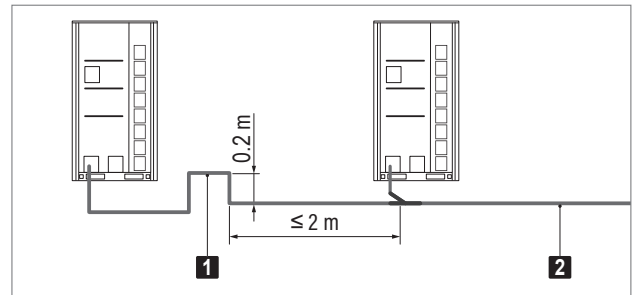- If the distance between the 2 single units is more than 2 m: Install an oil return trap in the gas line.



- 1 Oil return trap  
2 Gas line to the indoor climate unit

Fig. E11: Oil return trap

## 2.2 Calculation of the additional refrigerant fill

The heat pump is filled with R32 refrigerant at the factory. Depending on the length of the liquid line and depending on the size of the unit, refrigerant must also be topped up:

- 0.103 kg refrigerant per metre of liquid line length (from the heat pump to the heating/cooling coil)
- Heating/cooling coil top-up volume:

Unit size		6	9
Refrigerant	kg	2.1	3.7

Table E4: Top-up volume for the heating/cooling coil

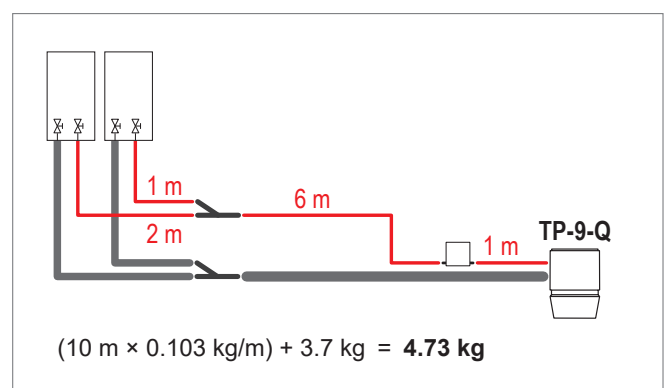


Fig. E12: Calculation example

### 3 Hydraulic installation

#### 3.1 Condensate connection

##### TopVent® unit

Condensate arising in cooling units must be removed via a condensate-proof line.

- Install and insulate the supplied trap on the condensate connection of the unit.
- Dimension the slope and cross-section of the condensate line so that no condensate backflow takes place.
- Make sure that the condensate produced is drained in compliance with local regulations.
- Route the condensate line from the pump directly upwards.



##### Notice

Use the «Condensate pump» option for quick and easy hydraulic installation.

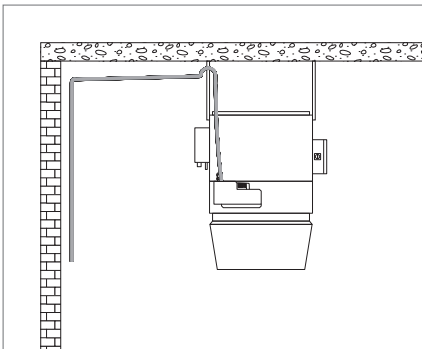


Fig. E13: Condensate line

##### Heat pump

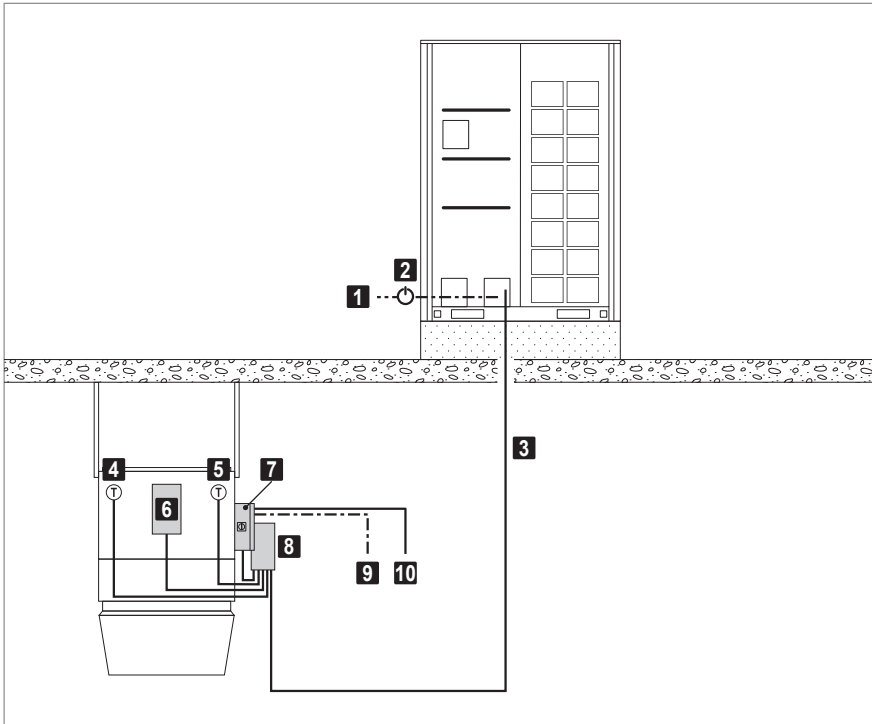
- Make sure that the heat pump is not damaged by pooling water or ice formation:
  - Make sure that water is free to drain through the bottom plate of the heat pump.

### 4 Electrical installation

- The electrical installation must only be carried out by a qualified electrician.
- Observe the relevant regulations (e.g. EN 60204-1).
- Choose the dimensions of the cable cross sections in line with the applicable regulations.
- Route signal and bus lines separately from mains cables.
- Make sure the lightning protection system for the units or for the entire building is planned and carried out by professionals.
- Provide overload protection equipment on site in the mains connection line of the zone control panel.
- Carry out the electrical installation according to the wiring diagram:
  - Power supply for TopVent® TP, MP
  - Power supply for heat pump with main switch in view of the heat pump
  - Zone bus based on system layout
  - Signal lines
- Connect the electrical components of the heat pump system.
- Connect optional components to the unit control box (condensate pump).




### 4.1 Electrical connection of the heat pump system



- 1 Power supply heat pump
- 2 Heat pump main switch (on-site)
- 3 Communication TopVent®
- 4 Liquid temperature sensor (supplied loose)
- 5 Gas temperature sensor (supplied loose)
- 6 EEV kit P
- 7 Unit control box
- 8 Communication kit PQ
- 9 Power supply TopVent®
- 10 Zone bus

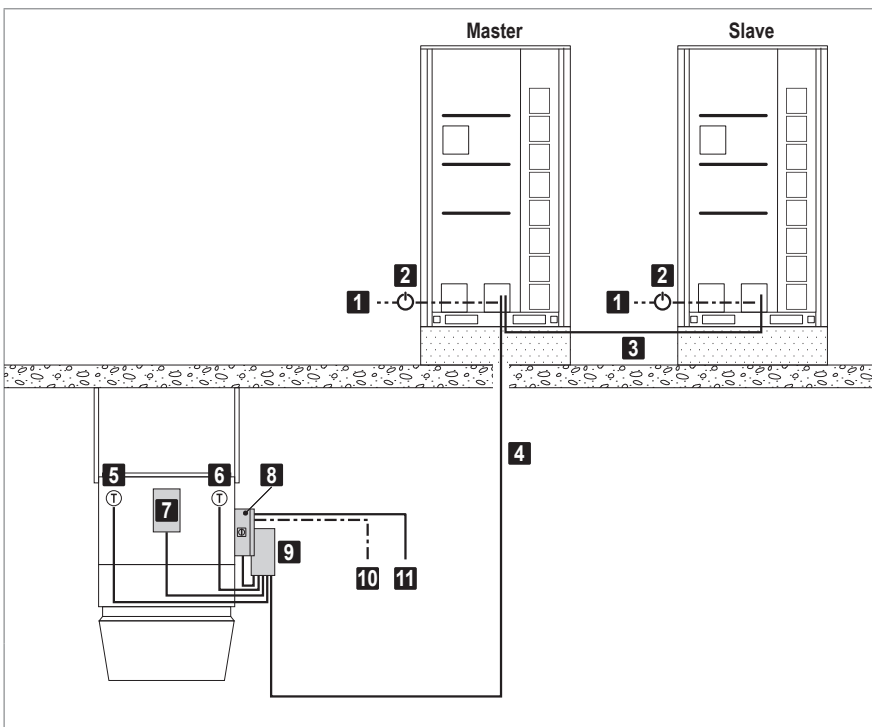Fig. E14: Electrical connection of the heat pump system for heat pump P



- 1 Power supply heat pump
- 2 Heat pump main switch (on-site)
- 3 Communication master-slave
- 4 Communication TopVent®
- 5 Liquid temperature sensor (supplied loose)
- 6 Gas temperature sensor (supplied loose)
- 7 EEV kit Q (supplied loose)
- 8 Unit control box
- 9 Communication kit PQ
- 10 Power supply TopVent®
- 11 Zone bus

Fig. E15: Electrical connection of the heat pump system for heat pump Q

72 4.2 Cable list for on-site connections – TopTronic® C System control

Component	Designation	Voltage	Cable	Comments	Start	Target	
<b>TopTronic® C System control</b>	Power supply	3 × 400 VAC	NYM-J 5 × ... mm <sup>2</sup>		On-site	Zone control panel	
		1 × 230 VAC	NYM-J 3 × ... mm <sup>2</sup>		On-site	Zone control panel	
Zone control panel	Zone bus		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 500 m	Zone control panel	Hoval units	
	System bus		Ethernet ≥ CAT 5	For connecting several zone control panels   max. 100 m	Zone control panel	Further zone control panel	
	Integration into the building management system		Ethernet ≥ CAT 5	BACnet, Modbus IP   max. 100 m	Zone control panel	On-site (BMS)	
			J-Y(ST)Y 2 × 2 × 0.8 mm	Modbus RTU   max. 1200 m	Zone control panel	On-site (BMS)	
	Room temperature sensor		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors	
	Additional room temperature sensors		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors	
	Combination sensor room air quality, temperature and humidity		J-Y(ST)Y 4 × 2 × 0.8 mm	max. 250 m	Zone control panel	Sensors	
	Fresh air temperature sensor		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors	
	Combination sensor fresh air temperature and humidity		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 250 m	Zone control panel	Sensors	
	Collective alarm	Volt-free max. 230 VAC max. 24 VDC	NYM-O 2 × 1.5 mm <sup>2</sup>	max. 3 A max. 2 A		Zone control panel	On-site
	Power supply for units	3 × 400 VAC	NYM-J 5 × 1.5 mm <sup>2</sup> (min.)	RoofVent® size 6 max. cable cross section 5 × 6 mm <sup>2</sup>	Zone control panel or on-site	Hoval units	
		3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	RoofVent® size 9 max. cable cross section 5 × 10 mm <sup>2</sup>			
		3 × 400 VAC	NYM-J 5 × 1.5 mm <sup>2</sup> (min.)	TopVent® max. cable cross section 5 × 6 mm <sup>2</sup>			
Power supply for heat pump	3 × 400 VAC	NYM-J 5 × 6.0 mm <sup>2</sup> (min.)	Heat pump P (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>	Zone control panel or on-site	Hoval heat pump		
	3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Heat pump Q – Master (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>				
	3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Heat pump Q – Slave (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>				
System operator terminal (if external)	24 VDC	NYM-J 3 × 1.5 mm <sup>2</sup>	Power supply 0.42 A   max. 50 m max. cable cross section 3 × 4 mm <sup>2</sup>	Zone control panel	System operator terminal		
		Ethernet ≥ CAT 5	Communication   max. 100 m	Zone control panel	System operator terminal		
Zone operator terminal (if external)	24 VAC	J-Y(ST)Y 4 × 2 × 0.8 mm	Power supply, 1 A fusing, max. 500 m	Zone control panel	Zone operator terminal		
External sensor values	0-10 VDC	J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	On-site	Zone control panel		
External set values	0-10 VDC	J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	On-site	Zone control panel		
Load shedding input <sup>1)</sup>	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	max. 1 A   max. 100 m	On-site	Zone control panel		
Operating selector switch on terminal (analogue)	0-10 VDC	J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	On-site (switch)	Zone control panel		
Operating selector switch on terminal (digital)	0-10 VDC	J-Y(ST)Y 6 × 2 × 0.8 mm	max. 100 m	On-site (switch)	Zone control panel		

Component	Designation	Voltage	Cable	Comments	Start	Target
	Operating selector button on terminal	24 VAC	J-Y(ST)Y 6 × 2 × 0.8 mm	max. 0.5 A   max. 100 m	On-site (button)	Zone control panel
	Forced off <sup>1)</sup>	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	max. 1 A   max. 100 m	On-site	Zone control panel
	Heating/cooling changeover <sup>1)</sup>	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	Signal external enabling/setting max. 1 A   max. 100 m	On-site	Zone control panel
<b>TopVent® unit</b>	Power supply	3 × 400 VAC	NYM-J 5 × 1.5 mm <sup>2</sup> (min.)	max. cable cross section 5 × 6 mm <sup>2</sup>	Zone control panel or on-site	TopVent® unit
	Zone bus		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 500 m	Zone control panel	TopVent® unit
	Forced off	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	for TopVent® MP max. 1 A   max. 100 m	On-site	TopVent® unit
<b>Heat pump</b>	Power supply	3 × 400 VAC	NYM-J 5 × 6.0 mm <sup>2</sup> (min.)	Heat pump P (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>	Zone control panel or on-site	Hoval heat pump
		3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Heat pump Q – Master (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>		
		3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Heat pump Q – Slave (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>		
	Communication TopVent®		J-Y(ST)Y 2 × 2 × 0.8 mm		TopVent® unit	Hoval heat pump
	Communication master–slave		J-Y(ST)Y 1 × 2 × 0.8 mm		Hoval heat pump	Hoval heat pump
<b>1) Use a relay to connect the signal to several zone controllers in parallel.</b>						

Table E5: Cable list for on-site connections – TopTronic® C System control

74 4.3 Cable list for on-site connections – TopTronic® C Single zone control panel

Component	Designation	Voltage	Cable	Comments	Start	Target	
<b>TopTronic® C Single zone control panel</b>	Power supply	1 × 230 VAC	NYM-J 3 × 1.5 mm <sup>2</sup>	max. cable cross section 3 × 6 mm <sup>2</sup>	On-site	Zone control panel	
	Zone bus		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 500 m	Zone control panel	Hoval units	
	Integration into the building management system			Ethernet ≥ CAT 5	BACnet, Modbus IP   max. 100 m	Zone control panel	On-site (BMS)
				J-Y(ST)Y 2 × 2 × 0.8 mm	Modbus RTU   max. 1200 m	Zone control panel	On-site (BMS)
	Room temperature sensor		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors	
	Additional room temperature sensors		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors	
	Combination sensor room air quality, temperature and humidity		J-Y(ST)Y 4 × 2 × 0.8 mm	max. 250 m	Zone control panel	Sensors	
	Fresh air temperature sensor		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors	
	Collective alarm	Volt-free max. 230 VAC		NYM-O 2 × 1.5 mm <sup>2</sup>	max. 13 A	Zone control panel	On-site
	External setpoint fresh air ratio	2-10 VDC		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	On-site	Zone control panel
	Operating selector switch on terminal (digital)	0-10 VDC		J-Y(ST)Y 6 × 2 × 0.8 mm	max. 100 m	On-site (switch)	Zone control panel
	Operating selector button on terminal	24 VDC		J-Y(ST)Y 6 × 2 × 0.8 mm	max. 0.5 A   max. 100 m	On-site (button)	Zone control panel
	Forced off	24 VDC		NYM-O 2 × 1.5 mm <sup>2</sup>	max. 0.5 A   max. 100 m	On-site	Zone control panel
Heating/cooling changeover	24 VDC		NYM-O 2 × 1.5 mm <sup>2</sup>	Signal external enabling/setting max. 0.5 A   max. 100 m	On-site	Zone control panel	
<b>TopVent® unit</b>	Power supply	3 × 400 VAC	NYM-J 5 × 1.5 mm <sup>2</sup> (min.)	max. cable cross section 5 × 6 mm <sup>2</sup>	On-site	TopVent® unit	
	Zone bus		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 500 m	Zone control panel	TopVent® unit	
	Forced off	24 VAC		NYM-O 2 × 1.5 mm <sup>2</sup> for TopVent® MP max. 1 A   max. 100 m	On-site	TopVent® unit	
<b>Heat pump</b>	Power supply	3 × 400 VAC	NYM-J 5 × 6.0 mm <sup>2</sup> (min.)	Heat pump P (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>	On-site	Hoval heat pump	
		3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Heat pump Q – Master (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>			
		3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Heat pump Q – Slave (for 100 m length) max. cable cross section 5 × 16 mm <sup>2</sup>			
	Communication TopVent®		J-Y(ST)Y 2 × 2 × 0.8 mm		TopVent® unit	Hoval heat pump	
	Communication master-slave		J-Y(ST)Y 1 × 2 × 0.8 mm		Hoval heat pump	Hoval heat pump	

Table E6: Cable list for on-site connections – TopTronic® C Single zone control panel



---

**System design**

1 Design example. . . . .76

2 Maintenance schedule . . . . .78

3 Checklist for project discussions . . . . .79



F

# 1 Design example



**Notice**

Use the «HK-Select» program to design Hoval Indoor Climate Systems. You can download it free of charge on the Internet.

## 1.1 Applications with higher comfort requirements (e.g. production halls, assembly halls, sports halls)

Design data	Example
<ul style="list-style-type: none"> <li>■ Geometry of the room</li> <li>■ Internal heat gains</li> <li>■ People in the room</li> <li>■ Heating and cooling with decentralised heat pump</li> <li>■ Improvement of air quality, fresh air supply for the people in the room (fresh air volume per person = 30 m³/h)</li> </ul>	<p>50 × 60 × 12 m 28 kW 20 people</p>
<p>Design conditions heating:</p> <ul style="list-style-type: none"> <li>■ Fabric heat losses</li> <li>■ Fresh air temperature</li> <li>■ Room temperature</li> <li>■ Extract air temperature</li> </ul>	<p>350 kW - 15 °C 18 °C 20 °C</p>
<p>Design conditions cooling:</p> <ul style="list-style-type: none"> <li>■ Transmission sensible gains</li> <li>■ Fresh air conditions</li> <li>■ Room air conditions</li> <li>■ Extract air temperature</li> </ul>	<p>140 kW 32 °C / 40 %rh 26 °C / 40 %rh 28 °C</p>
<p><b>Fresh air supply</b></p> <ul style="list-style-type: none"> <li>■ Required fresh air volume in total:</li> <li>■ Fresh air ratio of supply air units: max. 10 % of the nominal air flow rate</li> </ul> <p style="background-color: #e0e0e0; padding: 2px;"><i>The fresh air ratio can be adjusted from 0...100 %. Where EU Regulation 1253/2014 applies, it must be restricted to max. 10 % in the design conditions.</i></p> <ul style="list-style-type: none"> <li>■ Calculate the required number of supply air units from the nominal air flow rate.</li> </ul>	<p>20 × 30 = 600 m³/h</p> <p>Size 6: max. 600 m³/h fresh air Size 9: max. 900 m³/h fresh air</p> <p>→ <b>1 TopVent® MP unit</b></p>
<p><b>Mounting height</b></p> <ul style="list-style-type: none"> <li>■ Calculate the actual mounting height (= distance between the floor and the bottom edge of the units).</li> </ul> <p style="background-color: #e0e0e0; padding: 2px;"><math>Y = \text{Hall height} - \text{distance from ceiling} - \text{unit height}</math></p> <ul style="list-style-type: none"> <li>■ Compare the actual mounting height with the minimum and maximum mounting height (see Table E1 on page 65 and HK-Select).</li> </ul>	<p><u>Supply air units:</u> Size 6 → OK Size 9 → OK</p> <p><u>Recirculation units:</u> Size 6 → OK Size 9 → OK</p>

<b>Required performance for covering fabric heat losses</b>																																																																					
<ul style="list-style-type: none"> <li>Required heat output for coverage of fabric heat losses in total:  <math>Q_{H\_req} = \text{Fabric heat losses} - \text{internal heat loads}</math> </li> </ul>	350 – 28 = 322 kW																																																																				
<ul style="list-style-type: none"> <li>Required cooling capacity for coverage of transmission sensible gains in total:  <math>Q_{C\_req} = \text{Transmission sensible gains} + \text{internal heat loads}</math> </li> </ul>	140 + 28 = 168 kW																																																																				
<b>Required heat output of recirculation units</b>																																																																					
<ul style="list-style-type: none"> <li>Determine the required heat output of the recirculation units based on the output of the supply air unit.  <math>Q_{H\_Recirculation} = Q_{H\_req} - Q_{H\_Supply\ air}</math> </li> </ul> <p><i>For the supply air unit, take into account only the share of capacity that is used for coverage of fabric heat losses (separately shown in HK-Select).</i></p>	<table border="1"> <thead> <tr> <th>Type</th> <th><math>Q_{H\_Supply\ air}</math></th> <th><math>Q_{H\_Recirculation}</math></th> </tr> </thead> <tbody> <tr> <td>MP-6-P</td> <td>34.9</td> <td>322 – 34.9 = 287.1</td> </tr> <tr> <td>MP-9-P</td> <td>31.6</td> <td>322 – 31.6 = 290.4</td> </tr> <tr> <td>MP-9-Q</td> <td>61.2</td> <td>322 – 61.2 = 260.8</td> </tr> </tbody> </table> <p>(values in kW)</p>	Type	$Q_{H\_Supply\ air}$	$Q_{H\_Recirculation}$	MP-6-P	34.9	322 – 34.9 = 287.1	MP-9-P	31.6	322 – 31.6 = 290.4	MP-9-Q	61.2	322 – 61.2 = 260.8																																																								
Type	$Q_{H\_Supply\ air}$	$Q_{H\_Recirculation}$																																																																			
MP-6-P	34.9	322 – 34.9 = 287.1																																																																			
MP-9-P	31.6	322 – 31.6 = 290.4																																																																			
MP-9-Q	61.2	322 – 61.2 = 260.8																																																																			
<b>Required cooling capacity of recirculation units</b>																																																																					
<ul style="list-style-type: none"> <li>Determine the required cooling capacity of the recirculation units based on the capacity of the supply air unit.  <math>Q_{C\_Recirculation} = Q_{C\_req} - Q_{C\_Supply\ air}</math> </li> </ul> <p><i>For the supply air unit, take into account only the share of capacity that is used for coverage of transmission sensible gains (separately shown in HK-Select).</i></p>	<table border="1"> <thead> <tr> <th>Type</th> <th><math>Q_{C\_Supply\ air}</math></th> <th><math>Q_{C\_Recirculation}</math></th> </tr> </thead> <tbody> <tr> <td>MP-6-P</td> <td>28.5</td> <td>168 – 28.5 = 139.5</td> </tr> <tr> <td>MP-9-P</td> <td>28.0</td> <td>168 – 28.0 = 140.0</td> </tr> <tr> <td>MP-9-Q</td> <td>49.2</td> <td>168 – 49.2 = 118.8</td> </tr> </tbody> </table> <p>(values in kW)</p>	Type	$Q_{C\_Supply\ air}$	$Q_{C\_Recirculation}$	MP-6-P	28.5	168 – 28.5 = 139.5	MP-9-P	28.0	168 – 28.0 = 140.0	MP-9-Q	49.2	168 – 49.2 = 118.8																																																								
Type	$Q_{C\_Supply\ air}$	$Q_{C\_Recirculation}$																																																																			
MP-6-P	28.5	168 – 28.5 = 139.5																																																																			
MP-9-P	28.0	168 – 28.0 = 140.0																																																																			
MP-9-Q	49.2	168 – 49.2 = 118.8																																																																			
<b>Minimum number of recirculation units</b>																																																																					
<ul style="list-style-type: none"> <li>Determine the minimum number of recirculation units depending on the available supply air units. Take into account the following criteria: <ul style="list-style-type: none"> <li>Floor area covered</li> <li>Heat output</li> <li>Cooling capacity</li> <li>Unit clearances</li> </ul> </li> </ul>																																																																					
<table border="1"> <thead> <tr> <th rowspan="2">Supply air unit</th> <th rowspan="2">Recirculation units</th> <th colspan="4">Required number of recirculation units</th> <th rowspan="2">Minimum number of recirculation units</th> </tr> <tr> <th>Floor area covered</th> <th>Heat output</th> <th>Cooling capacity</th> <th>Unit clearances</th> </tr> </thead> <tbody> <tr> <td rowspan="3">1 unit MP-6-P</td> <td>TP-6-P</td> <td>5</td> <td>7</td> <td>5</td> <td>5</td> <td>7</td> </tr> <tr> <td>TP-9-P</td> <td>5</td> <td>7</td> <td>5</td> <td>5</td> <td>7</td> </tr> <tr> <td>TP-9-Q</td> <td>3</td> <td>5</td> <td>3</td> <td>5</td> <td>5</td> </tr> <tr> <td rowspan="3">1 unit MP-9-P</td> <td>TP-6-P</td> <td>4</td> <td>8</td> <td>5</td> <td>5</td> <td>8</td> </tr> <tr> <td>TP-9-P</td> <td>4</td> <td>8</td> <td>5</td> <td>3</td> <td>8</td> </tr> <tr> <td>TP-9-Q</td> <td>3</td> <td>5</td> <td>3</td> <td>3</td> <td>5</td> </tr> <tr> <td rowspan="3">1 unit MP-9-Q</td> <td>TP-6-P</td> <td>4</td> <td>7</td> <td>5</td> <td>5</td> <td>7</td> </tr> <tr> <td>TP-9-P</td> <td>4</td> <td>7</td> <td>5</td> <td>3</td> <td>7</td> </tr> <tr> <td>TP-9-Q</td> <td>4</td> <td>4</td> <td>3</td> <td>3</td> <td>4</td> </tr> </tbody> </table>	Supply air unit	Recirculation units	Required number of recirculation units				Minimum number of recirculation units	Floor area covered	Heat output	Cooling capacity	Unit clearances	1 unit MP-6-P	TP-6-P	5	7	5	5	7	TP-9-P	5	7	5	5	7	TP-9-Q	3	5	3	5	5	1 unit MP-9-P	TP-6-P	4	8	5	5	8	TP-9-P	4	8	5	3	8	TP-9-Q	3	5	3	3	5	1 unit MP-9-Q	TP-6-P	4	7	5	5	7	TP-9-P	4	7	5	3	7	TP-9-Q	4	4	3	3	4	
Supply air unit			Recirculation units	Required number of recirculation units				Minimum number of recirculation units																																																													
	Floor area covered	Heat output		Cooling capacity	Unit clearances																																																																
1 unit MP-6-P	TP-6-P	5	7	5	5	7																																																															
	TP-9-P	5	7	5	5	7																																																															
	TP-9-Q	3	5	3	5	5																																																															
1 unit MP-9-P	TP-6-P	4	8	5	5	8																																																															
	TP-9-P	4	8	5	3	8																																																															
	TP-9-Q	3	5	3	3	5																																																															
1 unit MP-9-Q	TP-6-P	4	7	5	5	7																																																															
	TP-9-P	4	7	5	3	7																																																															
	TP-9-Q	4	4	3	3	4																																																															
<ul style="list-style-type: none"> <li>Choose the final solution from the remaining possibilities, depending on the geometry of the hall and the costs.</li> </ul>																																																																					

1.2 Applications with low comfort requirements  
(e.g. warehouses, logistics centres)

Design data	Example																								
<ul style="list-style-type: none"> <li>■ Geometry of the room</li> <li>■ Heating and cooling with decentralised heat pump</li> </ul>	181 × 105 × 12 m																								
Design conditions heating: <ul style="list-style-type: none"> <li>■ Fabric heat losses</li> <li>■ Fresh air temperature</li> <li>■ Room temperature</li> <li>■ Extract air temperature</li> </ul>	892 kW - 15 °C 15 °C 18 °C																								
Design conditions cooling: <ul style="list-style-type: none"> <li>■ Transmission sensible gains</li> <li>■ Fresh air conditions</li> <li>■ Room air conditions</li> <li>■ Extract air temperature</li> </ul>	923 kW 32 °C / 40 %rh 26 °C / 40 %rh 28 °C																								
<b>Mounting height</b> <ul style="list-style-type: none"> <li>■ Calculate the actual mounting height (= distance between the floor and the bottom edge of the units). <math>Y = \text{Hall height} - \text{distance from ceiling} - \text{unit height}</math></li> <li>■ Compare the actual mounting height with the minimum and maximum mounting height (see Table E1 on page 65 and HK-Select).</li> </ul>	Recirculation units: Size 6 → OK Size 9 → OK																								
<b>Required number of recirculation units</b> <ul style="list-style-type: none"> <li>■ Determine the required number of recirculation units based on the heat output. <math>n = \text{Fabric heat losses} : \text{heat output per unit}</math></li> <li>■ Determine the required number of recirculation units based on the cooling capacity. <math>n = \text{Transmission sensible gains} : \text{cooling capacity per unit}</math></li> <li>■ Choose the final solution from the remaining possibilities, depending on the geometry of the hall and the costs.</li> </ul>	<table border="1"> <thead> <tr> <th>Type</th> <th>kW</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>TP-6-P</td> <td>892 : 41.6</td> <td>22</td> </tr> <tr> <td>TP-9-P</td> <td>892 : 41.6</td> <td>22</td> </tr> <tr> <td>TP-9-Q</td> <td>892 : 71.2</td> <td>13</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Type</th> <th>kW</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>TP-6-P</td> <td>923 : 29.6</td> <td>32</td> </tr> <tr> <td>TP-9-P</td> <td>923 : 29.6</td> <td>32</td> </tr> <tr> <td>TP-9-Q</td> <td>923 : 50.8</td> <td>19</td> </tr> </tbody> </table>	Type	kW	Quantity	TP-6-P	892 : 41.6	22	TP-9-P	892 : 41.6	22	TP-9-Q	892 : 71.2	13	Type	kW	Quantity	TP-6-P	923 : 29.6	32	TP-9-P	923 : 29.6	32	TP-9-Q	923 : 50.8	19
Type	kW	Quantity																							
TP-6-P	892 : 41.6	22																							
TP-9-P	892 : 41.6	22																							
TP-9-Q	892 : 71.2	13																							
Type	kW	Quantity																							
TP-6-P	923 : 29.6	32																							
TP-9-P	923 : 29.6	32																							
TP-9-Q	923 : 50.8	19																							

2 Maintenance schedule

Activity	Interval
Renew air filter	When the filter alarm is displayed, at least annually
Comprehensively checking function; cleaning and possibly repairing the TopVent® unit and the heat pump	Annually by Hoval customer service

Table F1: Maintenance schedule



Project

Project No.

Date

Name

Function

Address

Tel.

Fax

E-mail

**Information about the hall**

Application

Type

Insulation

Length

Width

Height

Is the roof strong enough?

yes  no

Are there window areas?

yes  no

Percentage?

Is there a crane?

yes  no

Height?

Is there enough space for installation and servicing?

yes  no

Are there any voluminous installations or machines?

yes  no

Are pollutants present?

yes  no

Which?

– If yes, are they heavier than air?

yes  no

Is oil contained in the extract air?

yes  no

Is dust present?

yes  no

Dust level?

Is there high humidity?

yes  no

How much?

Are local machine extractions required?

yes  no

Are any conditions imposed by public authorities?

yes  no

Which?

Are sound level requirements to be fulfilled?

yes  no

Which?

### Design data

Internal heat gains (machines, ...)  kW

Heating and cooling

Unit size

Control zones

### Design conditions heating

■ Standard outside temperature  °C

■ Room temperature  °C

■ Extract air temperature  °C

■ Fabric heat losses  kW

### Design conditions cooling

■ Standard outside temperature  °C

■ Room temperature and humidity  °C  %

■ Extract air temperature  °C

■ Transmission sensible gains  kW

### Further information



**Hoval quality.**  
You can count on us.

Hoval is one of the leading international companies for heating and indoor climate solutions. Drawing on more than 75 years of experience and benefiting from a close-knit team culture, the Hoval Group delivers exciting solutions and develops technically superior products. This leadership role requires a sense of responsibility for energy and the environment, which is expressed in an intelligent combination of different heating technologies and customised indoor climate solutions.

Hoval also provides personal consultations and comprehensive customer service. With around 2500 employees in 15 companies around the world, Hoval sees itself not as a conglomerate, but as a large family that thinks and acts globally.

Hoval heating and indoor climate solutions are currently exported to more than 50 countries.

## Responsibility for energy and environment

### United Kingdom

Hoval Ltd.  
Northgate, Newark  
Nottinghamshire  
NG24 1JN  
[hoval.co.uk](http://hoval.co.uk)

Your Hoval partner